


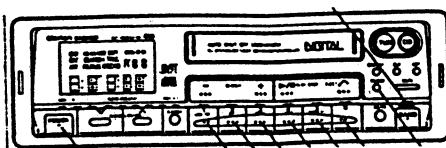

CLAR-00450

**\*SPECIFICATIONS****GENERAL**POWER SUPPLY VOLTAGE:  
14.4V DCPOWER CONSUMPTION:  
LESS THAN 3A**DAT**MODEL: ROTATING HEAD TYPE  
DIGITAL AUDIO TYPENUMBER OF CHANNELS:  
2, STEREO PLAYBACK**TAPE SPEED:**

8.15mm/S

NUMBER OF QUANTIZATION BITS:  
16, LINEARSAMPLING FREQUENCY:  
48kHz, 44.1kHz or  
32kHzFREQUENCY RESPONSE:  
20-20,000HzS/N RATIO:  
92dB OR GREATERDYNAMIC RANGE:  
90dB OR GREATERWOW & FLUTTER:  
BELOW MEASURABLE  
LIMITS**FM(UKW)**FREQUENCY RANGE:  
87.5 TO 107.9MHzUSABLE SENSITIVITY:  
12dBf50dB QUIETING SENSITIVITY:  
17dBfFREQUENCY RESPONSE:  
30 Hz TO 15kHz**AM(MW)**FREQUENCY RANGE:  
531 TO 1,602kHzUSABLE SENSITIVITY:  
20 uV**AUDIO**LINE LEVEL OUTPUT  
2.0V (0dB;1kHz)**DIMENSIONS**

178mm(W)x50mm(H)x150mm(D)

**WEIGHT**

1.7kg

**DAT COMBINATION WITH  
CD CHANGER CONTROL  
Model DAC8100 (PE-5533B)**

**\*COMPONENTS:**

DAC8100(PE-5533B-A)	1
MAIN UNIT	1
CTE-001-101 DEMO-TAPE	1
300-6954-00 MOUNTING BRACKET	1
300-7110-00 MOUNTING BRACKET	1
854-1559-00 EXT.LEAD(ACC)	1
854-1652-00 EXT.LEAD(RCA to DIN)	1
921-8701-00 PARTS BAG	1
330-8216-01 HOOK PLATE	2
345-3653-01 SPACER	1
345-6899-00 CUSHION RUBBER	2
700-5016-80 TAP SCREW	1
716-0726-01 SCREW	1
722-0314-00 NUT	1
725-0216-00 PLATE NUT	1
922-2141-00 PARTS BAG	1
370-3981-00 ESCUTCHEON	1


**\*FEATURES**

PLL SYNTHESIZER TUNER  
SEEK/PRESET/MANUAL TUNING  
PRESET SIGNAL SCAN(PS)  
AUTO STORE(AS)  
AUTO RETUNE(ART)  
FULL LOGIC CONTROL MECHANISM  
POWER LOADING/POWER EJECT  
ELECTRONIC CONTROLS  
(VOLUME/BASS/TREB/BAL/FAD)  
CD CHANGER CONTROL  
CATS PERSONAL CODE  
DEW DETECTION FUNCTION

## ■ AUDIO MODE DISPLAY (The A. MODE selector is used)


VOLUME Mode		Number of indicators lighted will increase or decrease. (MIN, MAX)	
BASS Mode		When the center section is lighted "flat" (normal) tone has been selected. (MIN, MAX)	
TREBLE Mode		"Beep" sound with each step.	
BALANCE Mode		When the center section is lighted the center position (right/left) has been selected. L (LEFT) R (RIGHT)	
FADER Mode		When the center section is lighted the center position (front/back) has been selected. R (REAR) F (FRONT)	
MUTING Mode		The lighted indicator sections will flash (all audio modes).	"Beep" sounds when button is pressed.

## 4.2 DAT MODE

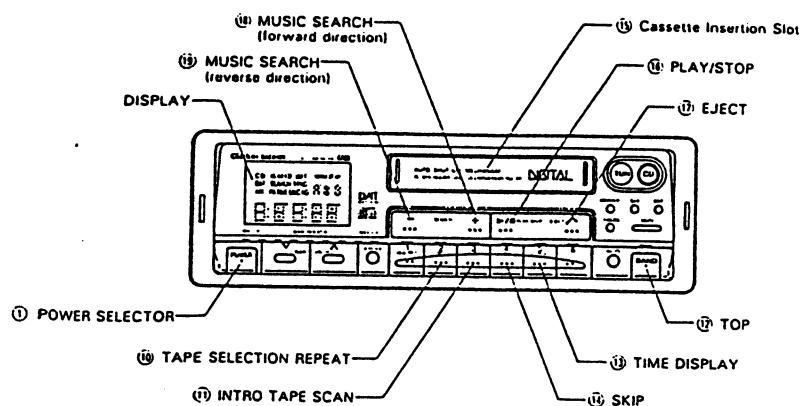


### ■ PLAY/STOP


- Press ⑧ (PLAY/STOP) to turn on power. The display will indicate "NO PACK."

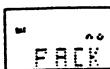

Insert a DAT tape correctly into ⑦ (Cassette Insertion Slot); the display will indicate "LOAD," "PLAY," and after a few seconds the P. Time indicator will appear and the tape will begin playback.

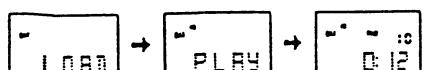


### • Explanation of P. Time (Program Time) indicator:

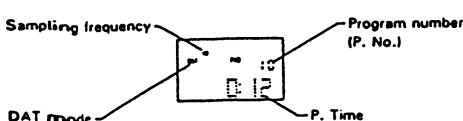


The display shown at left indicates that the program number selected is number ten. P. Time here indicates that the tape is being delayed back twelve seconds into the beginning of the tenth program.

- Press ⑪ (TIME DISPLAY) to switch between P. Time and A. Time (Absolutely Time).

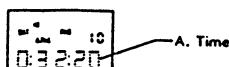

A. Time here indicates that the tape is being played back at a point thirty-two minutes and twenty seconds from the beginning of the tape.

- To stop playback, press ⑧ (PLAY/STOP). Press the button again to recommence playback.

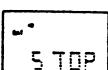

- When ① (POWER SELECTOR) is pressed, the power will be turned OFF.

**NOTE:** The P.Time, A.Time, and P.No. indicators may not be displayed depending on the recorder and method of recording employed. For details, please read the section "THE DIGITAL AUDIO TAPE" (pages 21, 22, 23).

- If the unit's power is turned off when it is in the PLAY mode:

When ① is pressed, the unit's power will turn on and the playback mode will begin. Playback will also recommence if the car's ignition switch is turned to OFF and then ON again.

If a tape cassette is inserted incorrectly, it will be temporarily pulled into the unit, but several seconds later it will be ejected again. If you insert a tape cassette incorrectly, do not attempt to pull it out forcefully; wait a few seconds until it is ejected.


### ■ EJECT

- To remove a DAT tape, press ⑨ (EJECT); the tape will be ejected.
- Even if the power is turned off while a tape is inserted, the DAC8100 will eject the tape if ⑨ is pressed. (Backup eject function).

### ■ MUSIC SEARCH (forward direction)

- The music search function allows you to go directly to any program on a tape, located up to 99 programs away in either direction.


- When ⑬ (forward direction MUSIC SEARCH) is pressed, the tape will be forwarded to the next program on the tape. If the button is held depressed, the search numbers will be incremented sequentially, and when the number reaches "99" or the button is released, the search function will begin.
- When the unit is in the play mode shown in the illustration below and ⑬ is pressed three times, the display will change to that shown, and the unit will begin playback at the designated program.

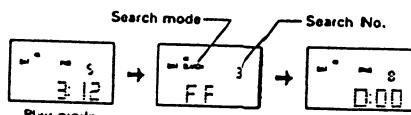

- If the tape reaches its end during the use of the search function, the search function will be cancelled and the tape will be automatically rewound; play will then automatically begin again from the tape's beginning.
- If an attempt is made to begin the search function during the stop or eject modes, the search function command will not be accepted.
- The search control button will respond, however, during operation of the INTRO TAPE SCAN function. In this case, the INTRO TAPE SCAN function will be automatically cancelled.

### ■ MUSIC SEARCH (reverse direction)

- When ⑭ (reverse direction MUSIC SEARCH) is pressed during the playback of a program, the tape will be reversed to the beginning of that program and playback will be recommenced from that point. To reverse the tape to the beginning of the program immediately preceding the presently playing program, press the search button twice. If the button is held depressed, the search numbers will be decremented sequentially, and when the search number reaches "-99" or the button is released, the search function will begin operation.
- When the unit is in the play mode shown in the accompanying illustration and ⑭ is pressed three times, the display will change to that shown, and the unit will begin playback at the designated program.

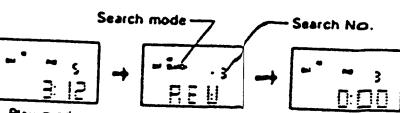


- If the tape reaches its beginning during the use of the search function, the search function will be cancelled and playback will then automatically begin again from the tape's beginning.
- If an attempt is made to begin the search function during the stop or eject modes, the search function command will not be accepted.
- The search control button will respond, however, during operation of the INTRO TAPE SCAN function. In this case, the INTRO TAPE SCAN function will be automatically cancelled.

**NOTE:** The music search function will not operate if no "start ID" subcode has been recorded on the tape.


#### ■ TOP

- If ⑪ (TOP) is pressed, whatever function is currently operating will be cancelled, the tape will be automatically rewound to the tape start position (at 150x speed), and playback will begin from that point. When the tape start position is reached, an electronic tone will be produced.
- When the unit is in the play mode shown in the accompanying illustration and ⑫ is pressed, the display will change to that shown, and the unit will begin playback.

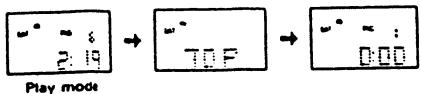

#### ■ INTRO TAPE SCAN

- When ⑬ (INTRO TAPE SCAN) is pressed, the indicator above ⑭ will light, and the tape will be automatically forwarded to the next program, where playback will begin. After playing back the first eight seconds or so of the program, the tape will be automatically forwarded to the next program in order, where about eight seconds of that program will be played. This operation will be repeated until the end of the tape is reached. At that point the tape will be automatically rewound to its beginning, where the scan operation will recommence.
- When the unit is in the play mode shown in the accompanying illustration and ⑭ is pressed, the display will change to that shown, and the scan operation will begin.

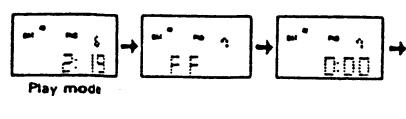

- If the end of a tape is reached during operation of the scan function, the unit will return to the first program on the tape and continue the scan operation from that point.
- To cancel the scan function, press ⑮ or ⑯.
- During operation of the scan function, ⑭ and ⑯ may be pressed to begin the search operation; in this case, the scan function will be automatically cancelled.

**NOTE:** The INTRO TAPE SCAN function will not operate if no "start ID" subcode has been recorded on the tape.

#### ■ TAPE SELECTION REPEAT

- When ⑰ (TAPE SELECTION REPEAT) is pressed, the currently playing program will be played back repeatedly.
- When the repeat function selected, the indicator above ⑯ will light.
- During operation of the music search function, ⑯ will not respond.
- The repeat function will continue operating until it is cancelled manually.
- To cancel the repeat function, press either ⑮ or ⑯.

**NOTE:** The TAPE SELECTION REPEAT function will not operate if no "start ID" subcode has been recorded on the tape.

#### ■ SKIP


When ⑯ (SKIP) is pressed, the SKIP indicator will light; if the tape being played back has been recorded with "skip ID" subcodes, whenever a "skip ID" is detected the tape will be forwarded to the beginning of the next program (in other words, to the beginning of the next "start ID" subcode), where playback will recommence. If ⑯ is pressed again, the skip function will be cancelled and the SKIP indicator will turn off.

#### ■ AUTO ALL-REPEAT FUNCTION


During tape playback, when the tape end or lead out is detected, the tape will be automatically rewound to its beginning and playback will recommence. During tape rewind the TOP indicator will be displayed.

#### ■ NON-RECORDED INTERVAL DETECTION DISPLAY

If an attempt is made to play back a tape (or part thereof) which has no signal recorded, the display will change to that shown in the accompanying illustration.

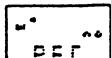


### 4.3 TUNER MODE

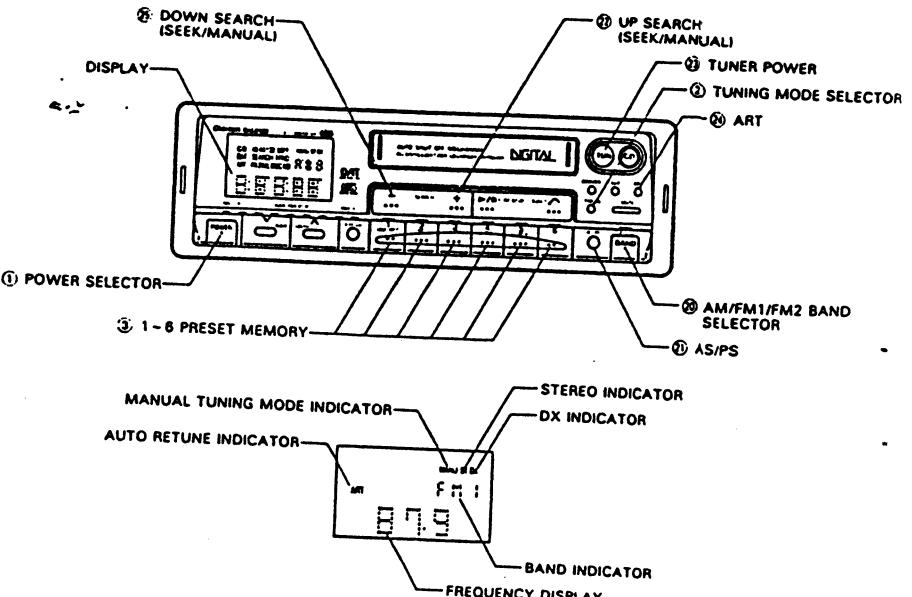


#### ■ POWER SELECTOR

Press ㉑ (TUNER POWER) to turn the unit on. The last tuned frequency will be displayed. Press ㉒ (POWER SELECTOR) to turn the power off.

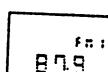

#### ■ AM (MW)/FM1 (UKW1)/FM2 (UKW2) BAND SELECTOR

Press ㉓ (AM/FM1/FM2 BAND SELECTOR) to select the respective band desired. The indicator will appear in the display.

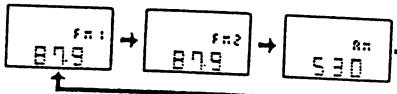

#### ■ STATION TUNING

Press ㉔ (UP SEARCH) or ㉕ (DOWN SEARCH) to tune up or down (SEEK or MANUAL). Press ㉖ (TUNING MODE SELECTOR) to select SEEK or MANUAL Tuning mode. "MANUAL" will appear in the display in Manual Tuning mode. Nothing will appear in the display during use of the Seek Tuning mode.

#### ■ MANUAL/SEEK TUNING

In the MANUAL mode, the Up/Down Search Control will instruct the tuner to go to the next FREQUENCY on the dial.

In the SEEK mode, the Up/Down Search Control will instruct the tuner to go to the next STATION on the dial.

#### ■ SEEK TUNING

In the SEEK mode, press ㉗ (+) or ㉘ (-) ONCE to search for stations using LOCAL (LOW) sensitivity. Press ㉗ (+) or ㉘ (-) TWICE to perform searches with DX (HIGH) sensitivity.

If no station is detected with LOCAL sensitivity, the tuner will automatically switch to DX sensitivity and re-commence the search.

#### ■ MEMORY PROCEDURE

Up to 12 FM and 6 AM stations may be stored in the memory to future recall.

1. Select the desired station to be stored by either SEEK or MANUAL tuning.
2. Press the desired PRESET Button of ㉙ (1-6 PRESET MEMORY) for MORE THAN TWO SECONDS. When you hear the station start play and a tone beep, the new station has been stored into memory. A preset channel indicator will appear in the display. You may store 6 stations in FM1 and 6 stations in FM2 in FM band. Press ㉚ (AM/FM1/FM2 BAND SELECTOR) to select FM1 or FM2. A band indicator will appear in the display. You may use AUTOMATIC STATION STORE function to store the stations. Refer to the AUTOMATIC STATION STORE explanation for details.

#### ■ ART

When ㉛ (ART) is pressed during FM reception, the ART indicator will appear. If poor FM reception continues for 25 seconds or more, an electronic tone will sound, and the SEEK UP function will automatically operate to change the station.

#### ■ AUTOMATIC-STATION STORE

Hold ㉛ (AS/PS) depressed for at least TWO seconds to activate the Automatic Station Store function. The tuner will scan the band from the current frequency and will store the six strongest stations available in the area.

In the case of FM band, FM1 and FM2 may be auto stored separately.

IF SIX STATIONS ARE NOT AVAILABLE, AUTO STORE WILL STOP SCAN AUTOMATICALLY.

#### ■ PRESET STATION SCAN

Press ㉛ (AS/PS) to activate the preset station scan function. When the button is pressed, the tuner will scan each of the stations you have stored in memory. The channel indicator will flash five seconds and the tuner will then skip to the next station frequency stored.


When this function is activated while using the FM1 band, the tuner will scan the FM1 band only.

To scan the FM2 band, press ㉚ (AM/FM1/FM2 BAND SELECTOR) to select the FM2 band, and then press ㉛.

To stop operation of the function, either press ㉛ once again, or one of the preset buttons.

The flashing indicators above ㉙ (1-6 PRESET MEMORY) indicate that those station frequencies can currently be received.

#### 4.4 CD CHANGER CONTROL MODE

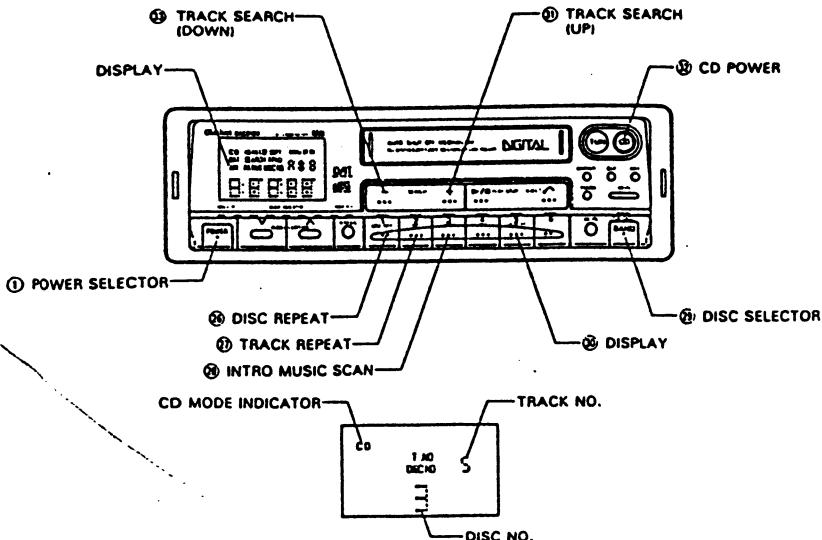


##### ■ POWER SELECTOR/PLAY

Press ⑤ (CD POWER) to turn the unit on. The CD auto changer will operate and playback will begin. Press ① (POWER SELECTOR) to turn the power off.


##### ■ P (PAUSE)

Press ⑦ (CD POWER) to stop play. "PAUSE" will appear in the display.

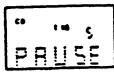

##### ■ DISC SELECTION

When ⑪ (DISC SELECTOR) is pressed, the changer will select from the current disc to the next one loaded, and playback will begin from the first track on that disc. If the current disc is number 2, pressing this button will instruct the discs to be changed in the order 3 → 4 ..... 1 → 2.

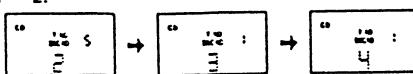

##### ■ TRACK SEARCH

When ⑩ (UP TRACK SEARCH) is pressed, the next track on the disc will be played; when ⑨ (DOWN TRACK SEARCH) is pressed, the current track will be played again from the beginning (if currently at the beginning of a track, the previous track will be played).

If the button is held depressed continuously, the track search function will operate continuously until the last or first track number of the disc is reached.

##### ■ DISC SELECTION REPEAT

Press ⑧ (DISC REPEAT) to activate Disc Selection Repeat.

##### ■ TRACK SELECTION REPEAT


Press ⑫ (TRACK REPEAT) to activate Track Selection Repeat. The indicator above ⑫ will light. The unit automatically repeats play of the track until you cancel this function. Press ⑫ again to cancel this function.

##### ■ INTRO MUSIC SCAN

Press ⑬ (INTRO MUSIC SCAN) to activate Intro Music Scan. The indicator above ⑬ will light. The unit automatically plays the first TEN seconds of each track of the disc and will scan all discs until you cancel the function. Press ⑬ again to cancel this function.


##### ■ DISPLAY

When ⑮ (DISPLAY) is pressed, the display will change to show the track time. When the button is pressed again, the display will return to indicate the DISC NO. The display will change from 'CD 1:00 S' to 'CD 1:00 :'. Press ⑮ again to cancel this function.

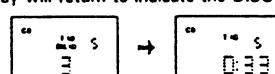


##### ■ EJECT DISPLAY

When no magazine has been loaded in the CD auto-changer, the EJECT message will be displayed.

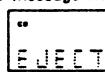

##### ■ ERROR DISPLAY

This unit includes a variety of self-diagnostic functions. The ERROR display will be shown in the following cases:

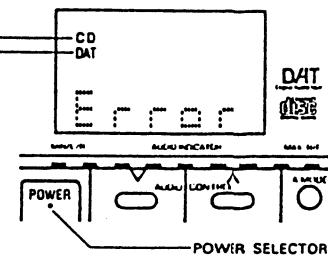

##### ① DAT mode:


- During LOAD/EJECT, if some mechanical malfunction occurs and the mechanism's self-correcting function cannot restore proper operation.
- If a cassette is inserted whose tape is broken.

##### ② CD mode:


- In the case of CD mechanism malfunction (moisture condensation), or abnormal heat rise (due to temperature rise within trunk).
- In the case of a mechanical malfunction in the auto-changer's tracking unit.

If the ERROR display is shown, one of the above problems may have occurred; as a result, rectify the problem before pressing the POWER SELECTOR again. Once the problem has been eliminated, the unit will return to its initial condition. Press POWER SELECTOR, then.

## WIRE CONNECTIONS GABEAGE/VERDRAHTUNG

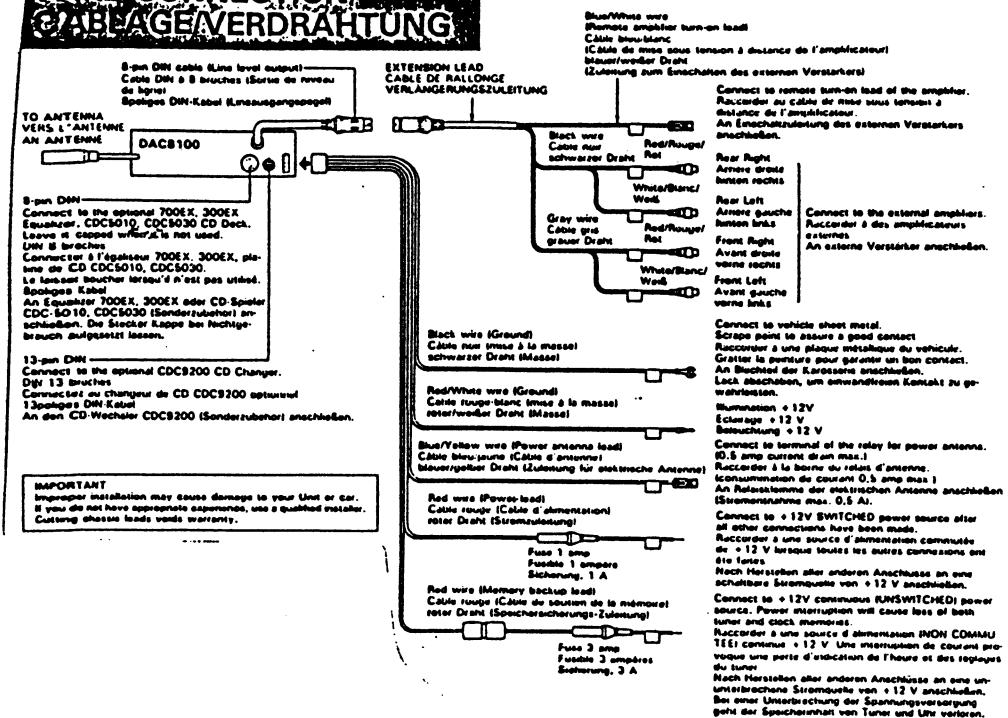


## TYPICAL CONNECTION/CABLAGE TYPIQUE TYPISCHES ANSCHLUSSBEISPIEL

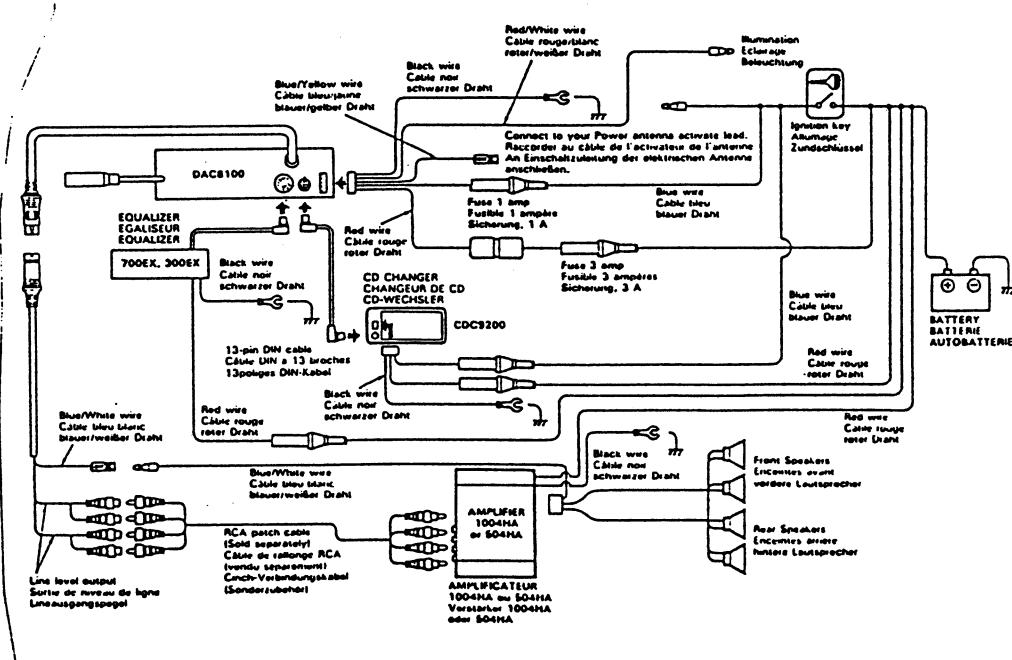

SWITCH P.W.B

[ 作業基準書 ]

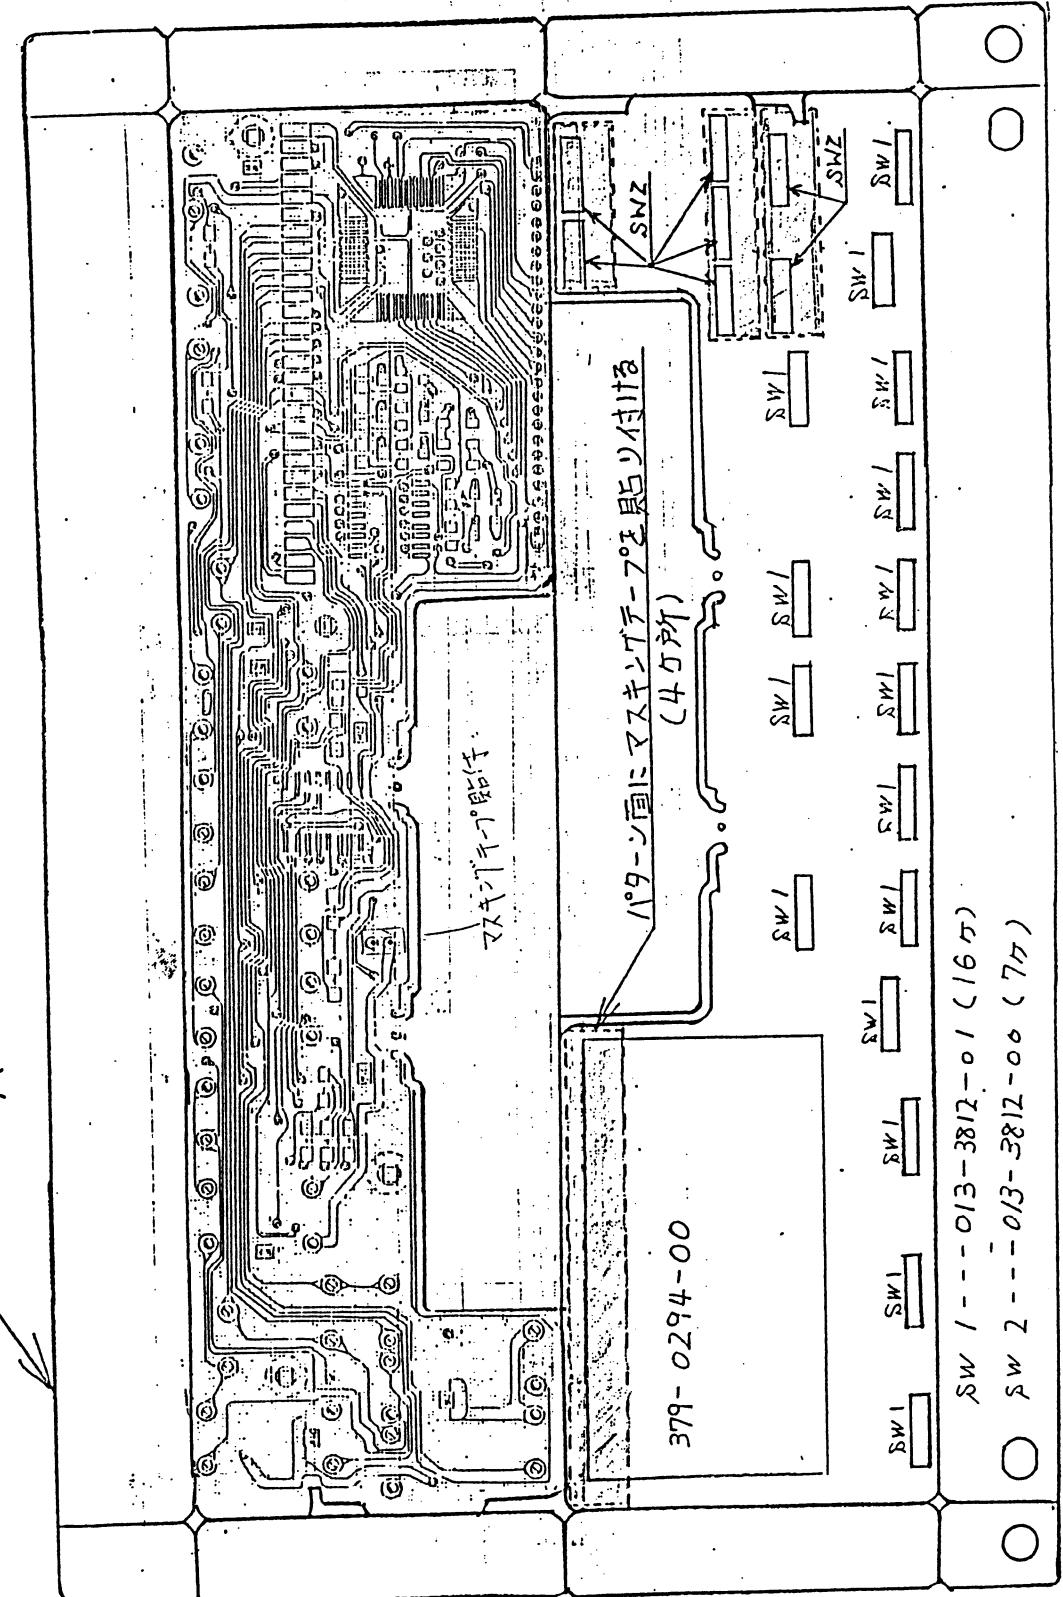


Vintagecaraudio.se

[作業基準書]

後付け・後加工

- モードIC(2ヶ) → はんだ付け後、洗浄する
- ラバーパッケージIC(1ヶ)
- PFLランプドライバー、ハーネスをがせる
- PFL加工品をパッターン面より  
痛かせてすくへ、はんだ付け

(注) PLテープアダミニン

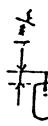

345-2830-04 017-0381-01


- フレキ半田付け→フレキの両面テープ部をはがしPWBに貼り付ける→シルク印刷面に合わせる。  
はんだ付け(28ケタケ) 099-8947-00

- インジケーター(379)に保護シートを貼る

PL加工品

B


A

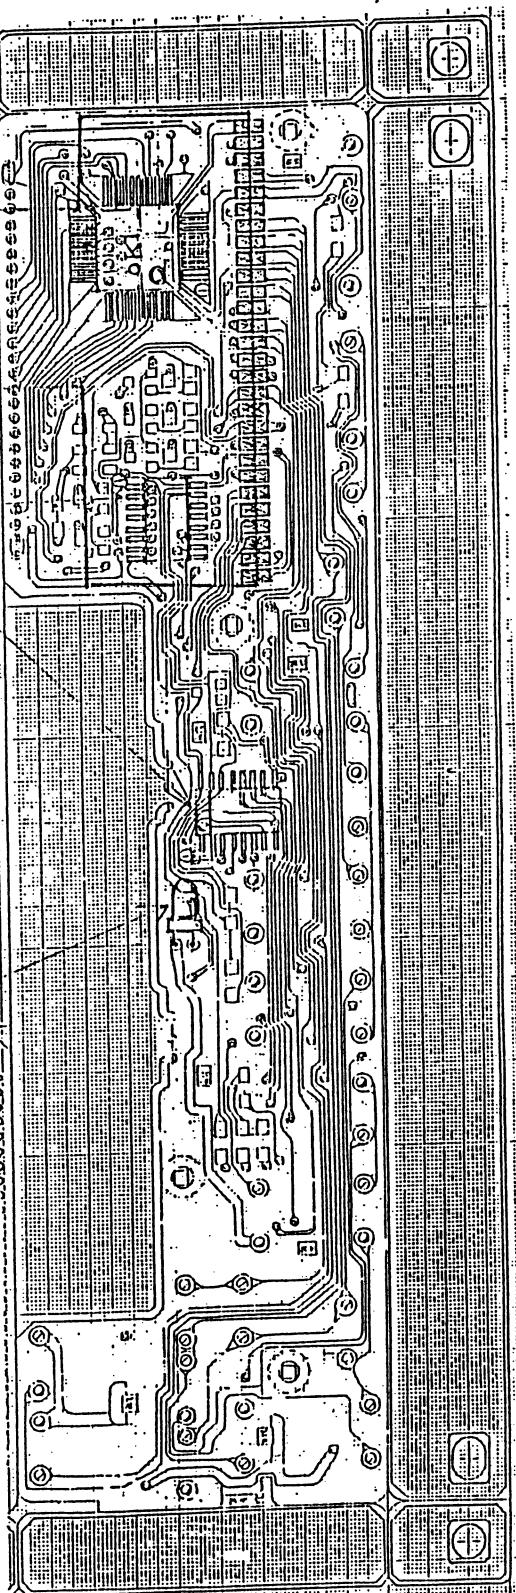

部品名	規格番号	仕様時間	機器名	担当者	作成年月日
PFLランプドライバー	PL-5533B-A	—	クラリオン株式会社	345	89年 9月 30日
モードIC	—	—	同上	—	—
ラバーパッケージIC	—	—	同上	—	—
PLランプドライバー	—	—	同上	—	—
PL加工品	—	—	同上	—	—
インジケーター	—	—	同上	—	—

部品名	規格番号	仕様時間	機器名	担当者	作成年月日
モードIC	PL-5533B-A	—	クラリオン株式会社	345	89年 9月 30日
ラバーパッケージIC	—	—	同上	—	—
PLランプドライバー	—	—	同上	—	—
PL加工品	—	—	同上	—	—
インジケーター	—	—	同上	—	—

部品名	規格番号	仕様時間	機器名	担当者	作成年月日
モードIC	PL-5533B-A	—	クラリオン株式会社	345	89年 9月 30日
ラバーパッケージIC	—	—	同上	—	—
PLランプドライバー	—	—	同上	—	—
PL加工品	—	—	同上	—	—
インジケーター	—	—	同上	—	—

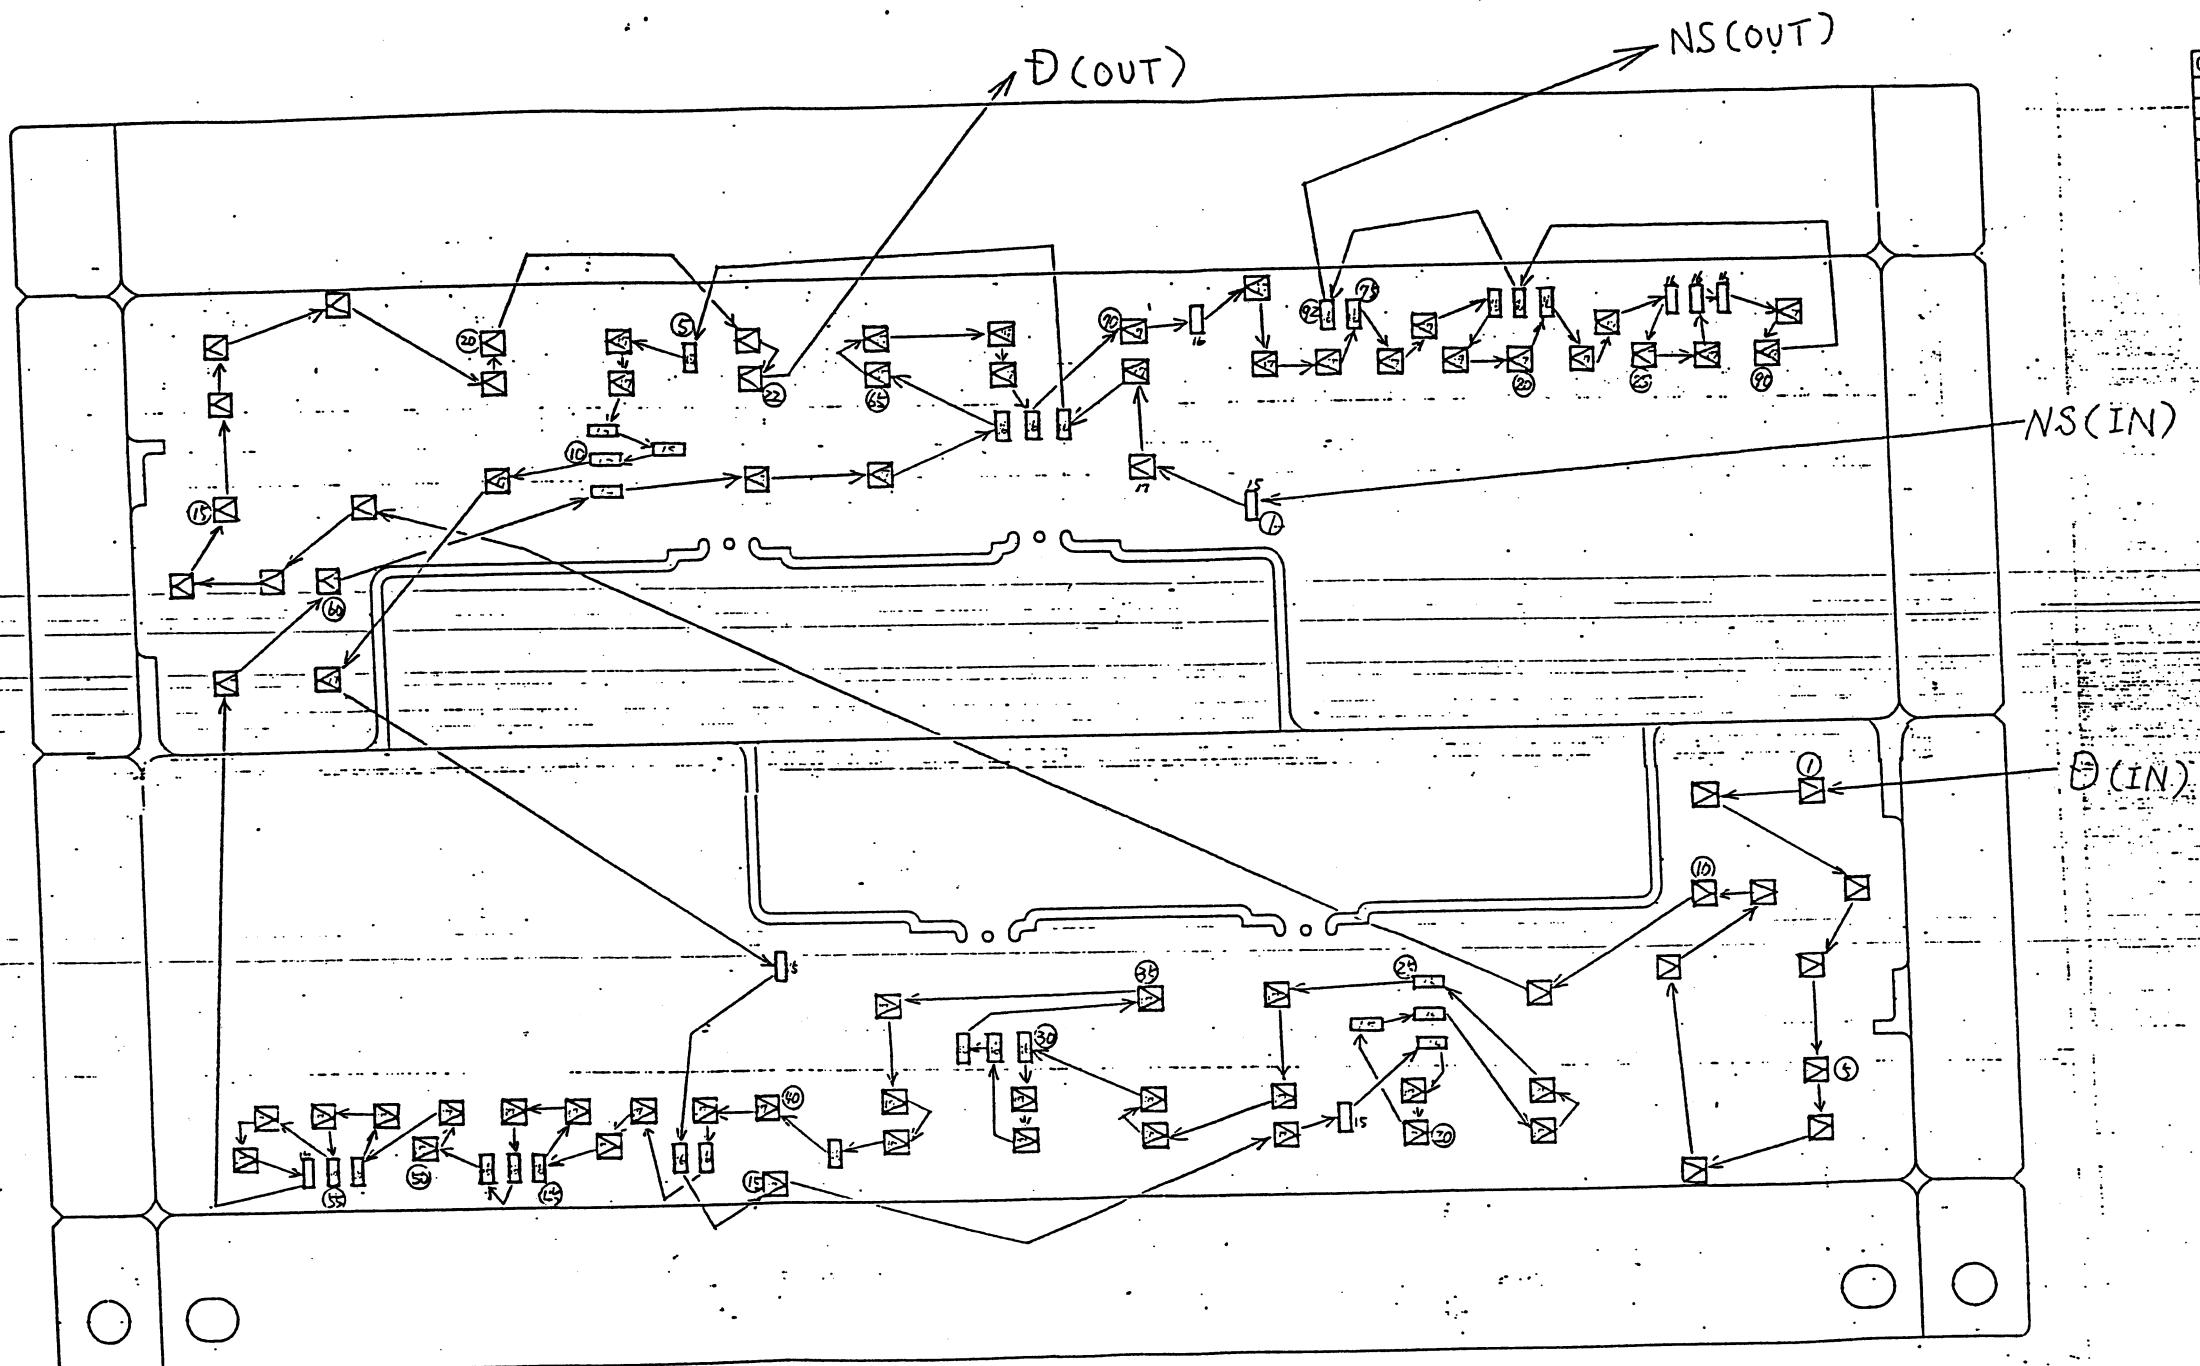


(主) CHip LED (001-0518-) 2003-7

$$\square = \square$$

C-NO	PARTS CODE	NO	P
001	-	-	
002	-	-	
003	-	-	
004	-	-	
005	-	-	
006	-	-	
007	-	-	
008	-	-	
009	-	-	
010	-	-	
011	-	-	
012	-	-	
013	-	-	
014	-	-	
015	116-6811-1Q	6	
016	116-1521-1Q	30	
017	201-0518-04	56	
018	-	-	
019	-	-	
020	-	-	
021	-	-	
022	-	-	
023	-	-	
024	-	-	
025	-	-	
026	-	-	
027	-	-	
028	-	-	
029	-	-	
030	-	-	
101	001-0518-04	22	
102	-	-	
103	-	-	
104	-	-	
105	-	-	
106	-	-	
107	-	-	
108	-	-	
109	-	-	
110	-	-	
111	-	-	
112	-	-	
113	-	-	
114	-	-	
115	-	-	
116	-	-	
117	-	-	
118	-	-	
119	-	-	
120	-	-	
121	-	-	
122	-	-	
123	-	-	
124	-	-	
125	-	-	
126	-	-	
127	-	-	
128	-	-	
129	-	-	
130	-	-	
201	-	-	
211	-	-	
221	-	-	
223	-	-	
225	-	-	
227	-	-	
229	-	-	

F0 (NS ,D,DV)

△	・	・									
△	・	・									
△	・	・									
△	・	・									
品名・名目	改	正	記	事	実施ロット	請求No	日付	年月	日付	年月	日付
作業名	・	・	・	・	氏姓名	・	・	・	・	・	・
：INSERTION FO	・	・	・	・	PE-5533B-A	・	・	・	・	・	—

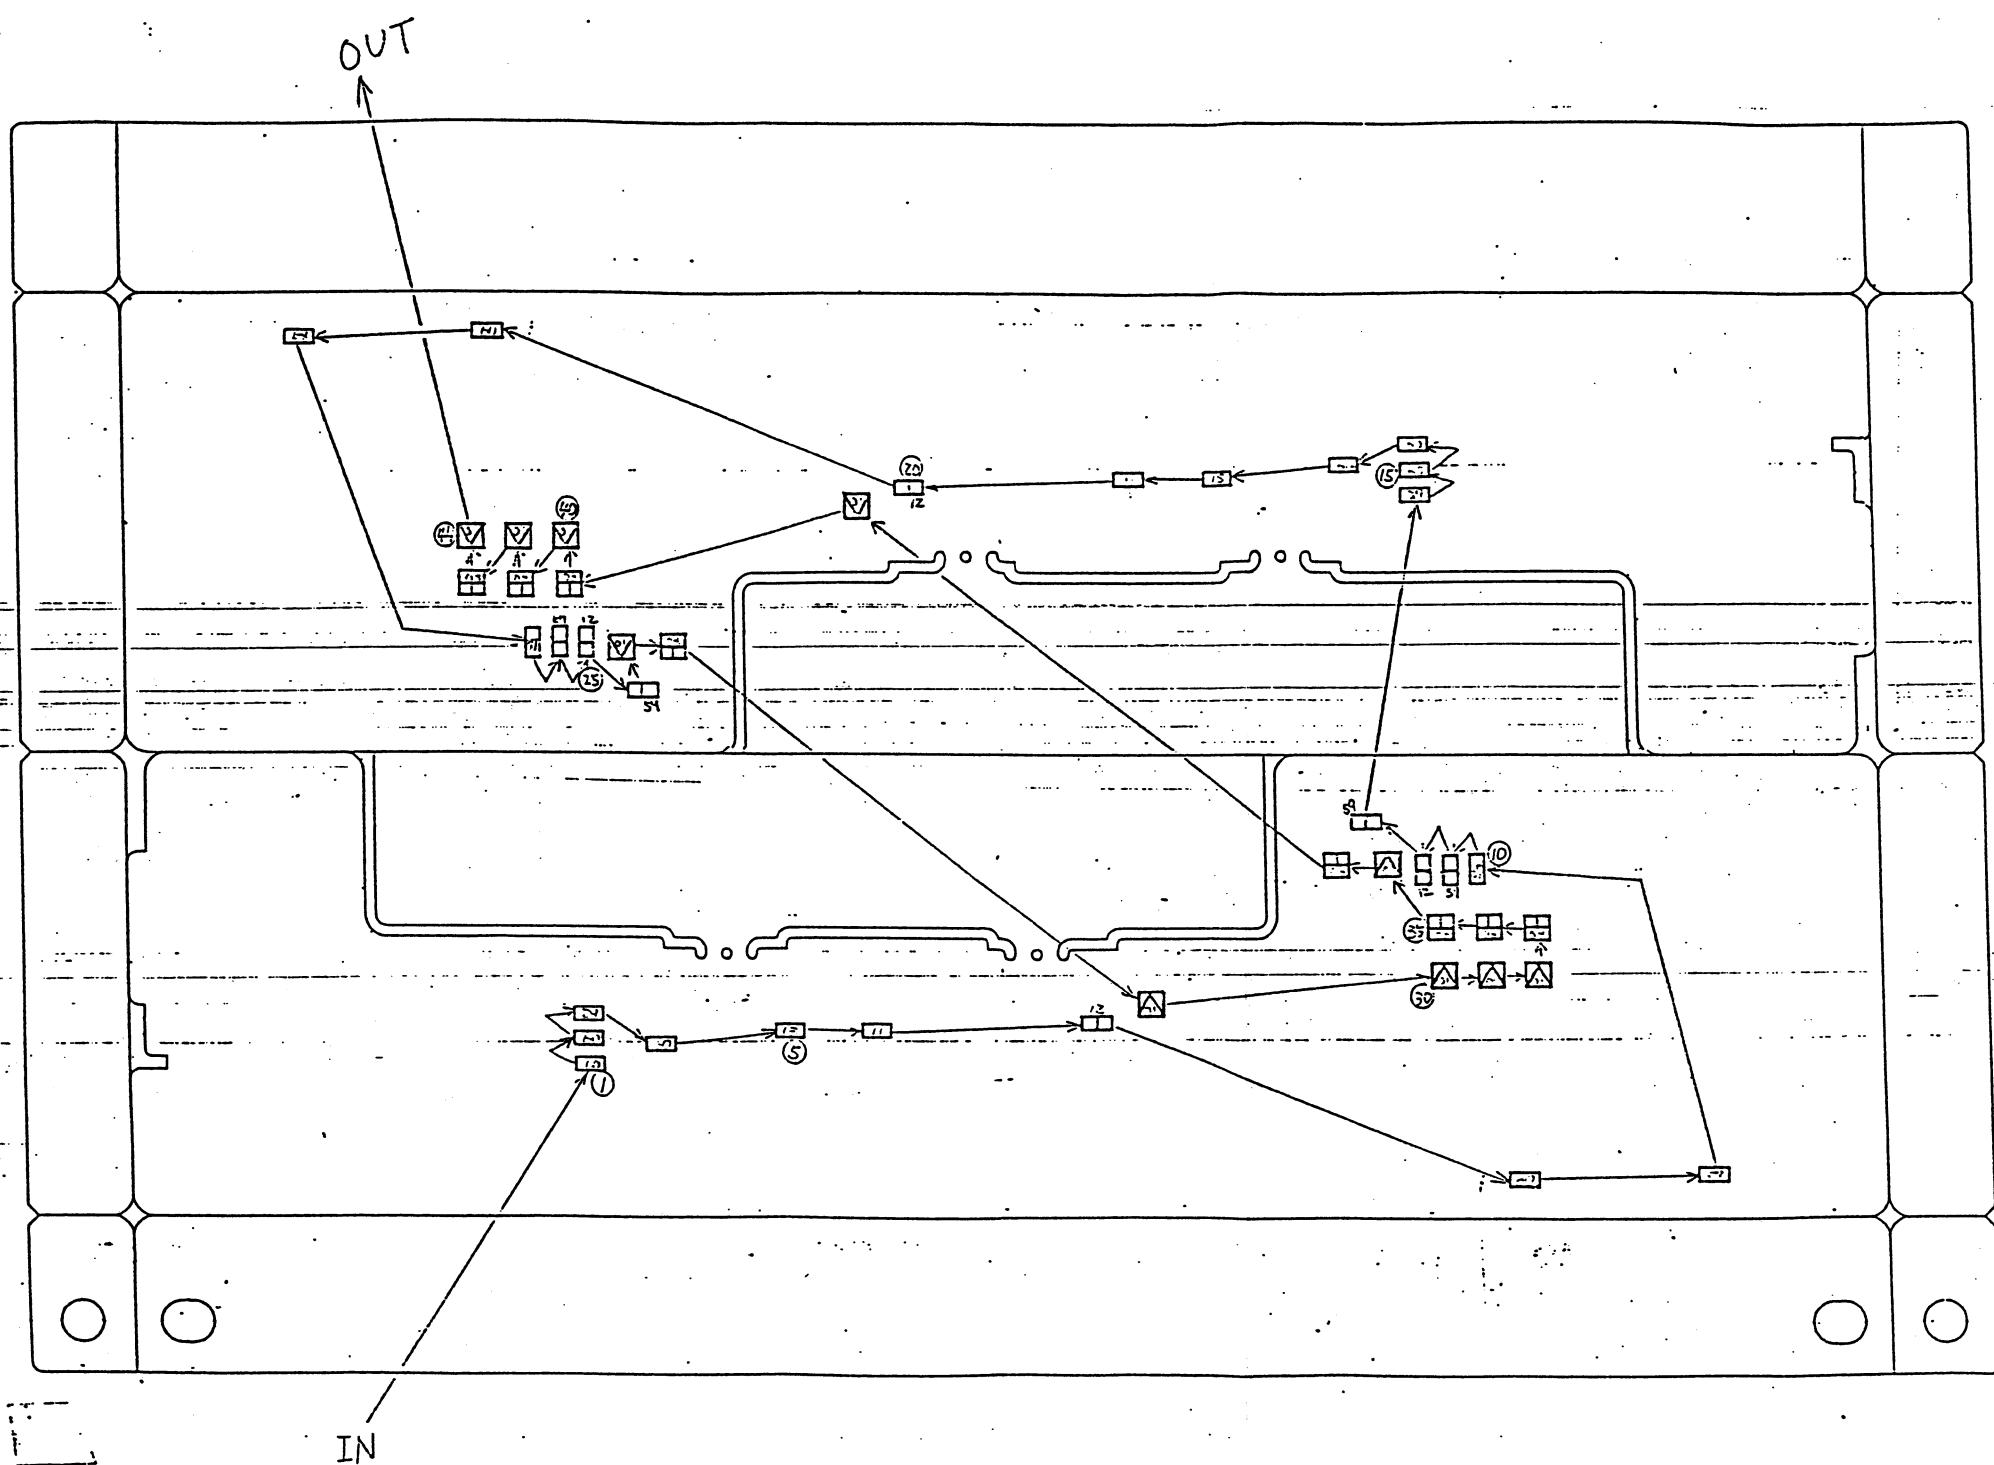

C-NO	PARTS CODE	NO	P
001	001-0356-91	10	1
002	125-2005-92	1	
003	125-0002-93	8	
004	-	-	
005	-	-	
006	-	-	
007	-	-	
008	-	-	
009	-	-	
010	011116-1031-15	2	
012	177-1032-55	4	
013	116-1021-15	1	
014	116-2231-15	1	
015	116-1041-15	2	
016	116-3321-15	1	
017	116-3331-15	1	
018	177-2232-55	1	
019	116-4721-15	1	
020	116-0000-05	1	
021	177-1045-55	1	
022	116-2221-15	1	
023	116-3921-15	1	
024	116-1231-15	1	
025	177-2245-55	1	
026	116-5621-15	1	
027	177-4732-55	1	
028	115-1007-50	1	
029	116-4711-15	2	
030	116-1531-15	1	
031	177-4722-55	1	
032	177-3332-55	1	
033	116-1011-15	1	
034	177-2222-55	1	
035	115-2201-50	1	
036	177-6822-55	1	
037	116-4731-15	2	
038	116-5631-15	1	
039	116-2241-15	1	
040	116-6821-15	1	
041	-	-	
042	-	-	
043	-	-	
044	-	-	
045	-	-	
046	-	-	
047	-	-	
048	-	-	
049	-	-	
050	-	-	
051	-	-	
052	-	-	
053	-	-	
054	-	-	
055	-	-	
056	-	-	
057	175-1012-52	2	
058	116-2211-52	2	
059	1043-0221-52	2	
060	115-5311-15	2	

△	△	△	△	
△	△	△	△	
△	△	△	△	
△	△	△	△	
請求・正月日	改正記録	実施ロット	請求No.	備考
作業名	機種名	工程区分	作業時間名分	担当者
INSERTION C1	PE-5533B-A	—	DM	クラリオン株式会社


155/84

5

8

1年 9月 28  
作成年月日 年月日  
53-5533-C9

FAMILY P.W.B

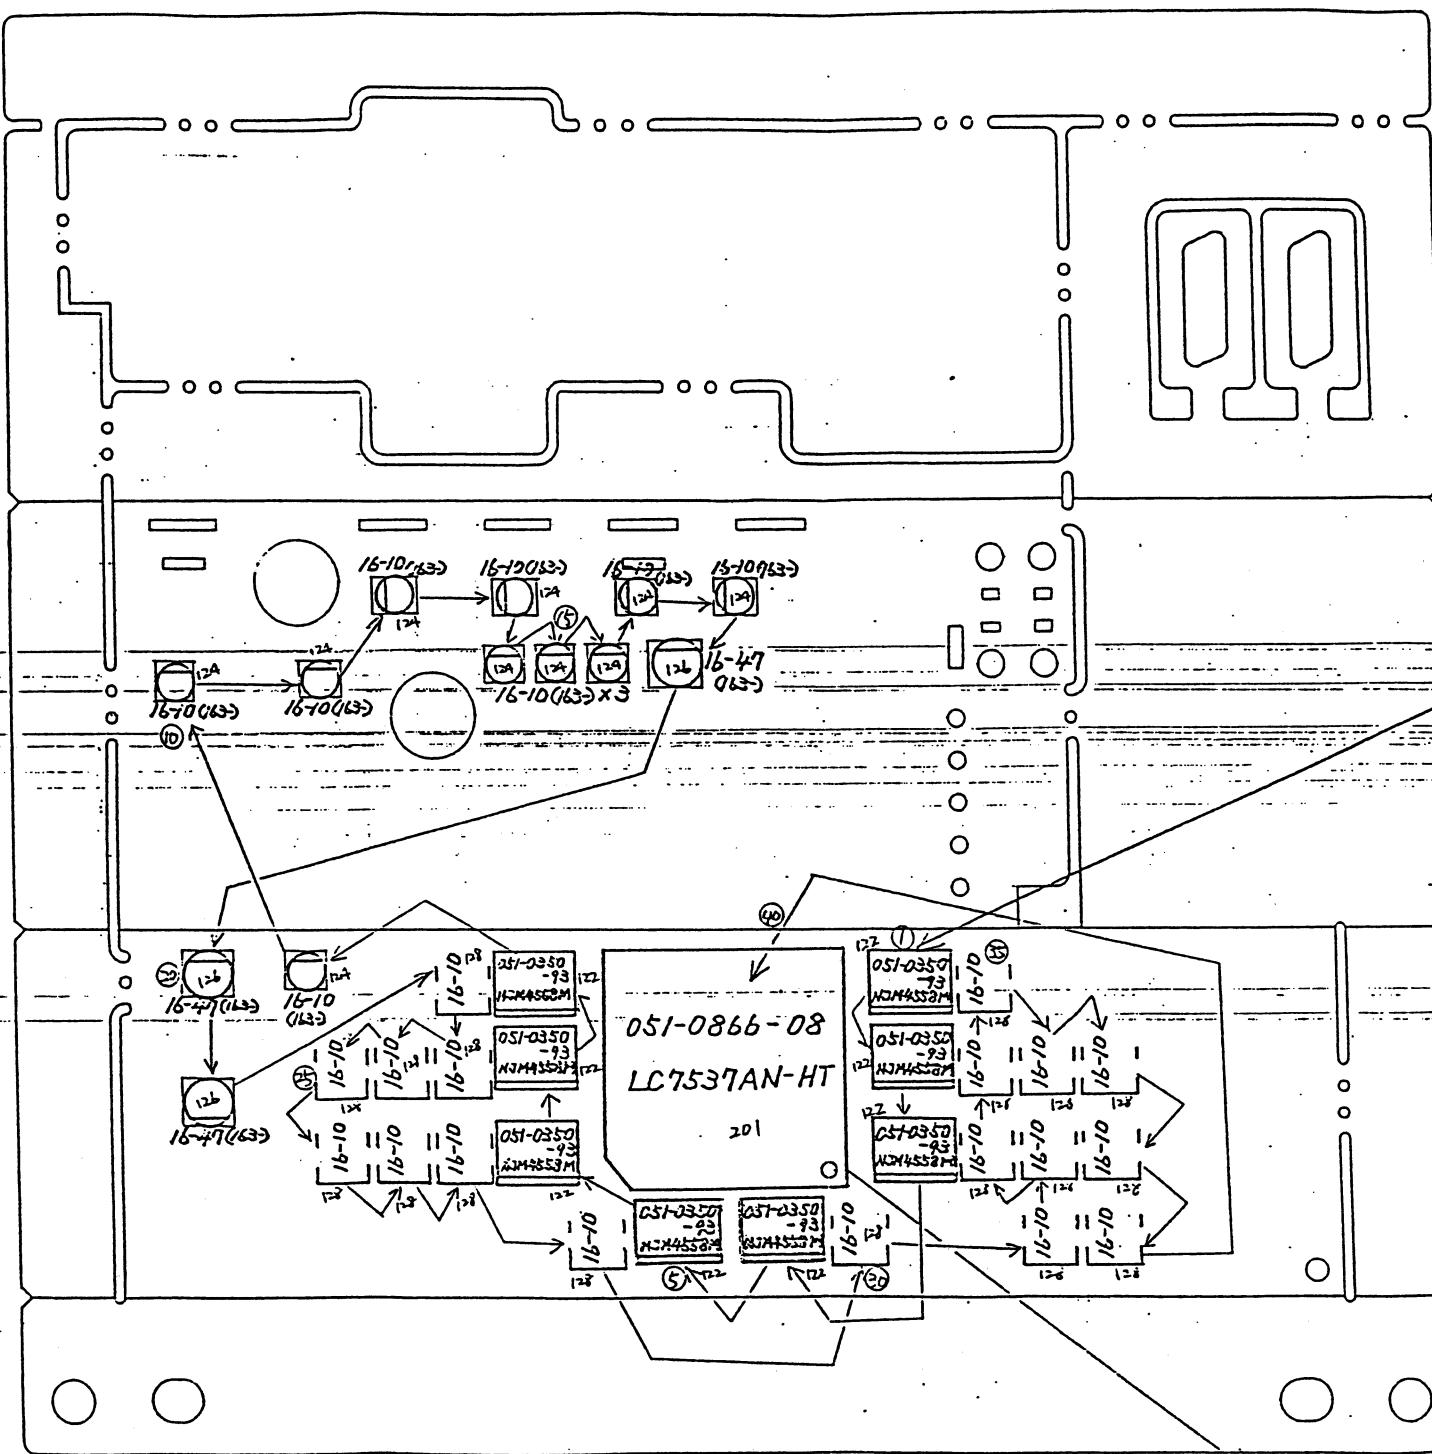


② CHIP 方向(164-)917°  
はホルトニコア接続基板

OUT

FO (NS,D,DV)

C-NO	PARTS CODE	NO	P
001	-	-	
002	-	-	
003	-	-	
004	-	-	
005	-	-	
006	-	-	
007	-	-	
008	-	-	
009	-	-	
010	-	-	
011	-	-	
012	-	-	
013	-	-	
014	-	-	
015	-	-	
016	-	-	
017	-	-	
018	-	-	
019	-	-	
020	-	-	
021	-	-	
022	-	-	
023	-	-	
024	-	-	
025	-	-	
026	-	-	
027	-	-	
028	-	-	
029	-	-	
030	-	-	
101	-	-	
102	-	-	
103	-	-	
104	-	-	
105	-	-	
106	-	-	
107	-	-	
108	-	-	
109	-	-	
110	-	-	
111	-	-	
112	-	-	
113	-	-	
114	-	-	
115	-	-	
116	-	-	
117	-	-	
118	-	-	
119	-	-	
120	-	-	
121	-	-	
122	051-0250-93	18	
123	-	-	
124	163-1063-35	10	
125	-	-	
126	163-4753-35	3	
127	-	-	
128	164-1063-35	18	
129	-	-	
130	-	-	
201	051-0866-08	10	
211	-	-	
221	-	-	
223	-	-	
225	-	-	
227	-	-	
229	-	-	


SYM	DATE	DSGN	REVISION	APPR	DWG	CAL WT(g)	MATERIAL	NAME
					DSGN			
					上野			
MODEL	DATE	APPR		APPB	SCALE			DWG NO.
PE-5533-B-A					UNIT MM	TOL		5-3-5533-B9-0
								Clarion Co.,Ltd

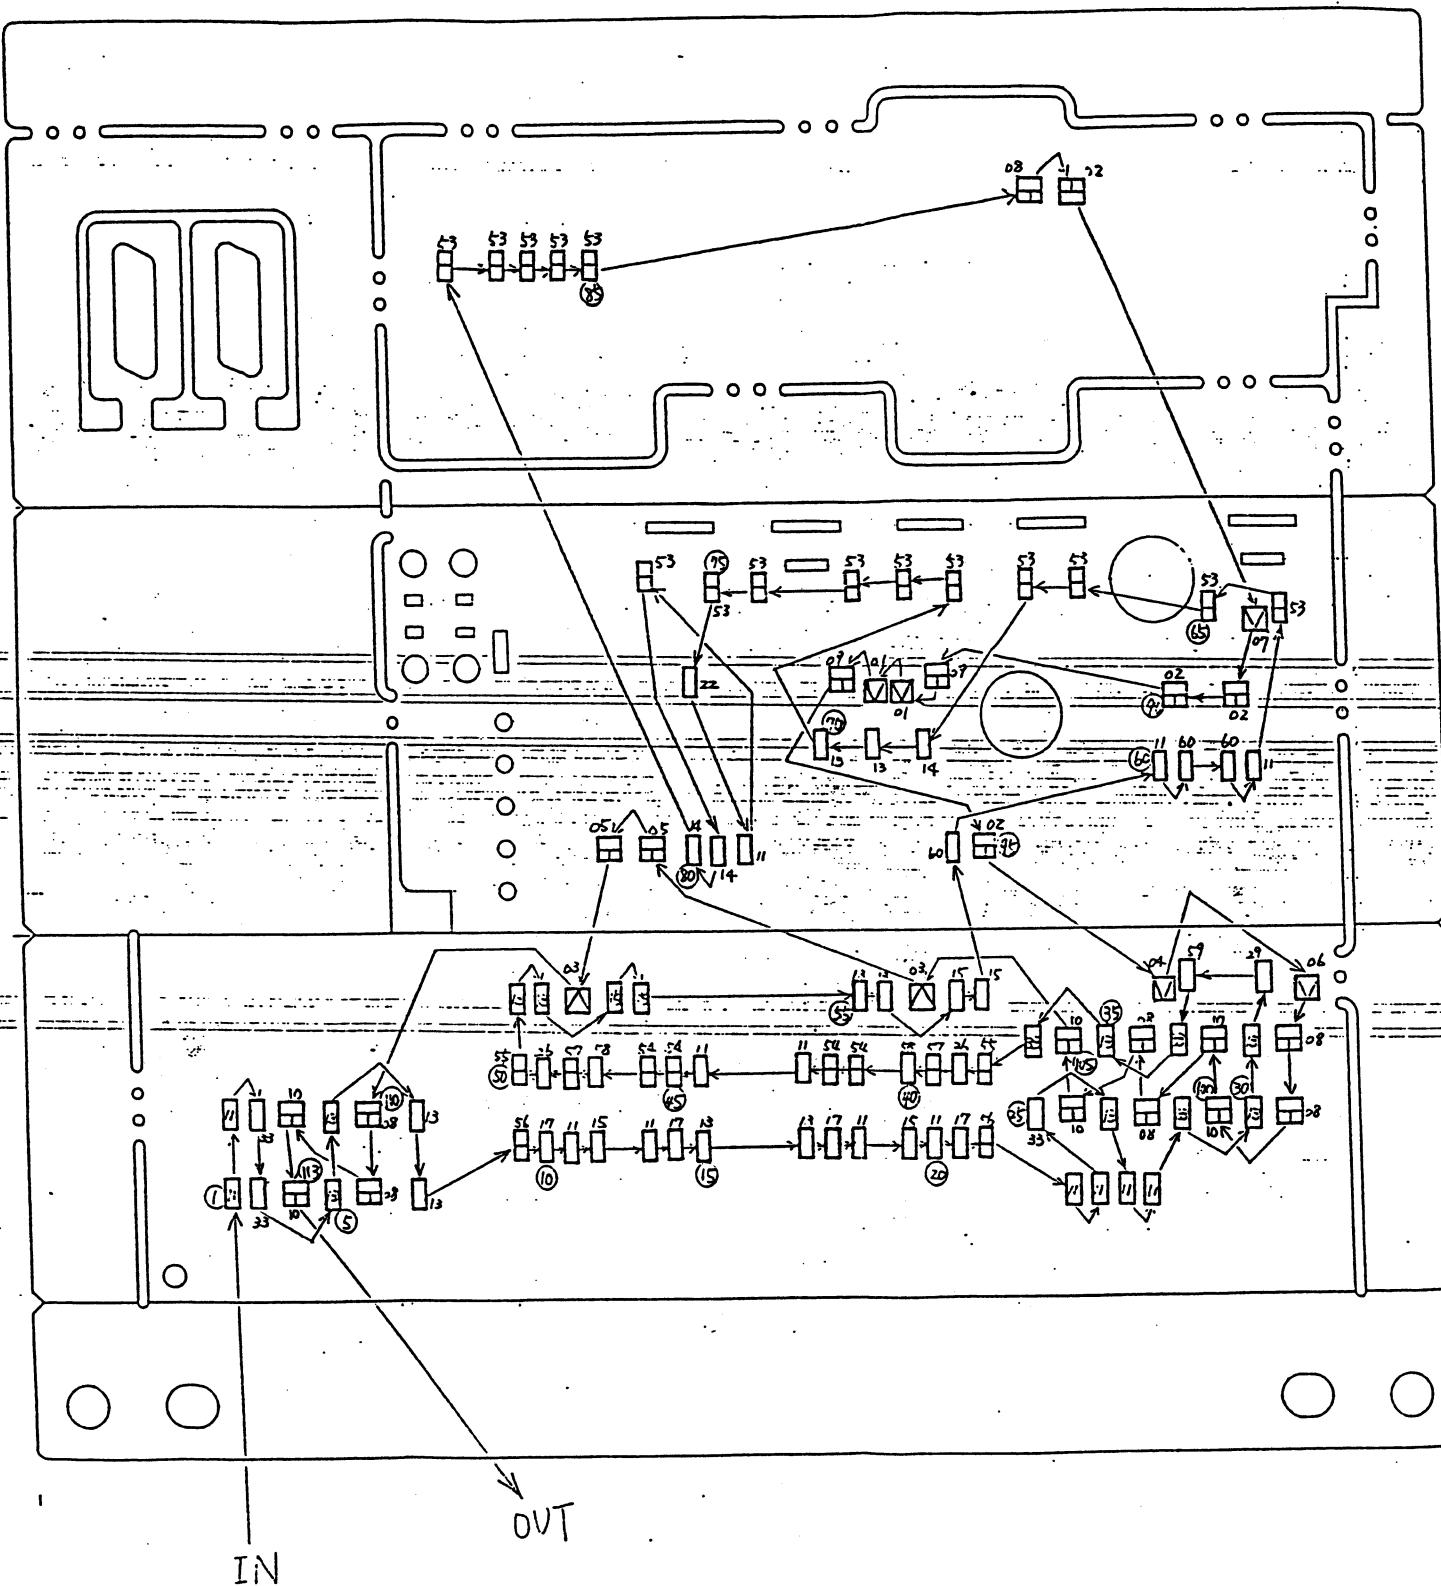

C-NO	PARTS CODE	NO	P
001	001-0529-48	1	Z
002	125-2004-93	1	4
003	001-0367-91	1	Z
004	001-0529-29	1	Z
005	192-2712-001	1	Z
006	001-0529-59	1	Z
007	001-0529-76	1	Z
008	125-0002-93	1	7
009	125-2004-92	1	2
010	193-1306-001	6	Z
011	116-1031-15	1	15
012	177-1032-55	1	Z
013	116-1021-15	1	16
014	116-2231-15	1	3
015	116-1041-15	1	6
016	116-3321-15	1	Z
017	116-3331-15	1	4
018	177-2232-55	1	Z
019	116-4721-15	1	Z
020	116-0000-05	1	Z
021	177-1045-55	1	Z
022	116-2221-15	1	Z
023	116-3921-15	1	Z
024	116-1231-15	1	Z
025	177-2245-55	1	Z
026	116-5621-15	1	2
027	177-4732-55	1	Z
028	175-1007-50	1	Z
029	116-4711-15	1	Z
030	116-1531-15	1	Z
031	177-4722-55	1	Z
032	177-3332-55	1	Z
033	116-1011-15	1	6
034	177-2222-55	1	Z
035	175-2201-50	1	Z
036	177-6822-55	1	Z
037	116-4731-15	1	Z
038	116-5631-15	1	Z
039	116-2241-15	1	Z
040	116-6821-15	1	Z
041	-	1	Z
042	-	1	Z
043	-	1	Z
044	-	1	Z
045	-	1	Z
046	-	1	Z
047	-	1	Z
048	-	1	Z
049	-	1	Z
050	-	1	Z
051	-	1	Z
052	-	1	Z
053	1043-0221-53	1	15
054	1043-0224-52	1	4
055	177-3422-55	1	Z
056	175-4701-50	1	Z
057	175-2701-50	1	Z
058	116-3221-15	1	Z
059	116-5611-15	1	Z
060	116-1221-15	1	3

0.1  
0.022  
0.0029  
47P  
27P

SYM	DATE	DSGN	REVISION	APPR	DWG	CAL WT(g)	MATERIAL	NAME
					DSGN			
								INSERTION C1
								DWG NO.
								53-5533-B9-04
MODEL	DATE	APPR		APPR	FINISH			Clarion Co., Ltd.
PE-5533B-A						SCALE		
						UNIT MM	TOL	

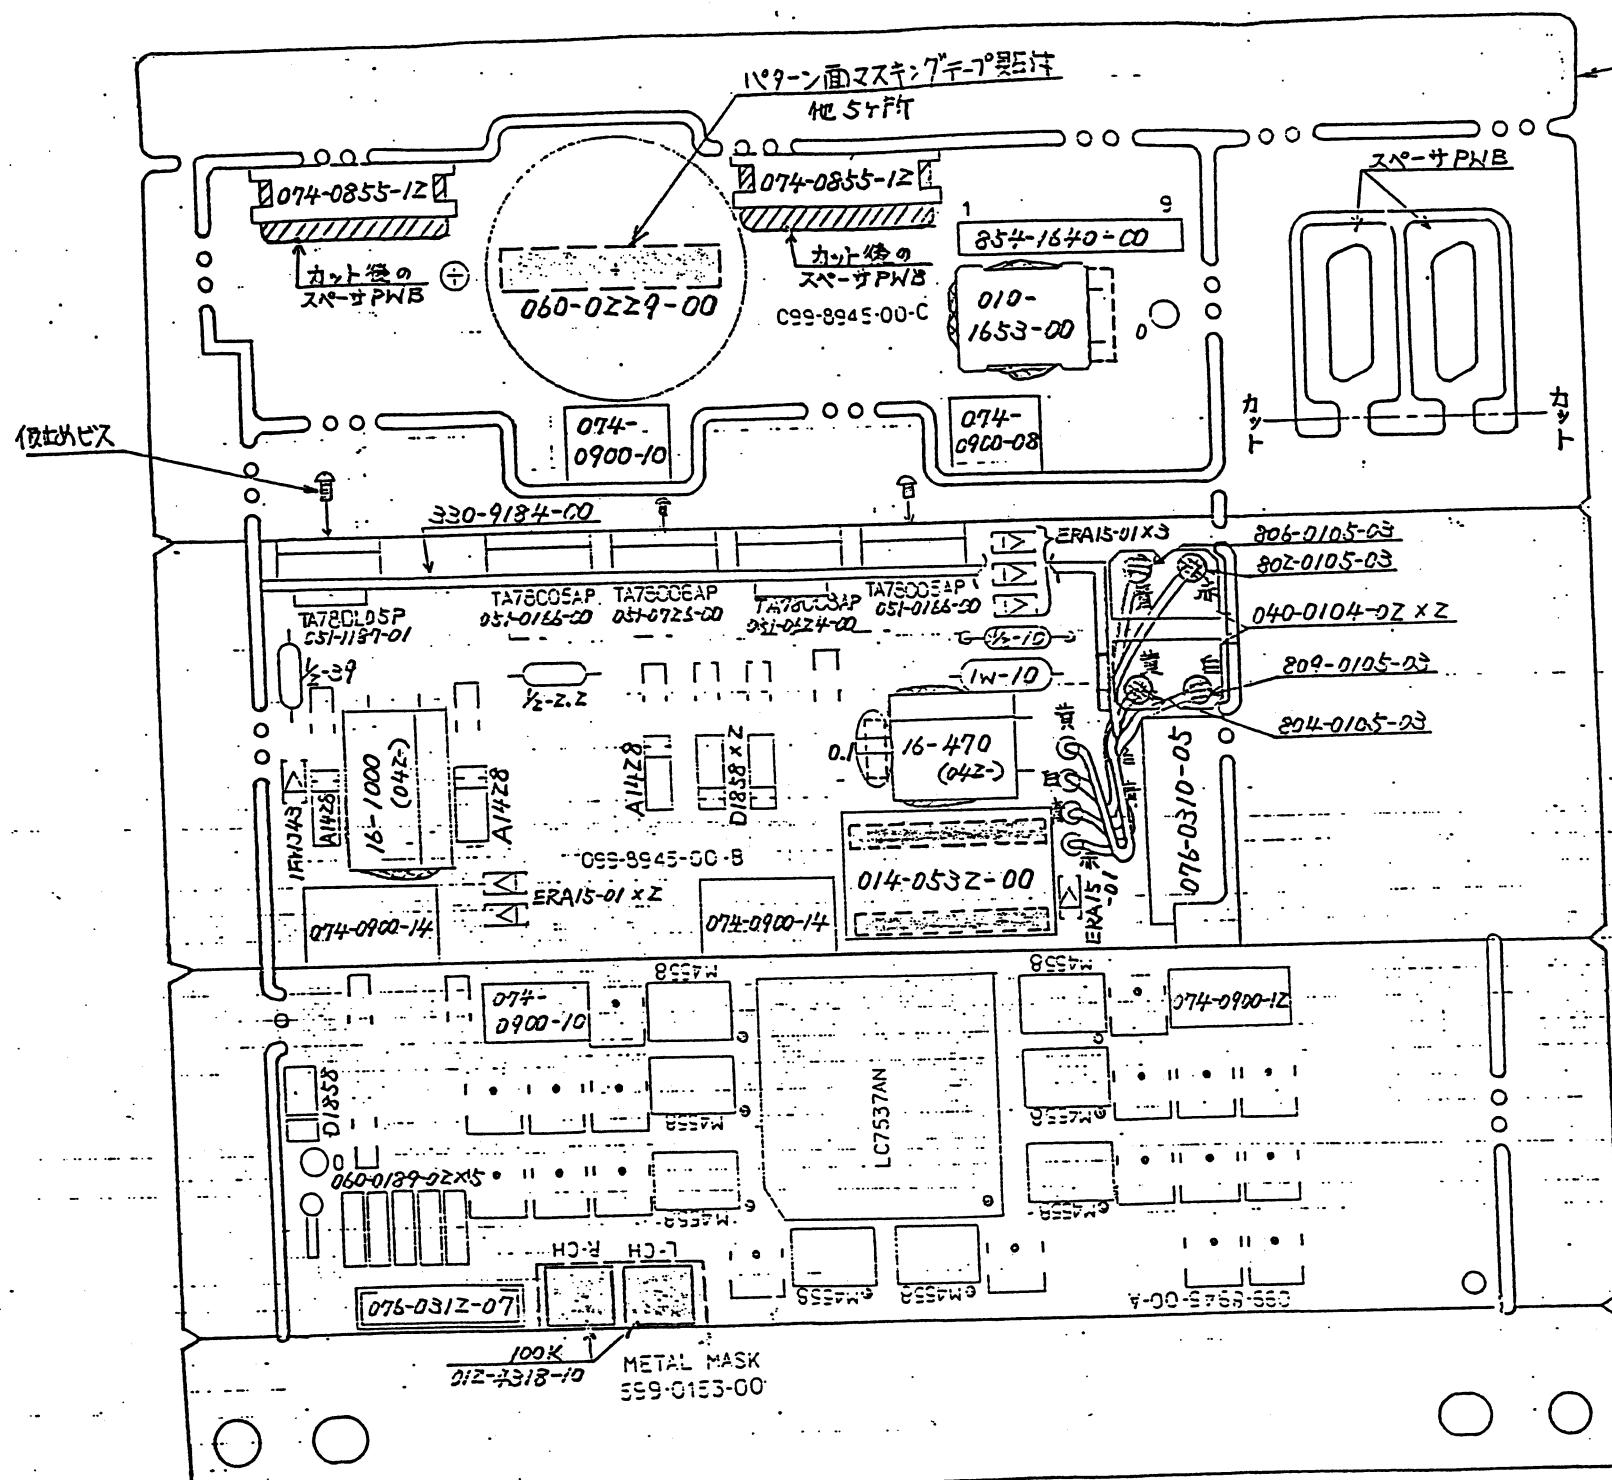

注意壽座

使用治工具

- ・ディップはんだ付工具
  - ・はんだ付工具一式
  - ・マスキングテープ。アルミニウム
  - ・(+)ドライバー。ニッパー

53-5533-R9  
G-FA-A-PWB-Ass'y

前加工

- PWB パターン面にマスキングテープ貼付 (計6ヶ所) —

先付叶

- スペーサ PWB をカット後、アウトレットソケット(074-0855-)と共に PWB に挿入する。  
仮はんだ付け、各1ヶ所。
  - アウトレットソケット(074-) アラゲ(076-0312-) EXリード(254-) } 仮はんだ各2本
  - アラゲ(076-0310-) --- 仮はんだ 1ヶ所
  - IC(5ヶ)のうち、3ヶを プレストパーツに、仮ビス止め(M3×5)使用  
プロレストパーツは爪曲げ 3ヶ所
  - その他の全ての部品

デイップはんた付けを行なう  
マスキングテープを全てはがす  
DiyMで丸達い道論る

卷之二

- VR(012-)
  - ア"リ"- (060-)
  - リレ-(014-)
  - コイレ(010-)
  - ア"ラ- (011)

後加工


- ICの仮止めビスをはずす。
  - フィルタ-ASSYの貫通孔にビニールコードワイヤをベタはんだ付けする(4本)、その後、リレーとプラグの間にリード処理する。
  - ボンド付け…コイル(1mH)、電解C(16-470, 16-1000)  
ボンド
  - 3端子 ICの足に、はんだ盛りする。(計15ヶ所)


代言

• ERA15-01 → 855378B  
001-0449-00      001-0446-00

クライオン株式会社 53-5533-57

MOTHER P.W.B

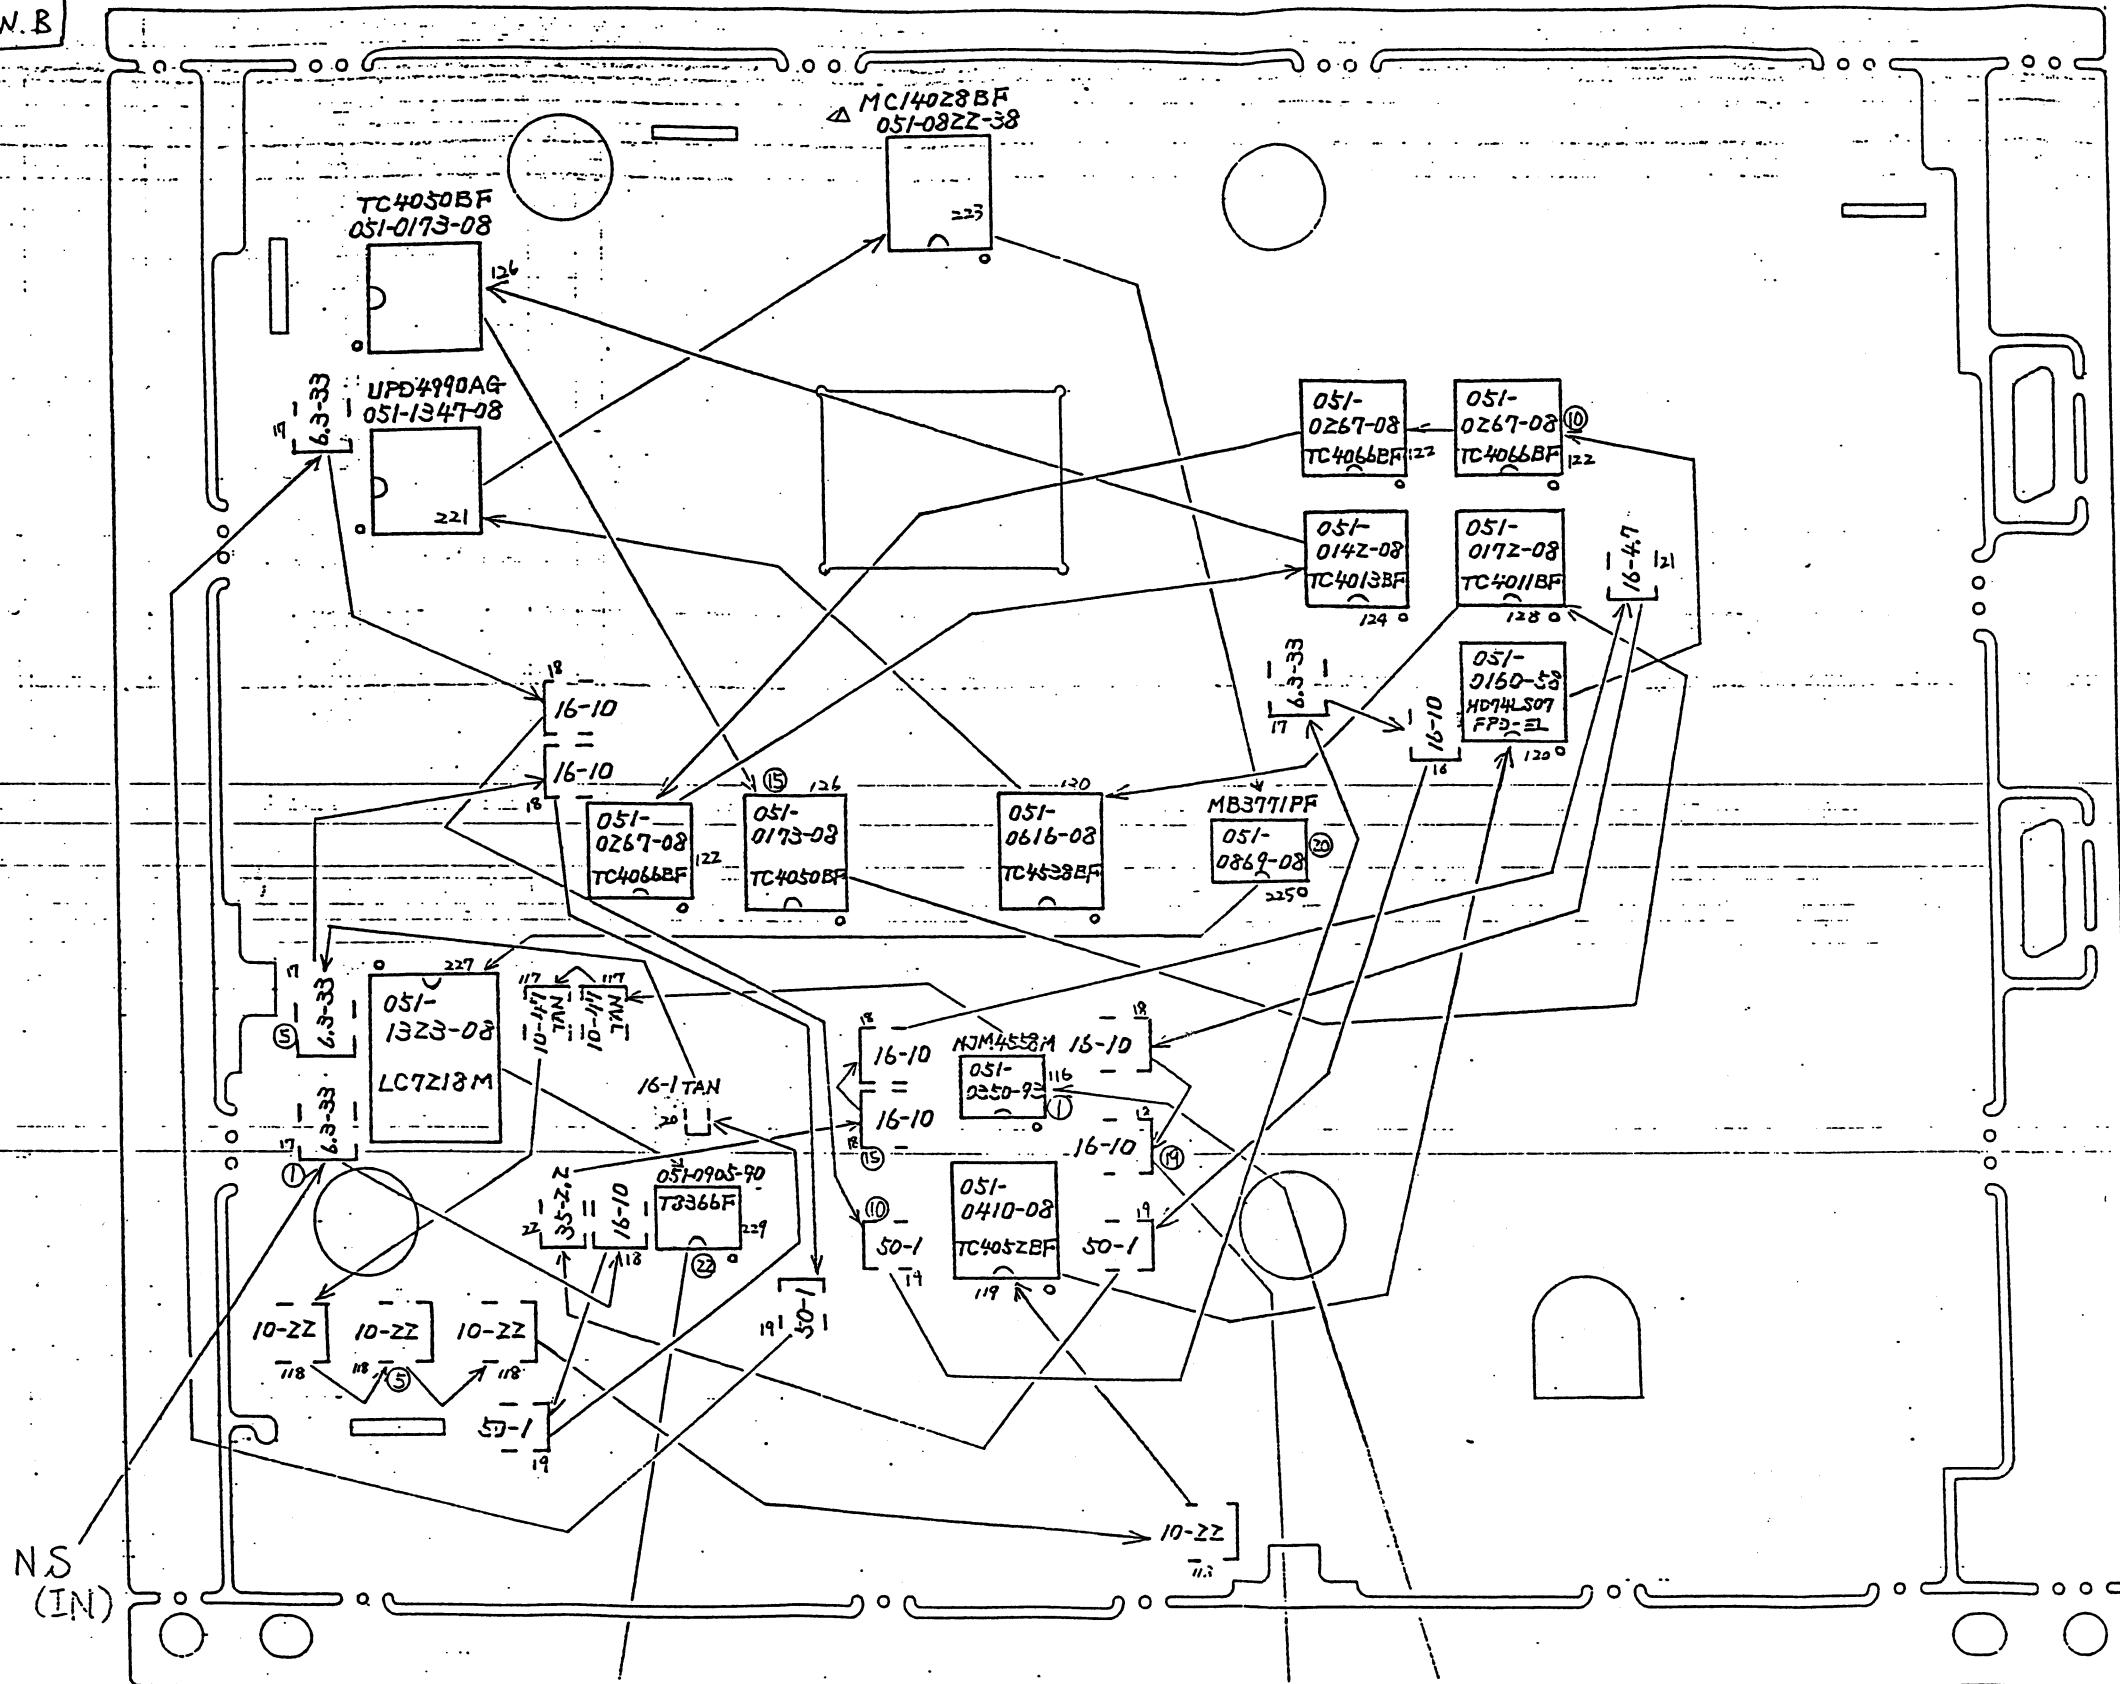

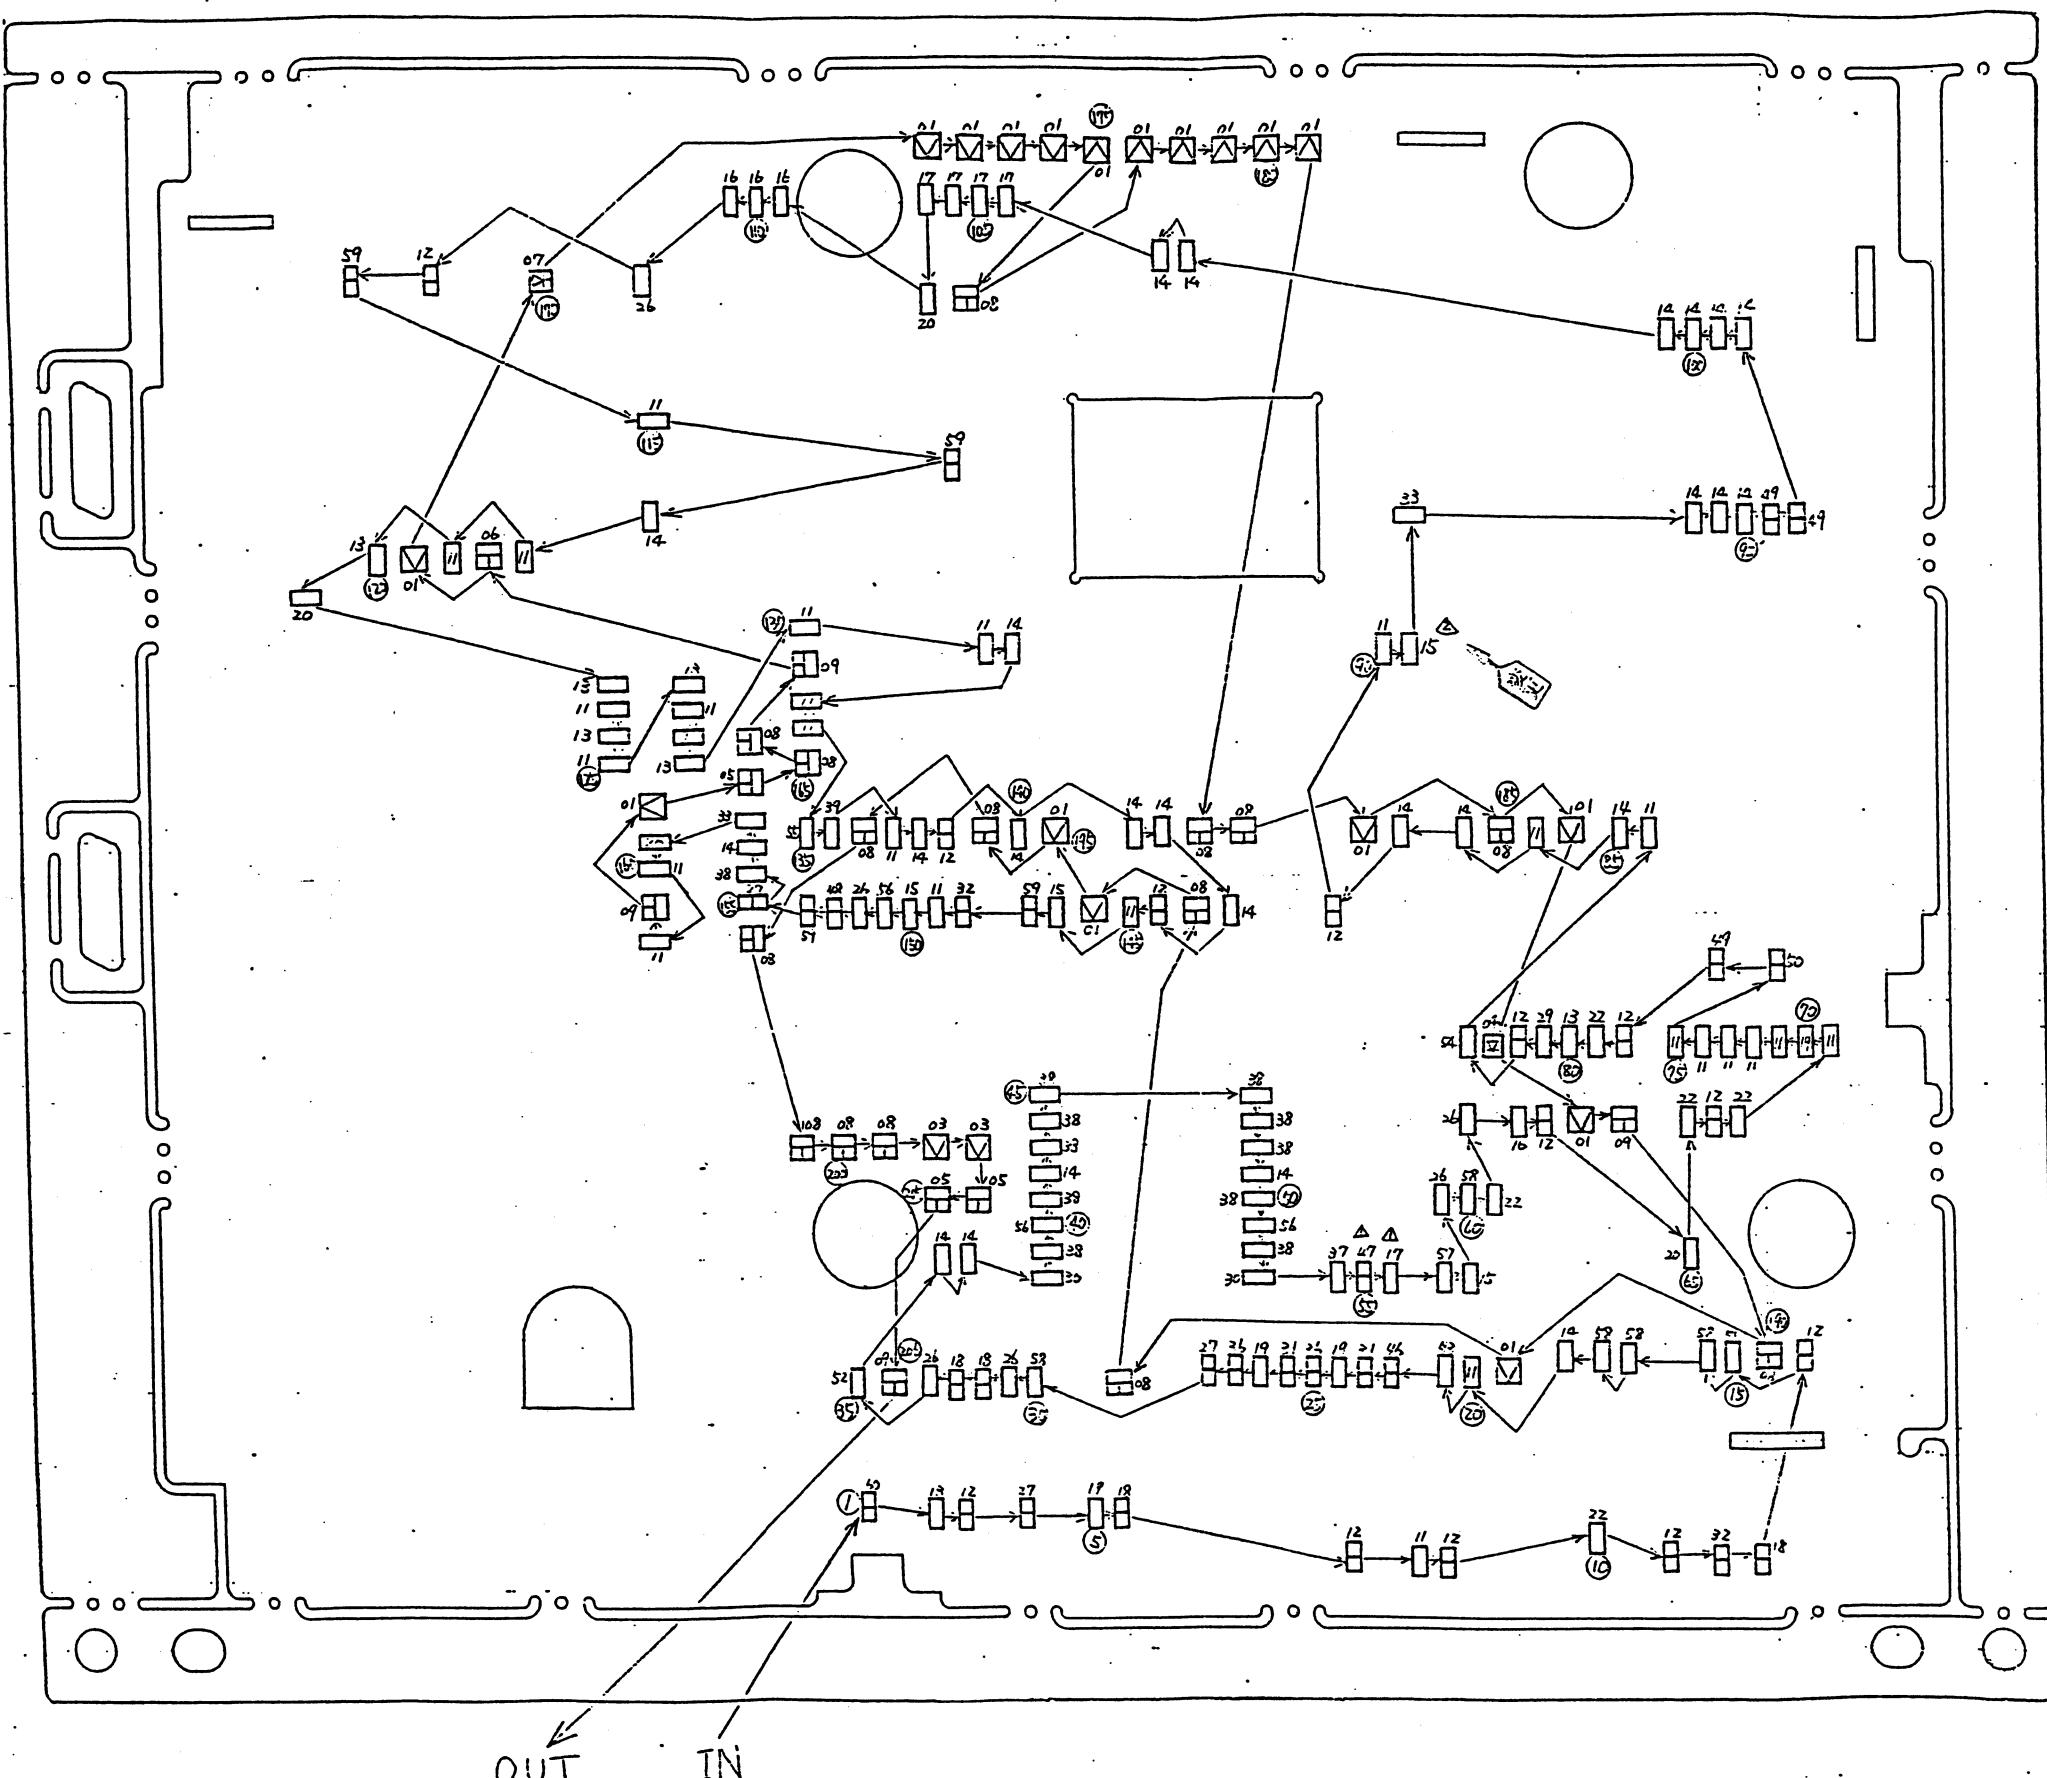


OUT IN

△	・	・					
△	・	・					
△	89-11-10	Z2K→100K		Y11003~	911071	IC fig.	
△	89-10-18	Z7K→Z3K 335PF→220PF		Y11003~	910141	IC fig.	
消去	・	正 9 日	改 正 12	事	実施ロット	現実No	11 12

作業名前 : INSERTION C1 | 機種名 : PE-5533B-A | フロア区分 : 一 | 作業時間(分) : 10M | 会社名 : クラリオン株式会社 | 部門 : 通販部 | 職種 : 通販課 | 勤務地 : 通販課 | 作成年月日 : 53-5533-A9-6




53-5533-A9  
G-MATH-A-PWB-A83

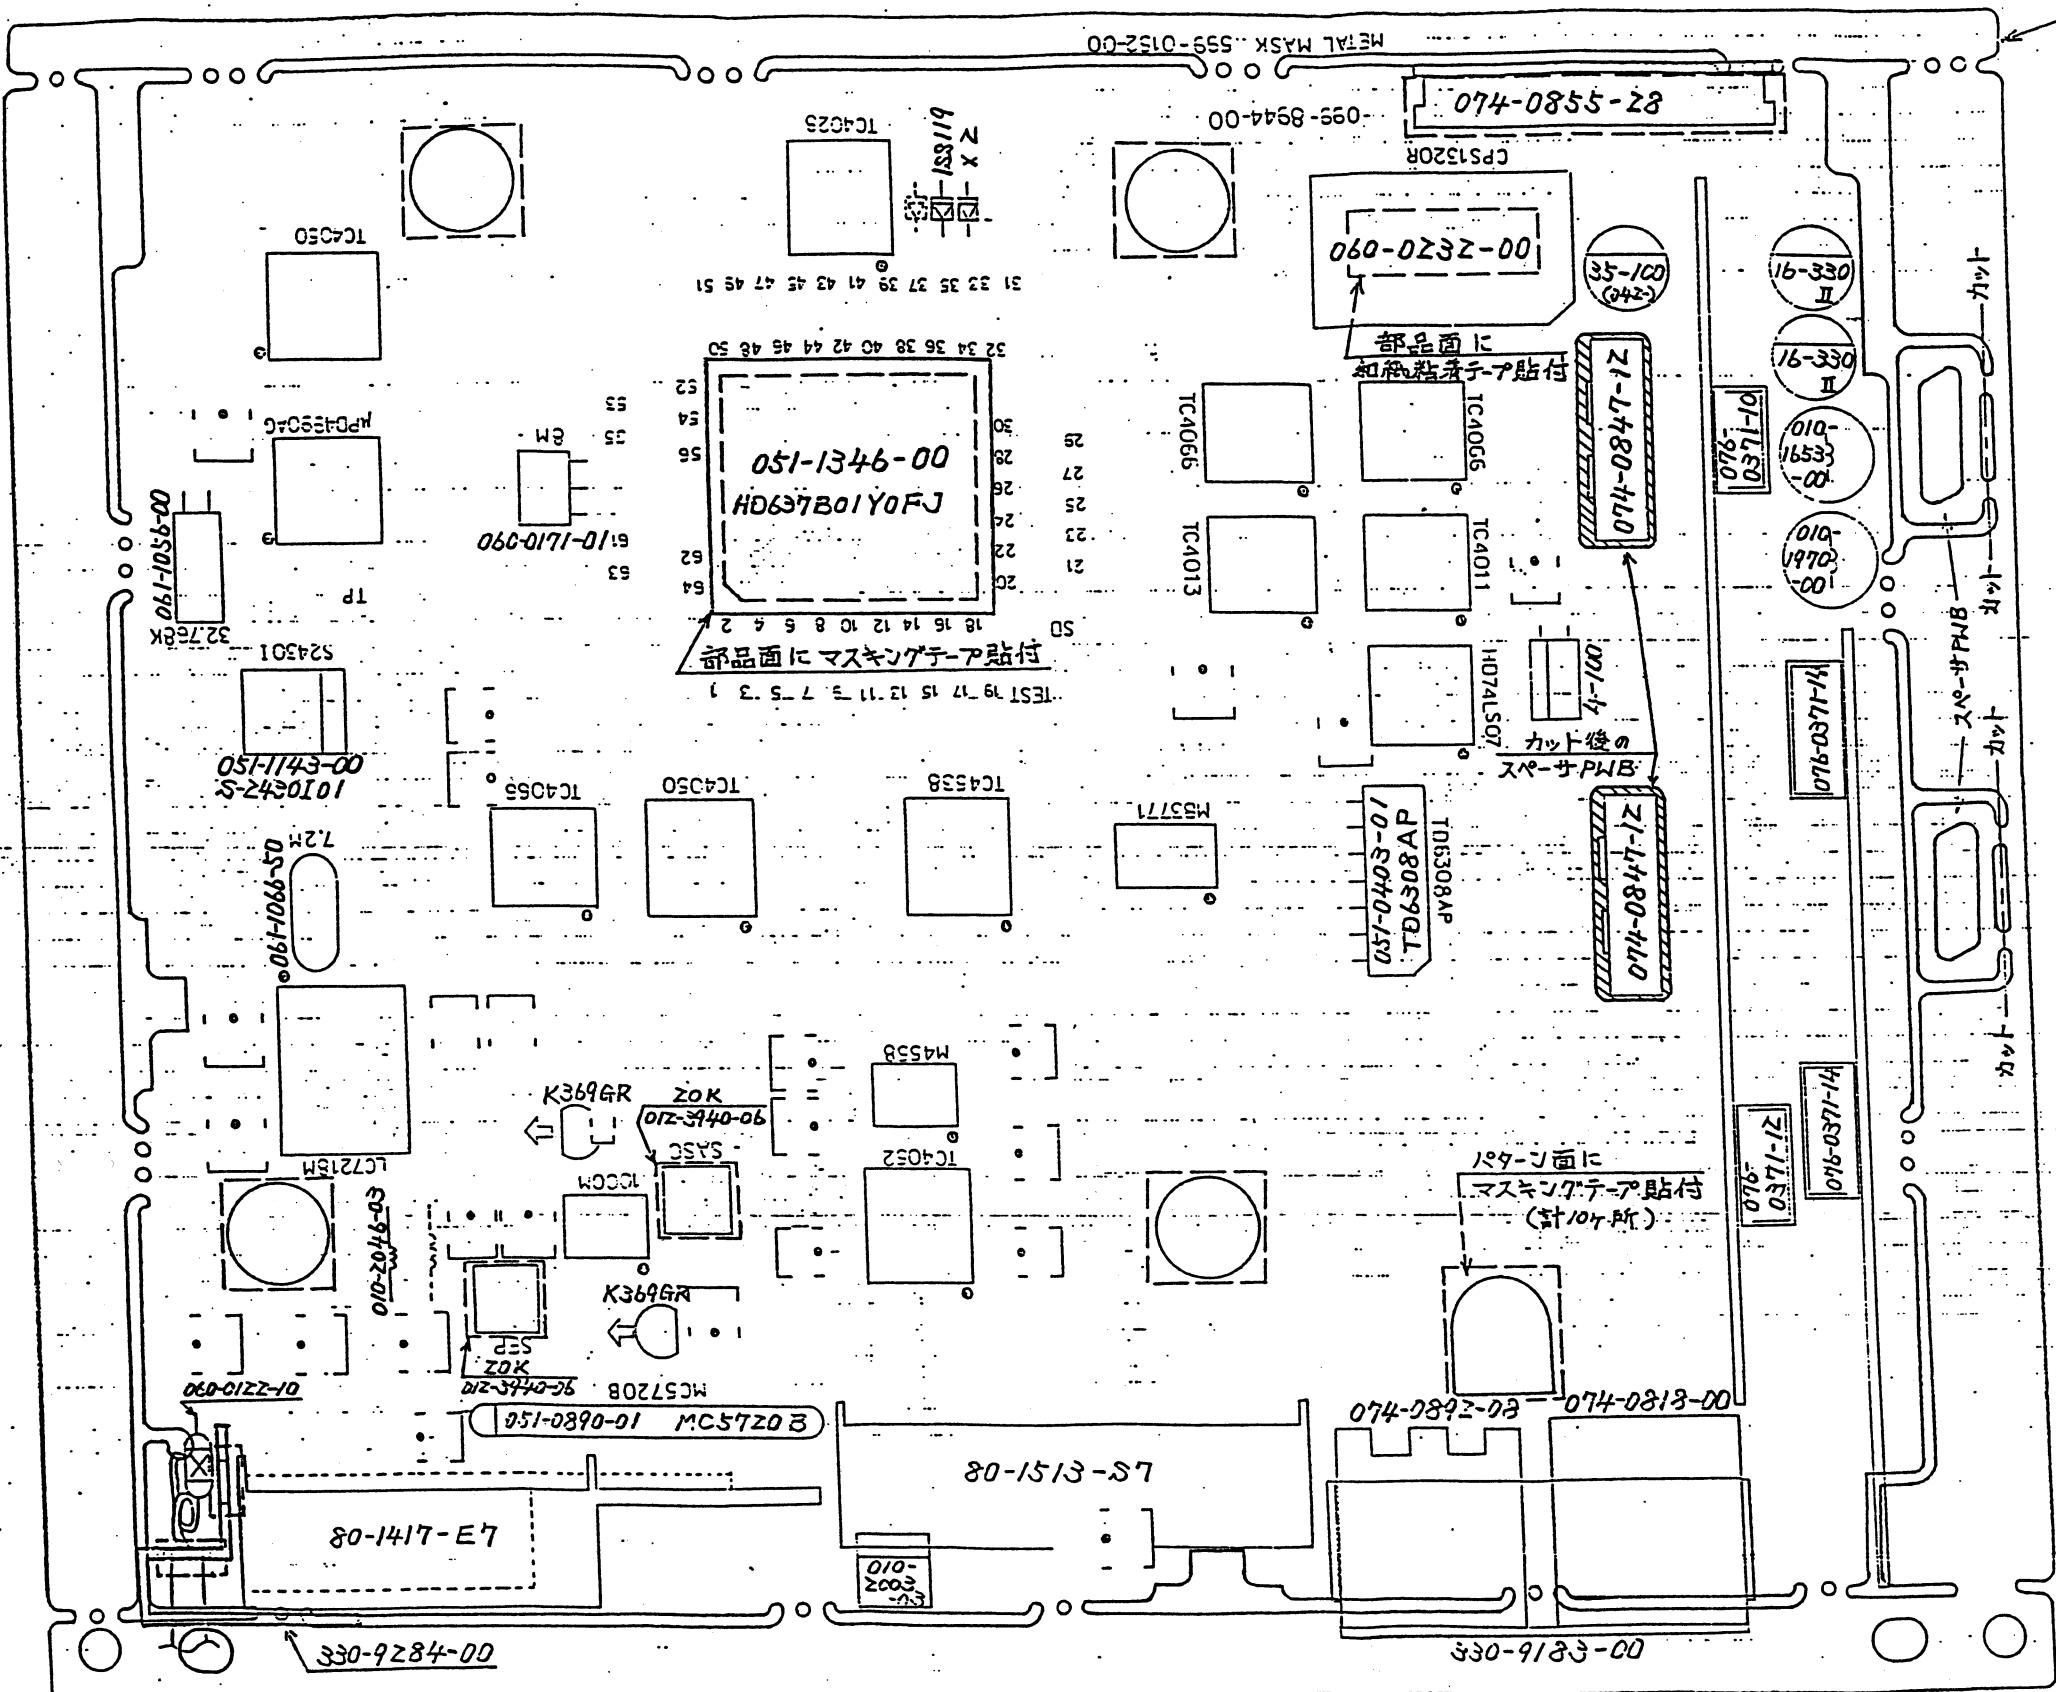

### 前加工


- 部品面にマスキングテープ貼付 (1ヶ所)
- 部品面に和紙粘着テープ貼付
- 溶接せざる品オーバーハング

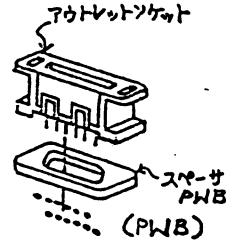

### 先付け

- スペーサーPWBをカット後  
アウトレットソケット(074-0847-)と  
PWBへ差し込む。(各2ヶ)  
仮はんだ付け(各12ヶ所)

(注) AM TUNER PACK (80-1513) 取扱前に

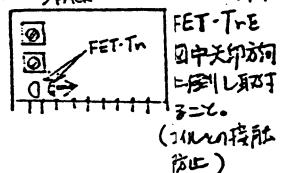

- プラグ(076-)…全ての足を仮はんだ付けする。
- アウトレットソケット(074-0892-, -0818-)…仮はんだ各2ヶ所
- その他全ての部品。

デイツアはんだ付けを行う  
マスキングテープを剥し、アルコールにて拭く

### 後付け

- フラットパッケージ(051-1346-)…足64本
- VR(012-)…フレキシケート(074-0855)

### 後加工

- 部品面洗浄…SOP74T IC部
- SSO-9284-…足2本、爪曲げ径、はんだ付け  
芯線をパターン面にはんだ付け、線端凸型



### 注意事項

- 051-0890-は、当ボリNG。
- 半周旋VR(012-)2ヶは、半周引抜センタ端子は足がつこと


### 使用工具


- デイツアはんだ付け工具…アルニード
- はんだ付け工具…式…ラジオペンチ
- マスキングテープ…和紙粘着テープ
- ニッパー

代替  $\frac{117}{051-0855-00} \rightarrow \frac{188/175}{051-0855-00}$

記事	日付	実行者	機種名	部品番号	作業者名
PWB 加工	PE-5533B-A	—	—	DM	クラリオン株式会社


製造年月日 89年 10月 9日  
出荷日 53-5533-A7-0  
販売店名  
販売店番号

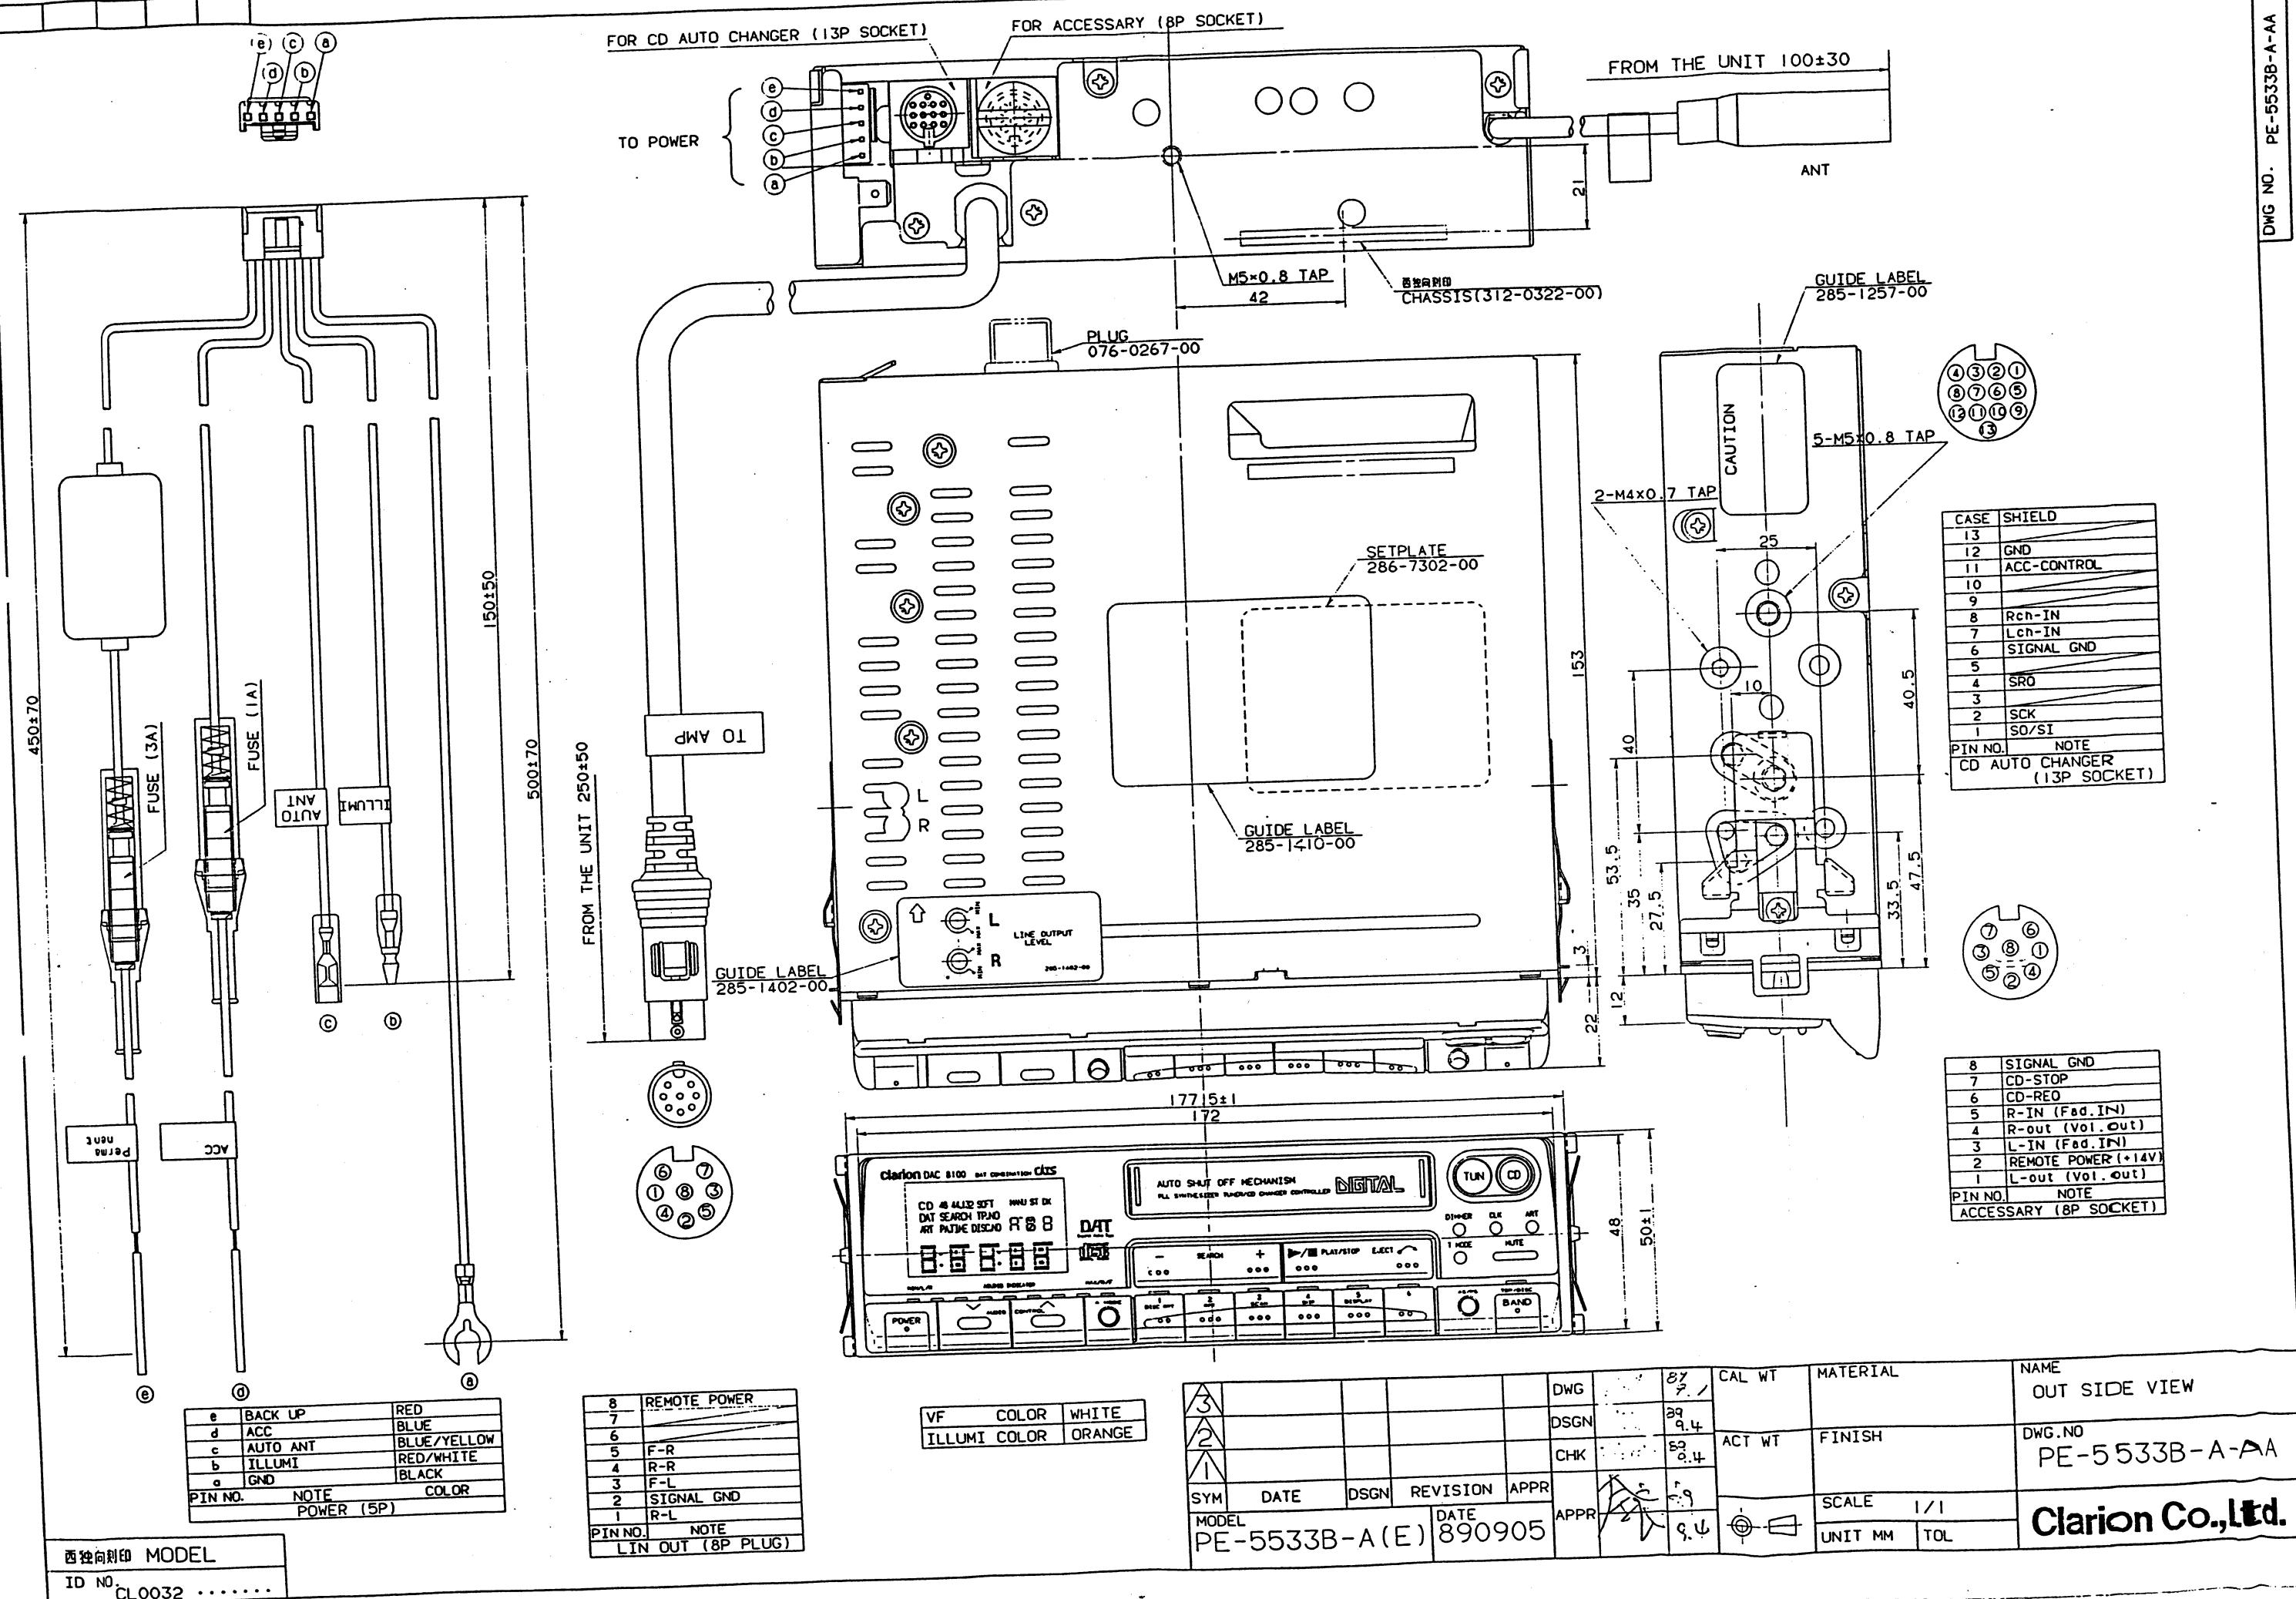

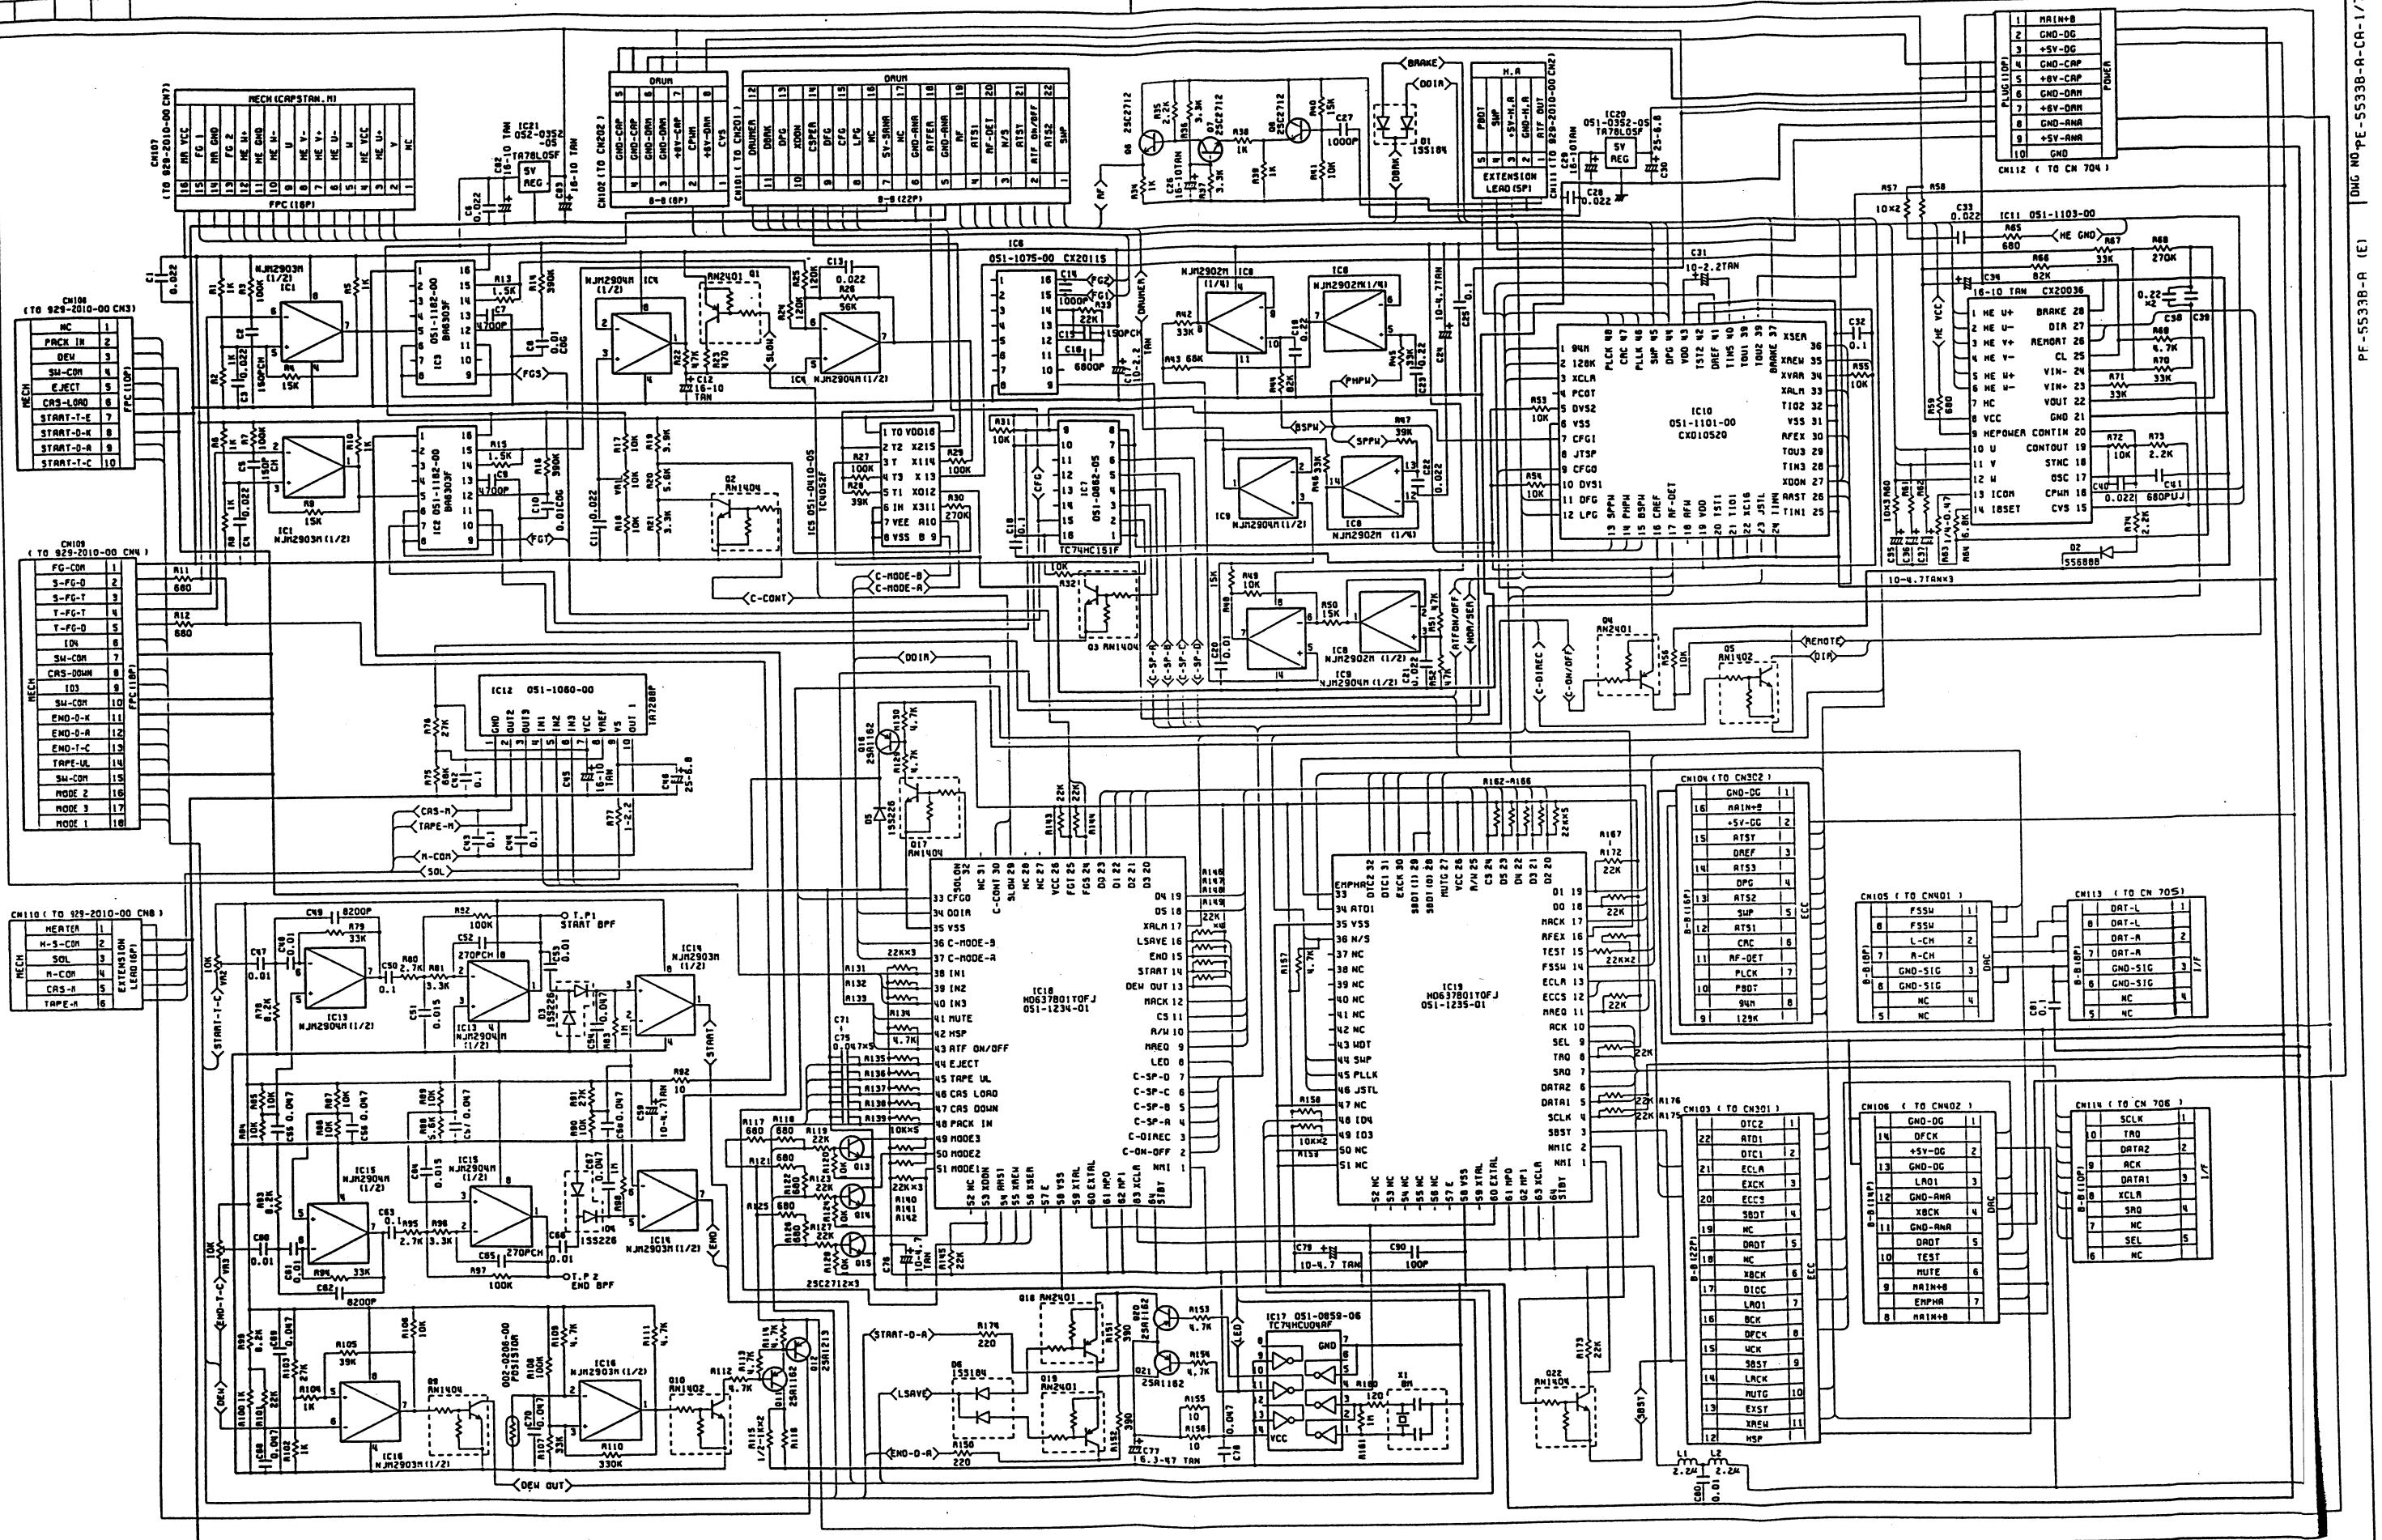

IC1, IC14, IC18 = 051-0559-  
IC4, IC9, IC13, IC15 = 051-0350-  
IC8 = 051-0506-

				DWG	CAD	890905	CAL WT (g)	MATERIAL	NAME
				DSGN		89-95			CIRCUIT DIAGRAM
				CHK		89-95	ACT WT (g)	FINISH	DESIGN NO.
ITEM	DATE	DSGN	REVISION	APPR		89-95			PE-5533B-A-C1-1/7
MODEL	DATE	APPR			89-95	89-95	SCALE	FREE	
PE-5533B-A (E)	890905				89-95	89-95	UNIT MM	TOL	Clarion Co., Ltd.


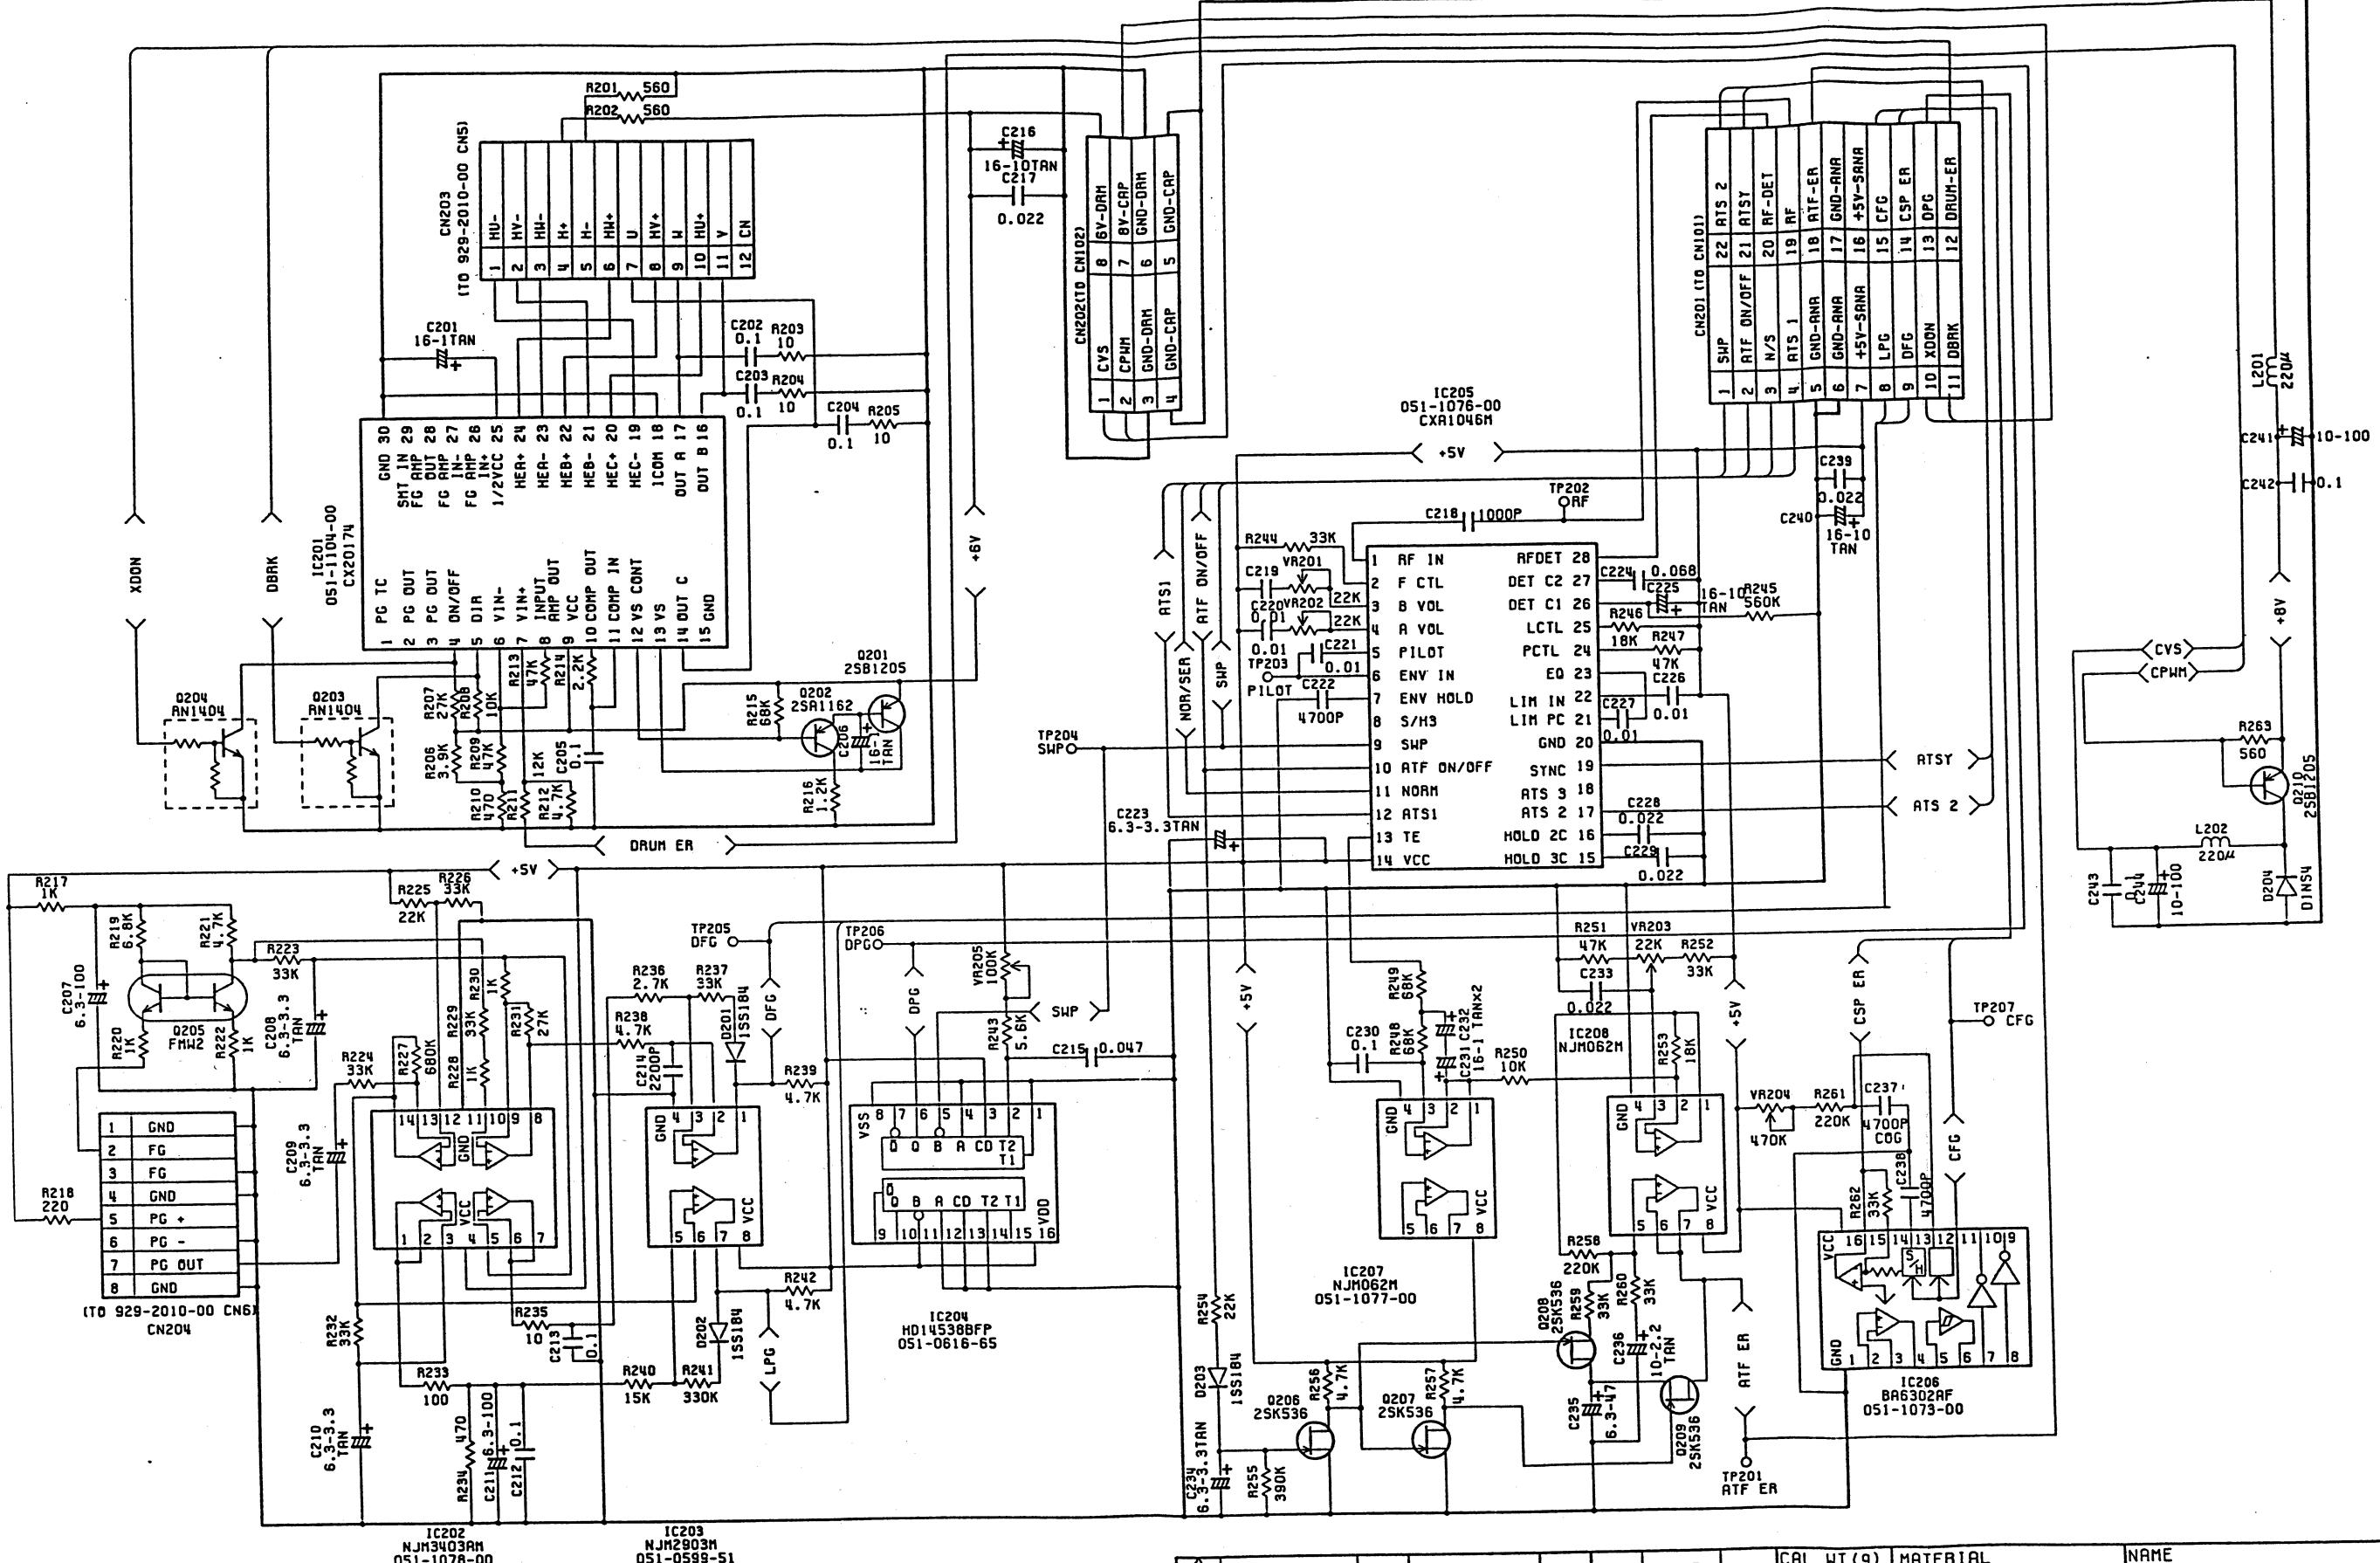



			DWG	CAD	890901	CAL WT (g)	MATERIAL	NAME
			DSGN		890905			CIRCUIT DIAGRAM
			CHK		890905	ACT WT (g)	FINISH	DWG NO.
SYM	DATE	DSGN	REVISION	APPR		89 05		PE-5533B-A-CA-2/7
MODEL	DATE		APPR		890905		SCALE FREE	Clarion Co.,Ltd.
PE-5533B-A (E)	890905						UNIT MM TOL	

PE-5533B-A (E)


S386CO


# Vintagecaraudio.se

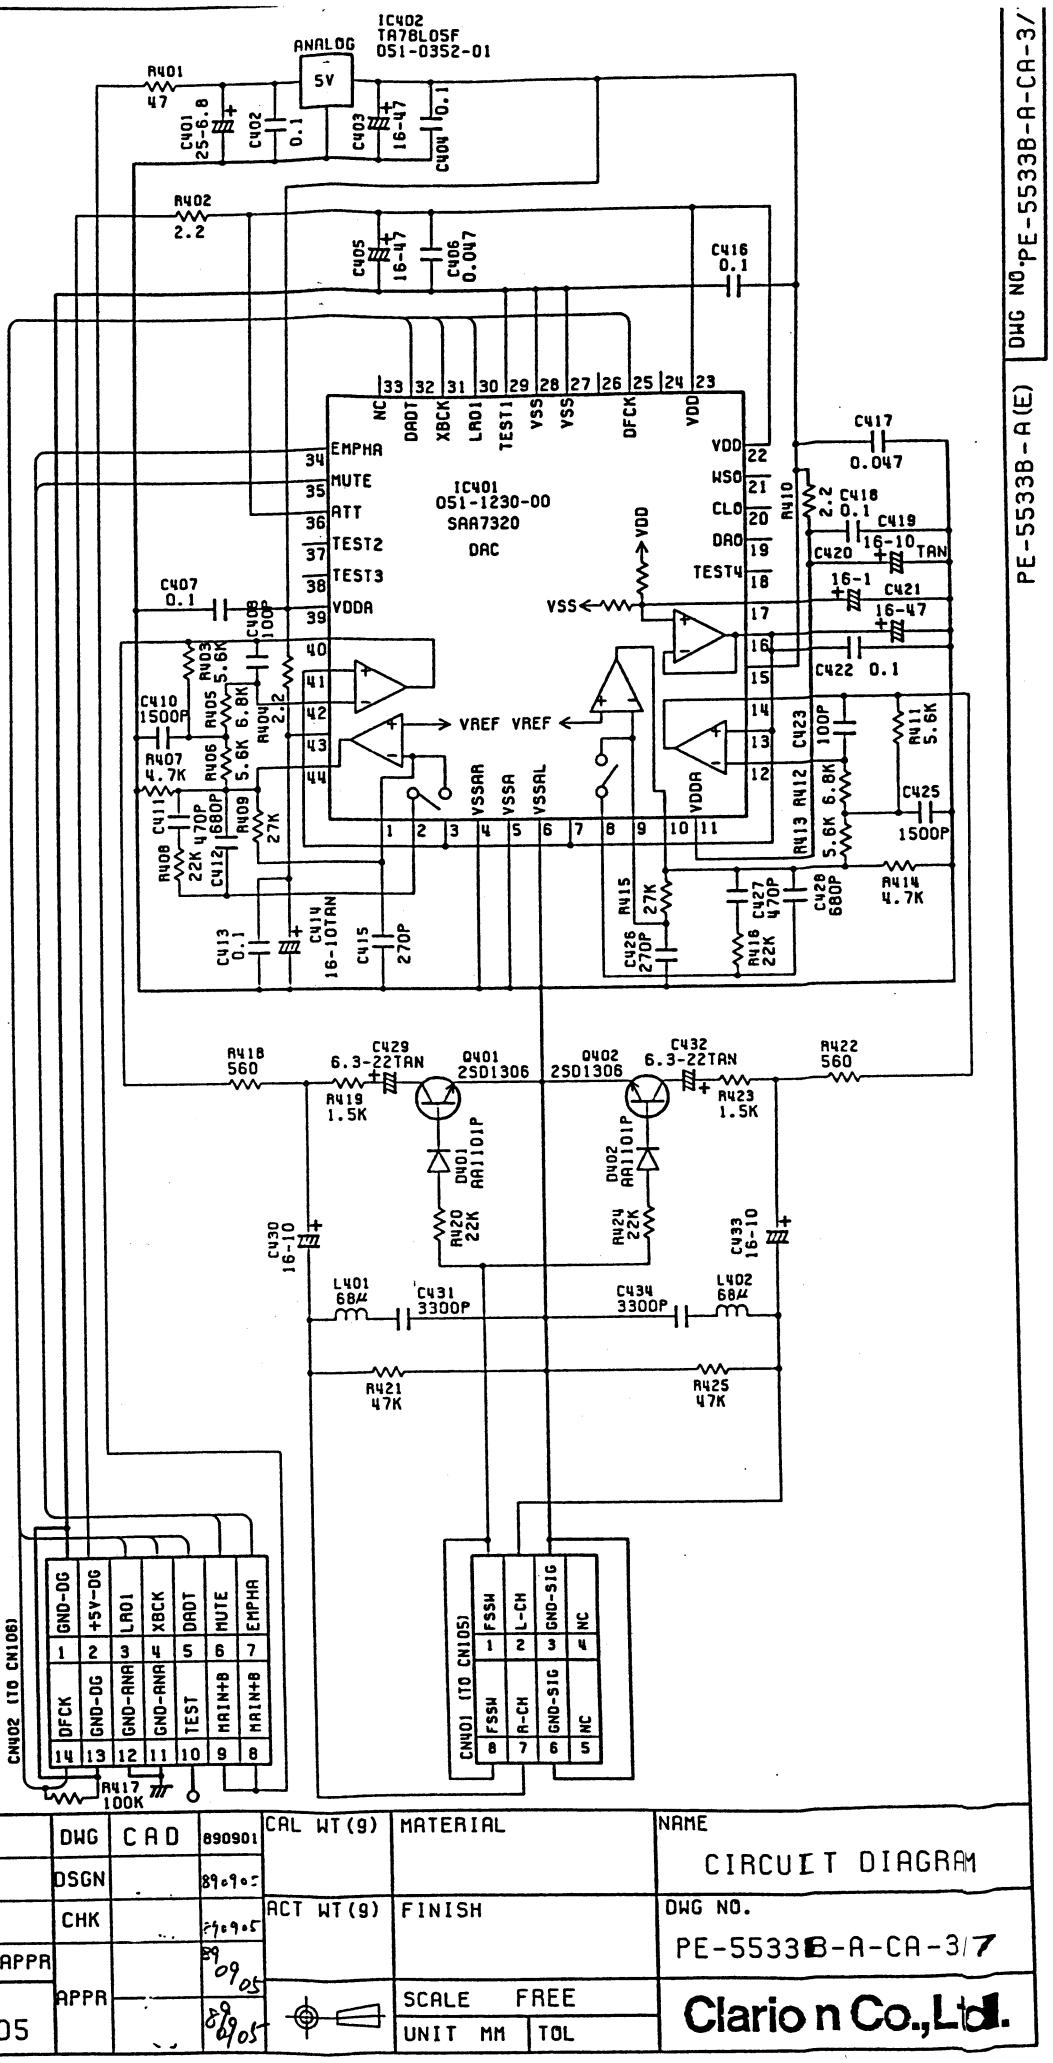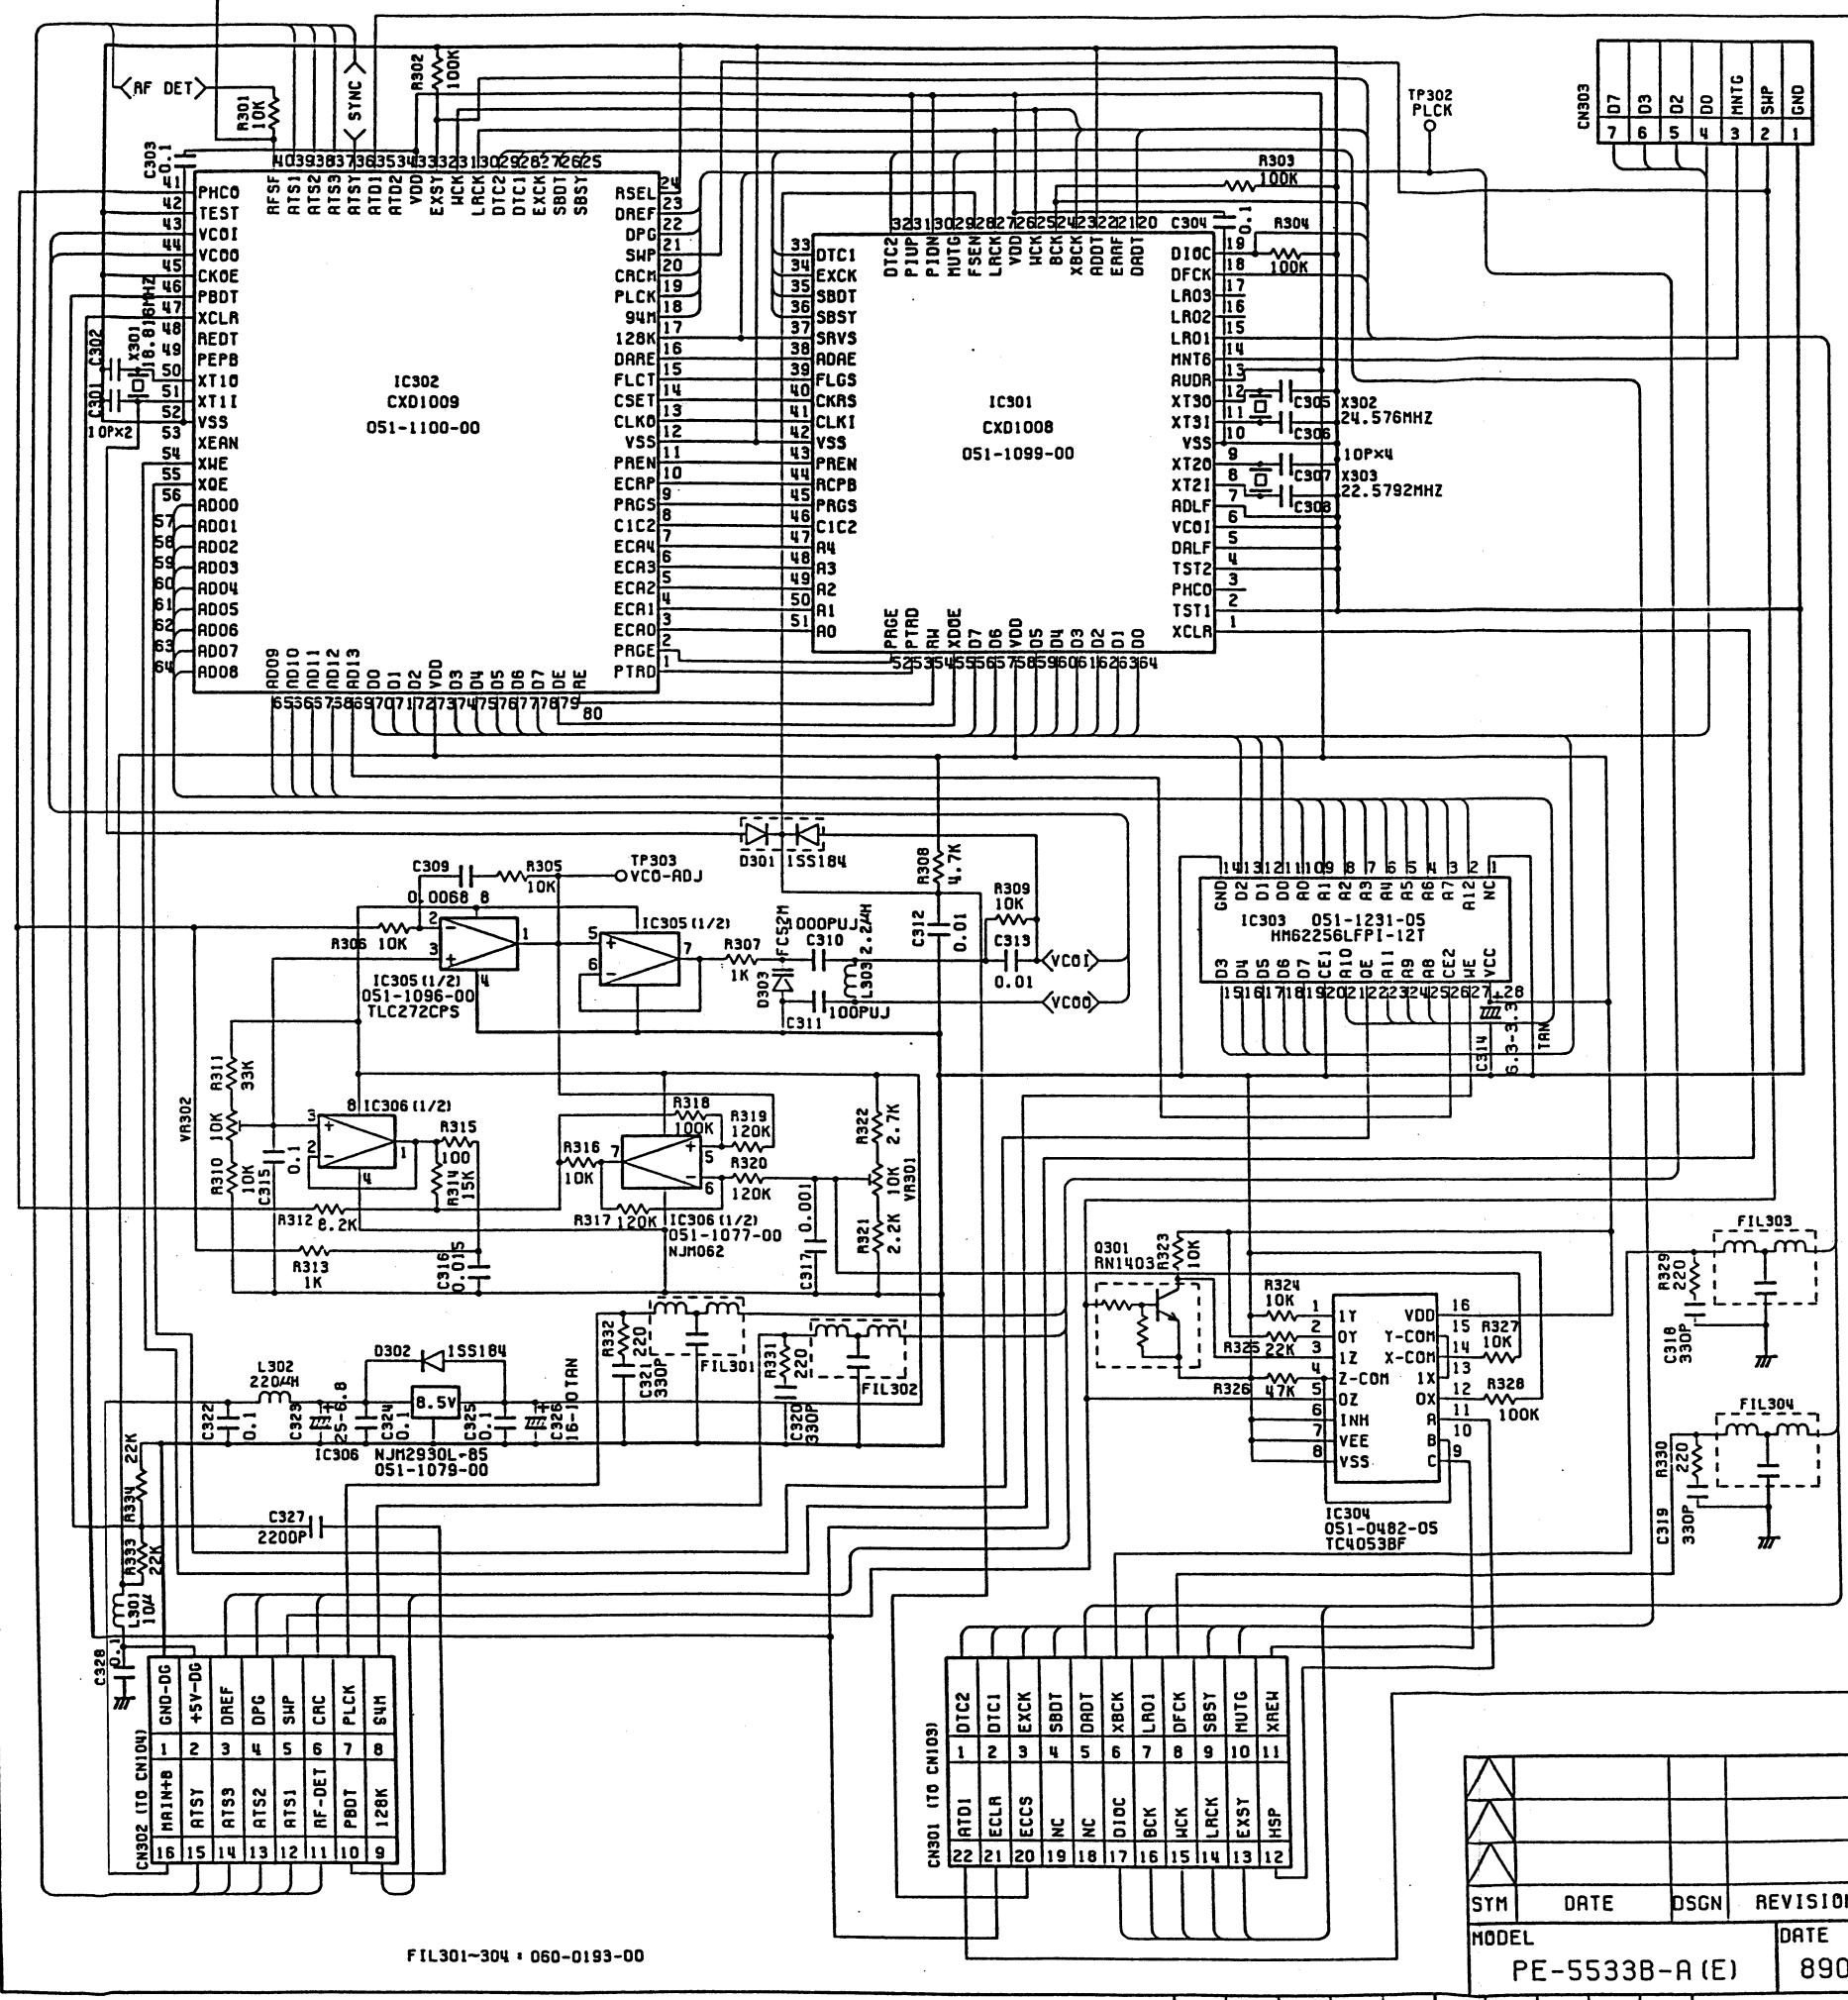

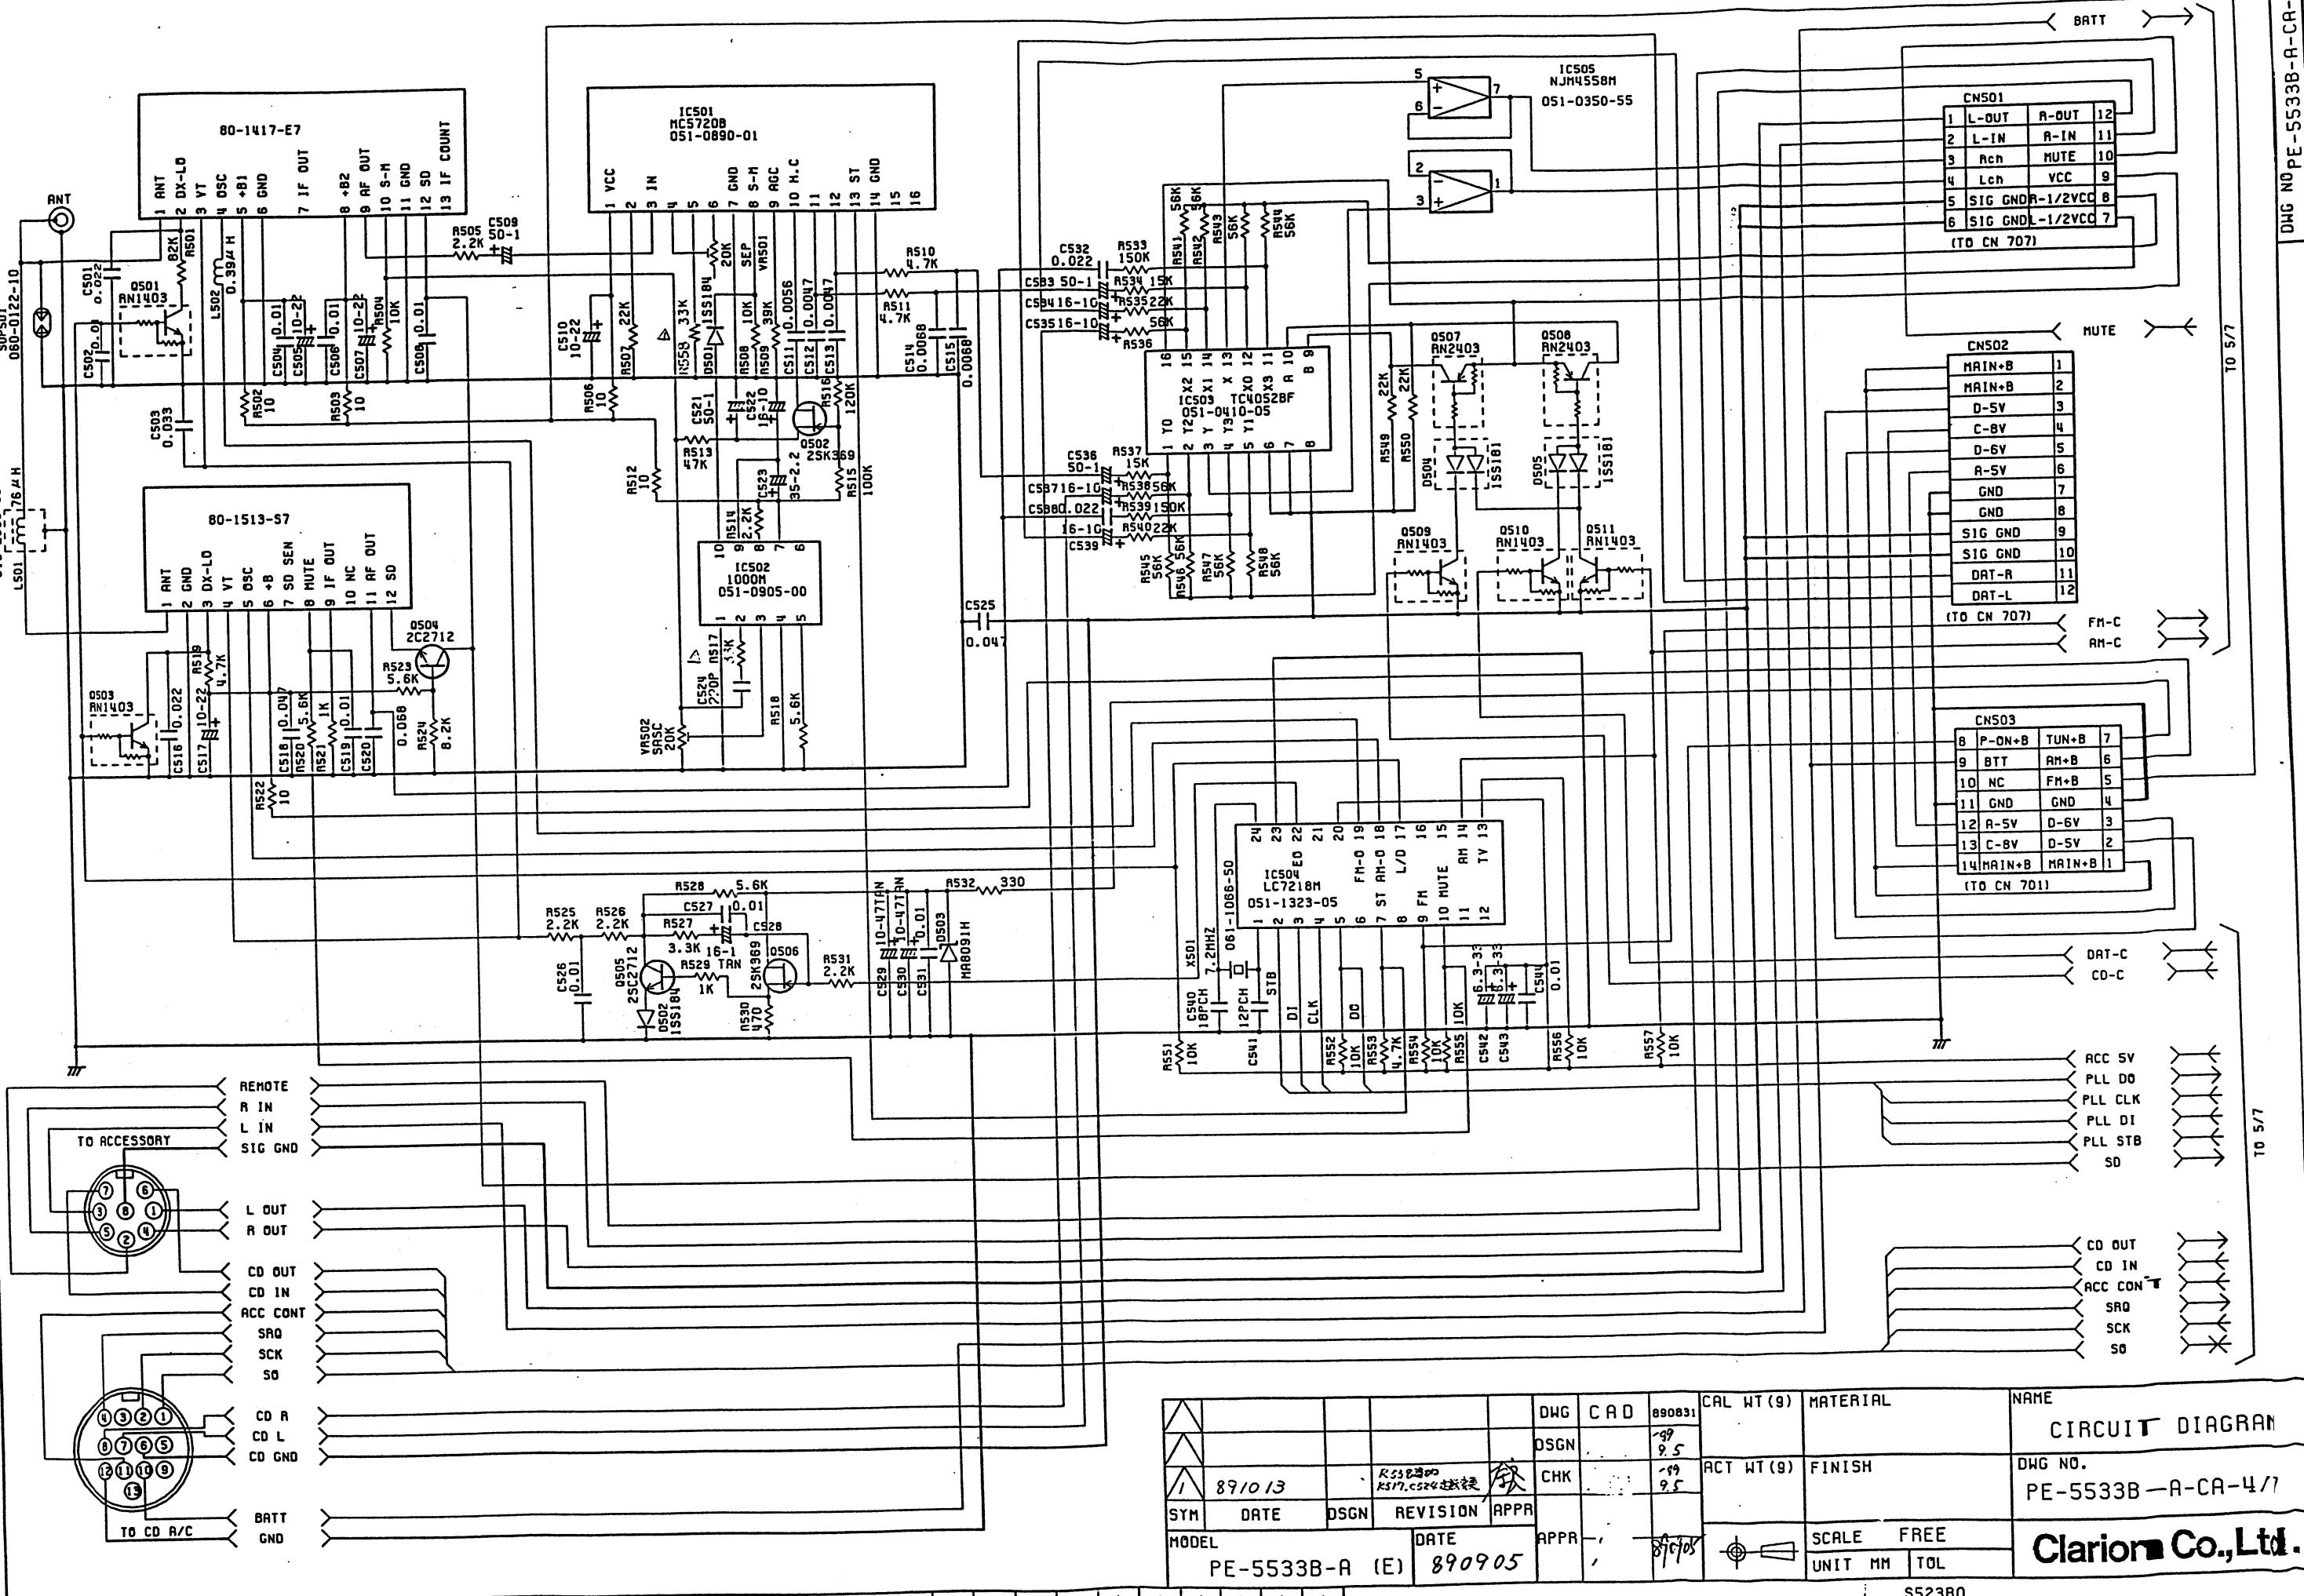


# Vintagecaraudio.se

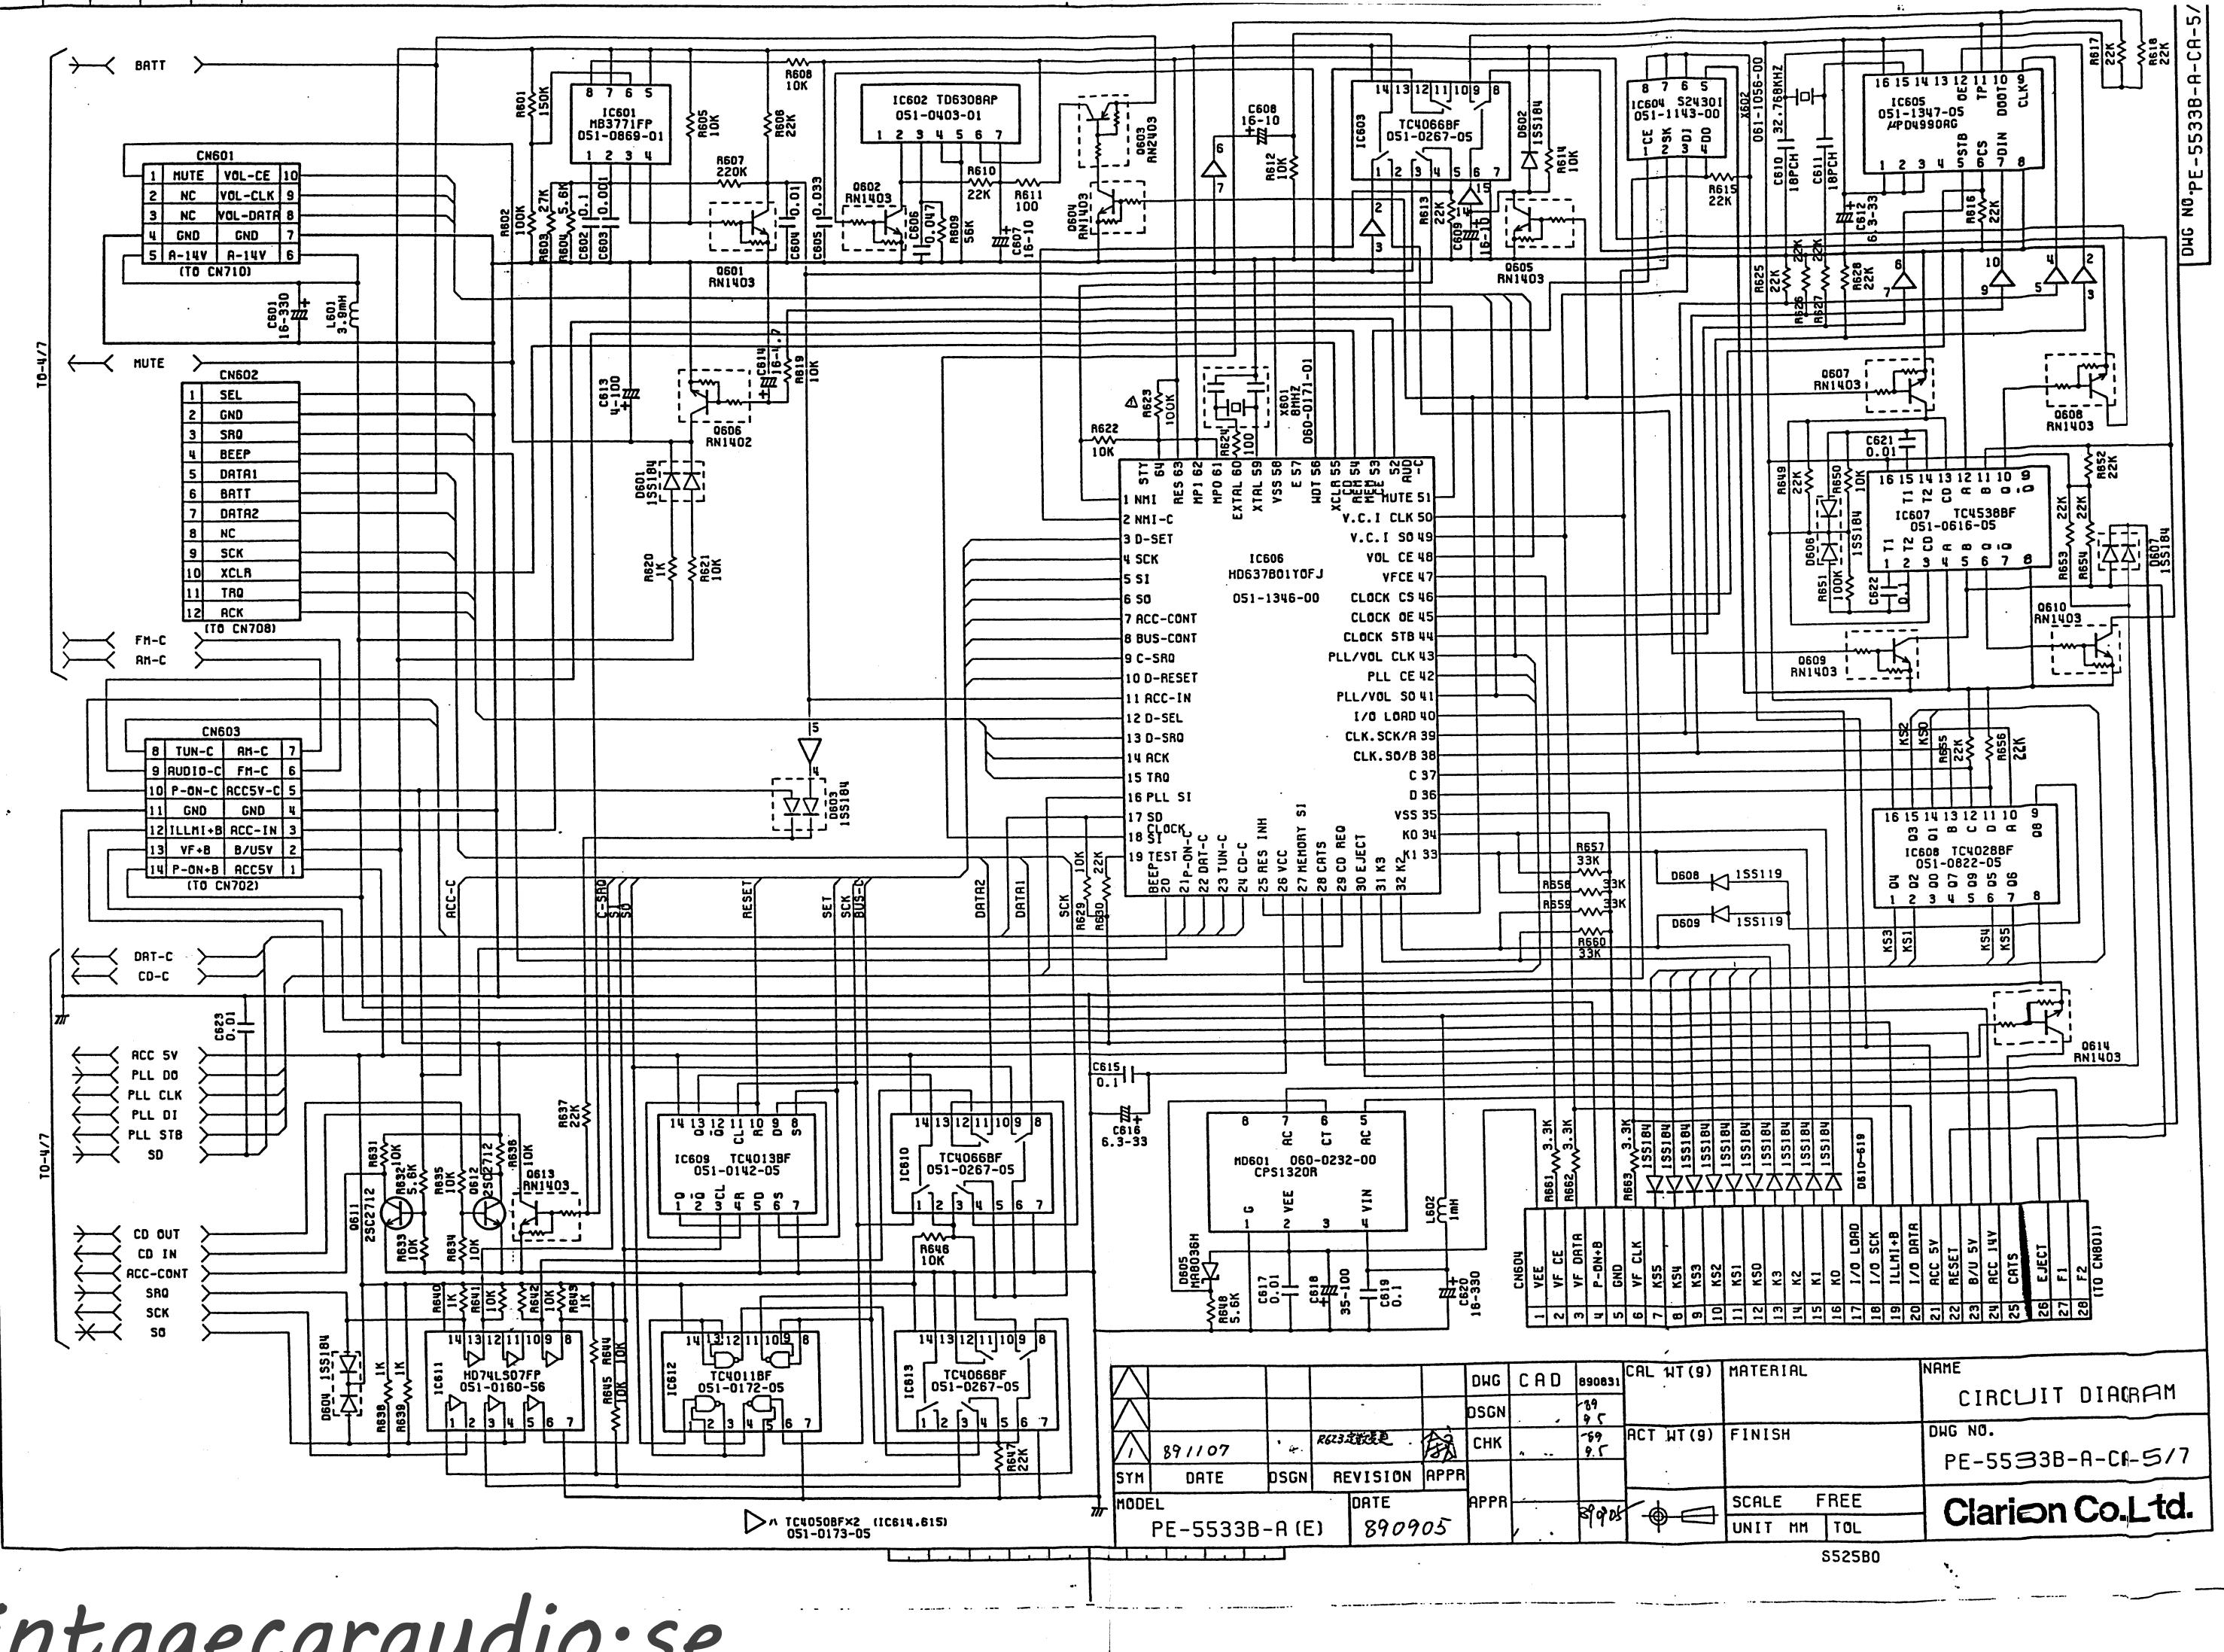

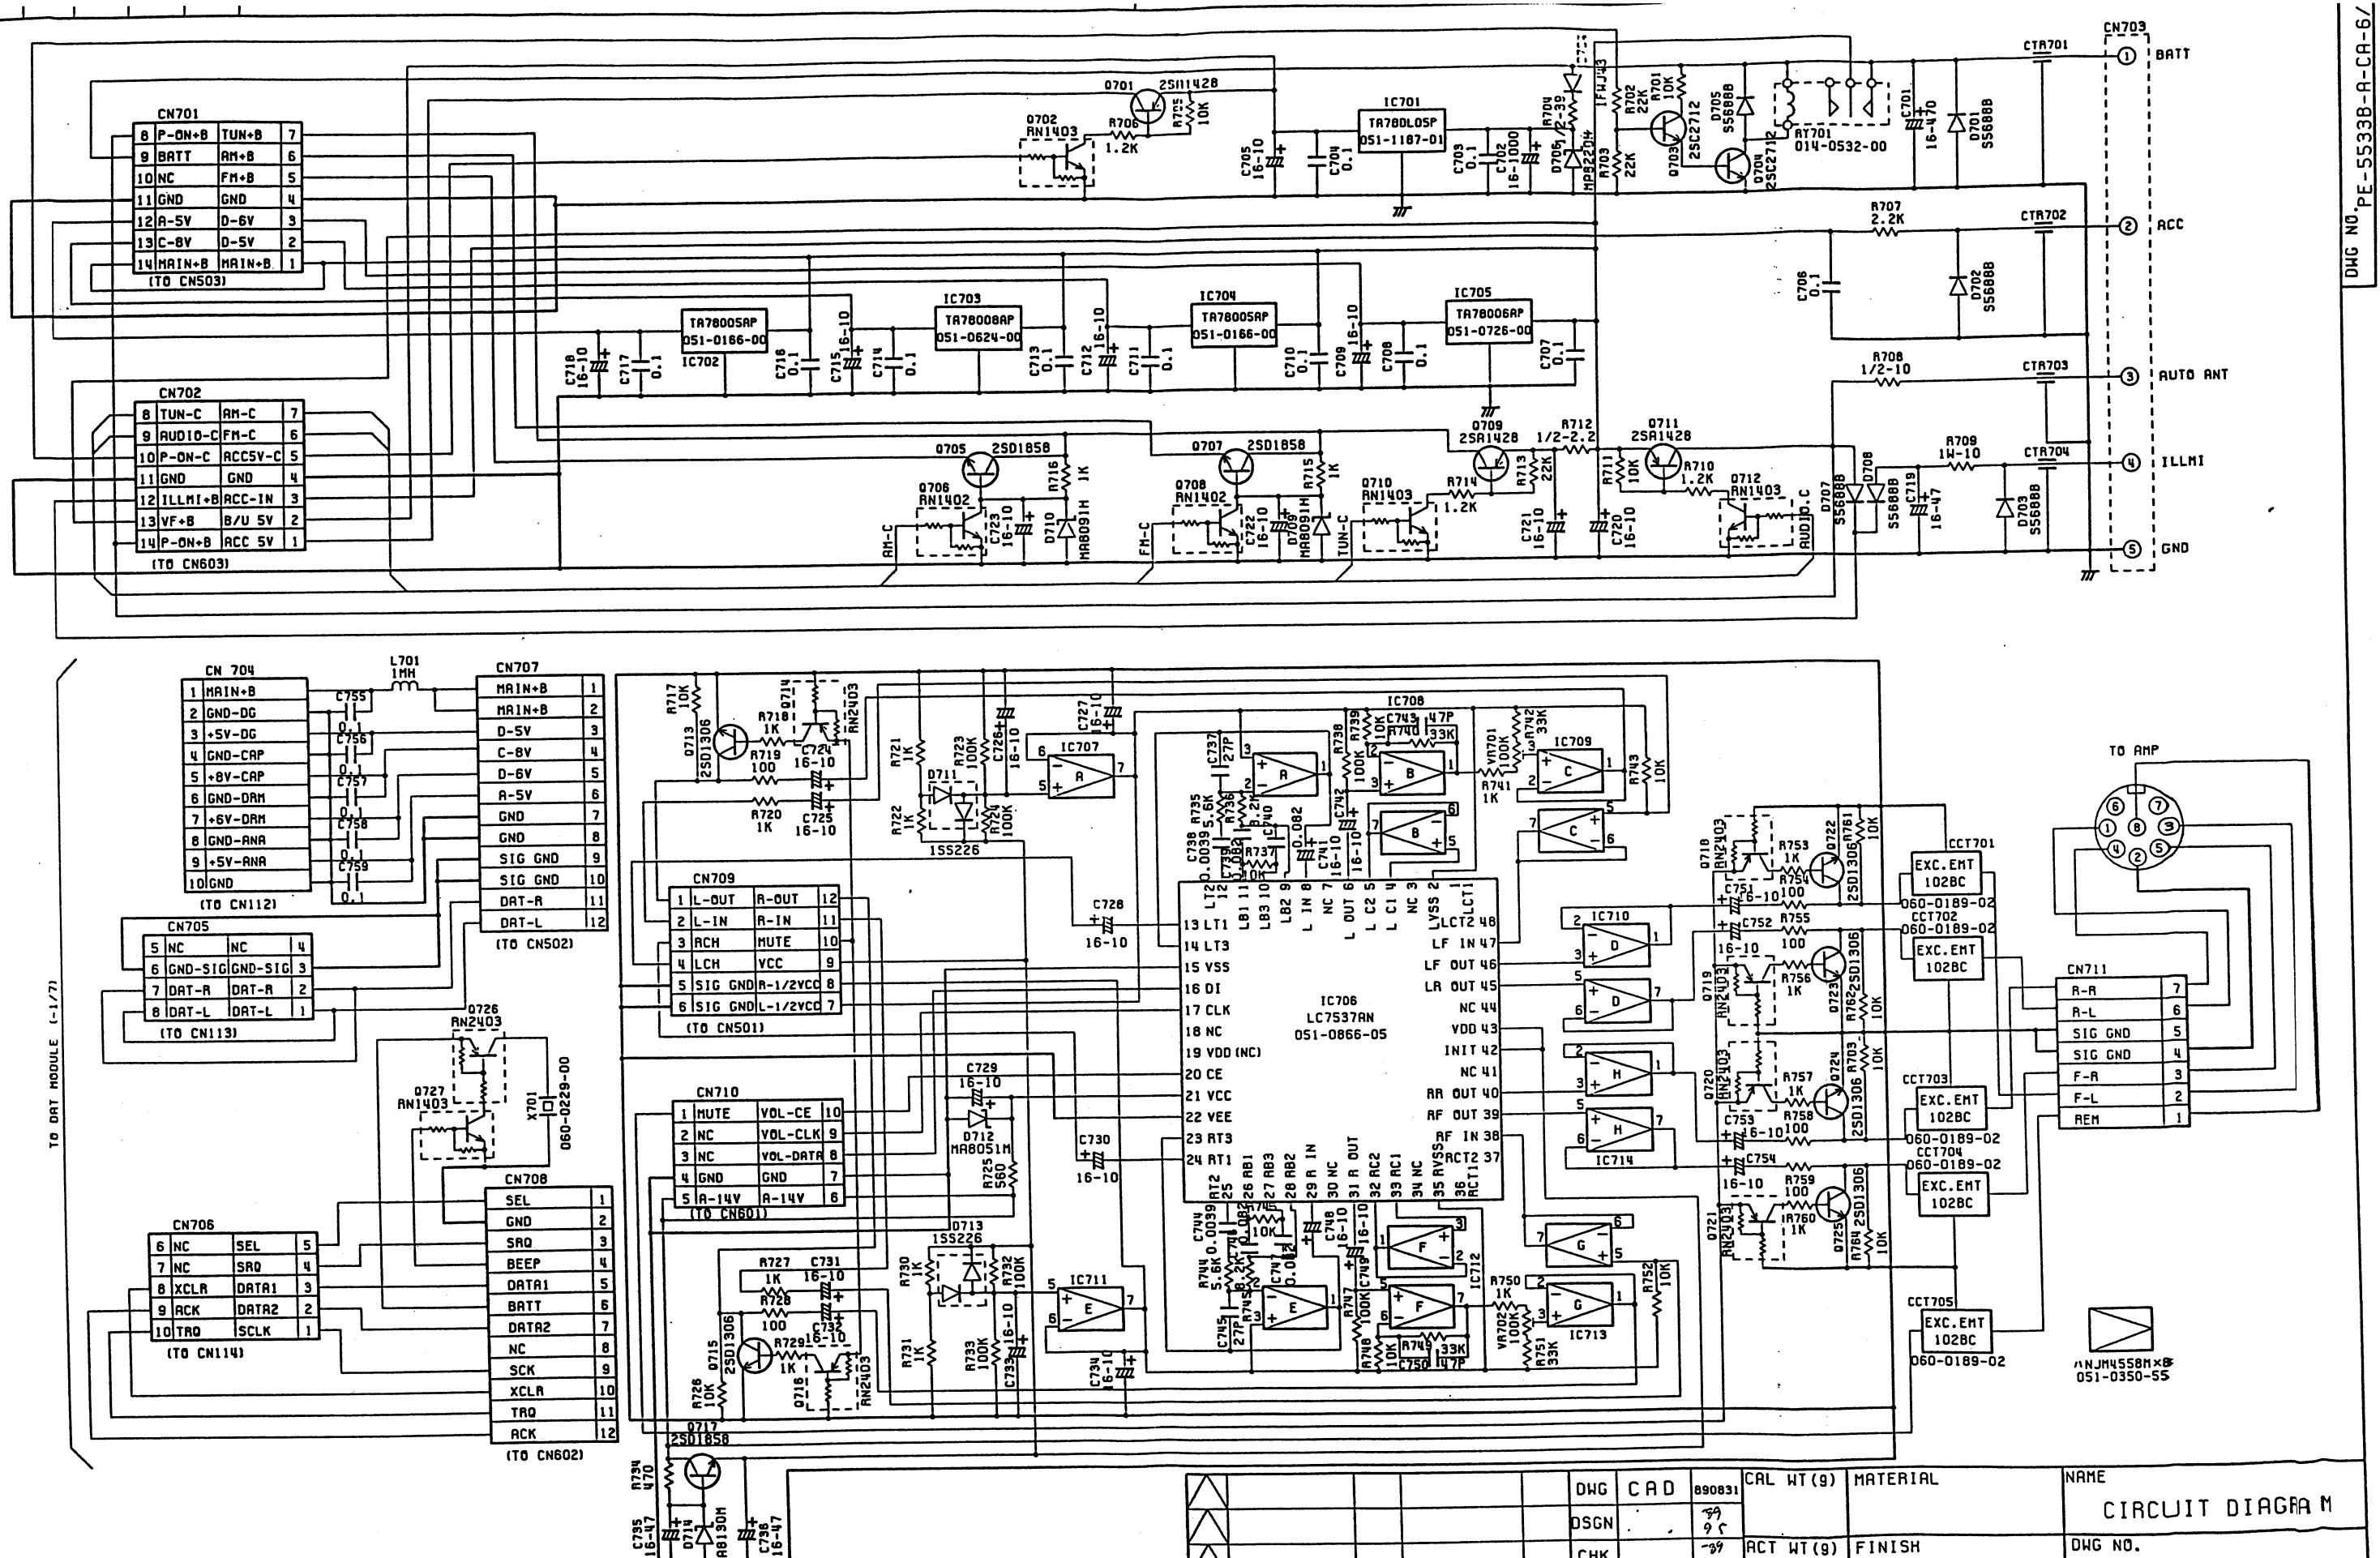


# Vintagecaraudio.se

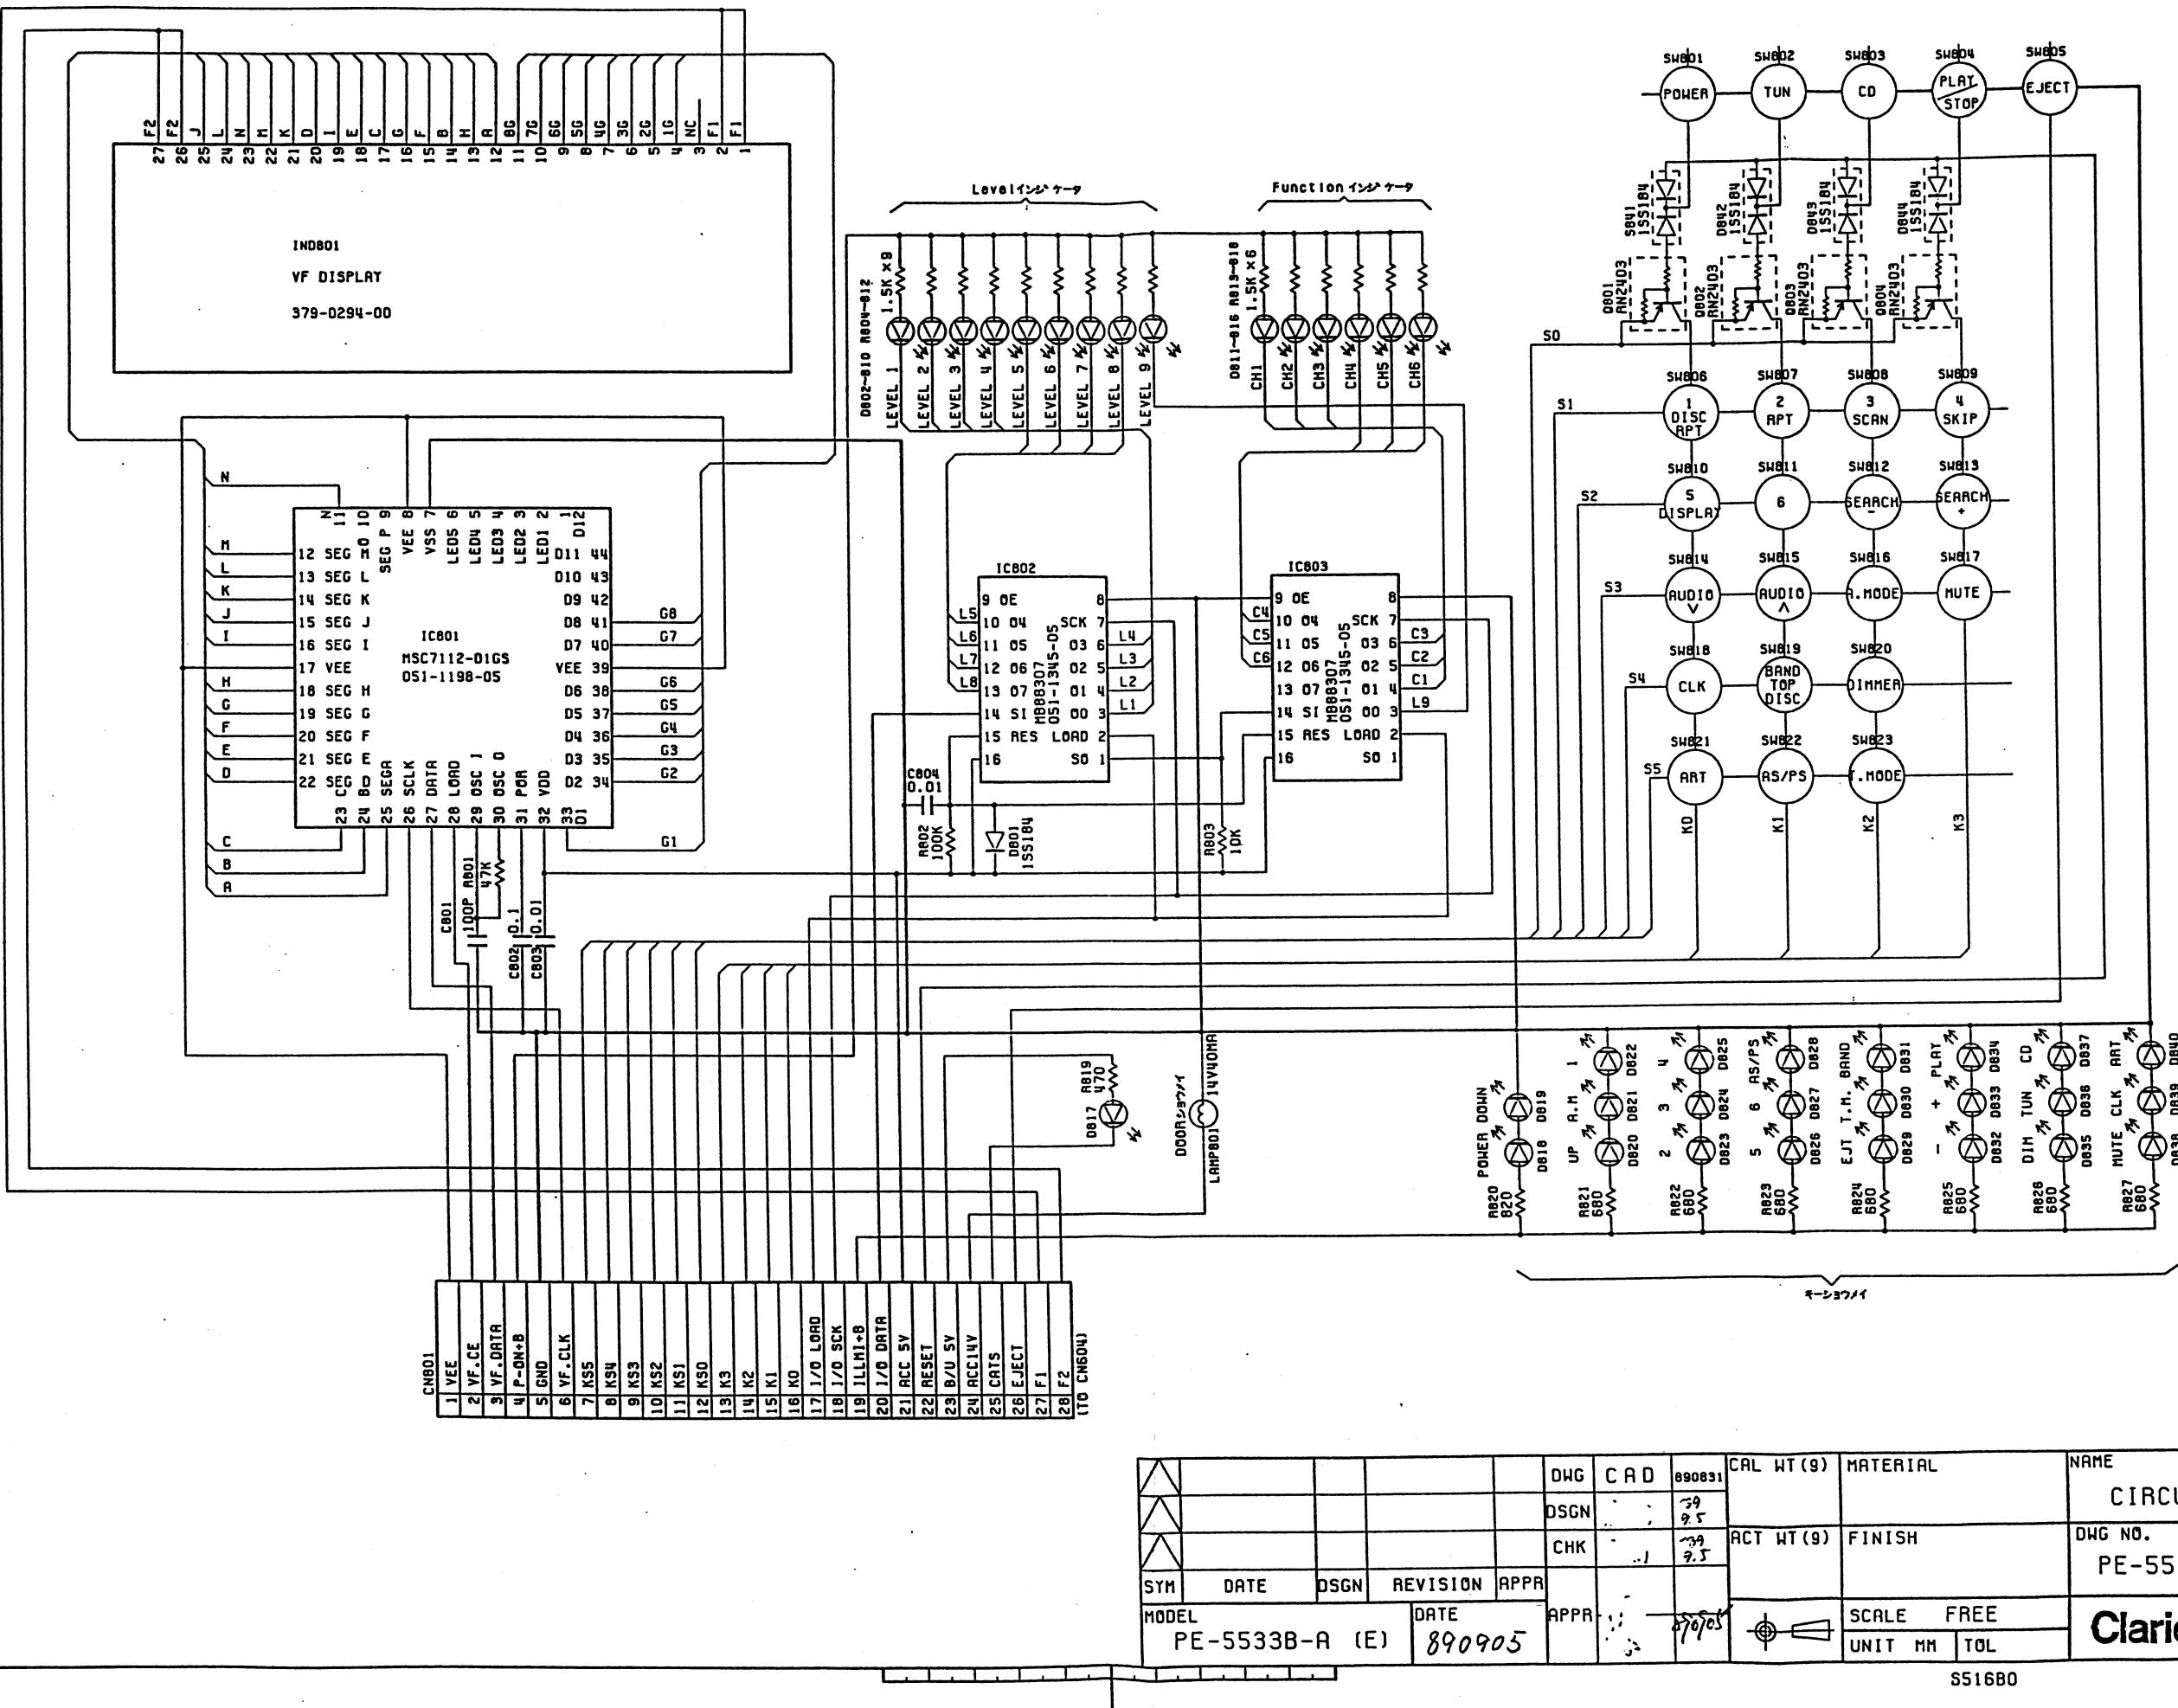




IC1 051-1193-70

DWG NO 929-2010-00-CA-1/2

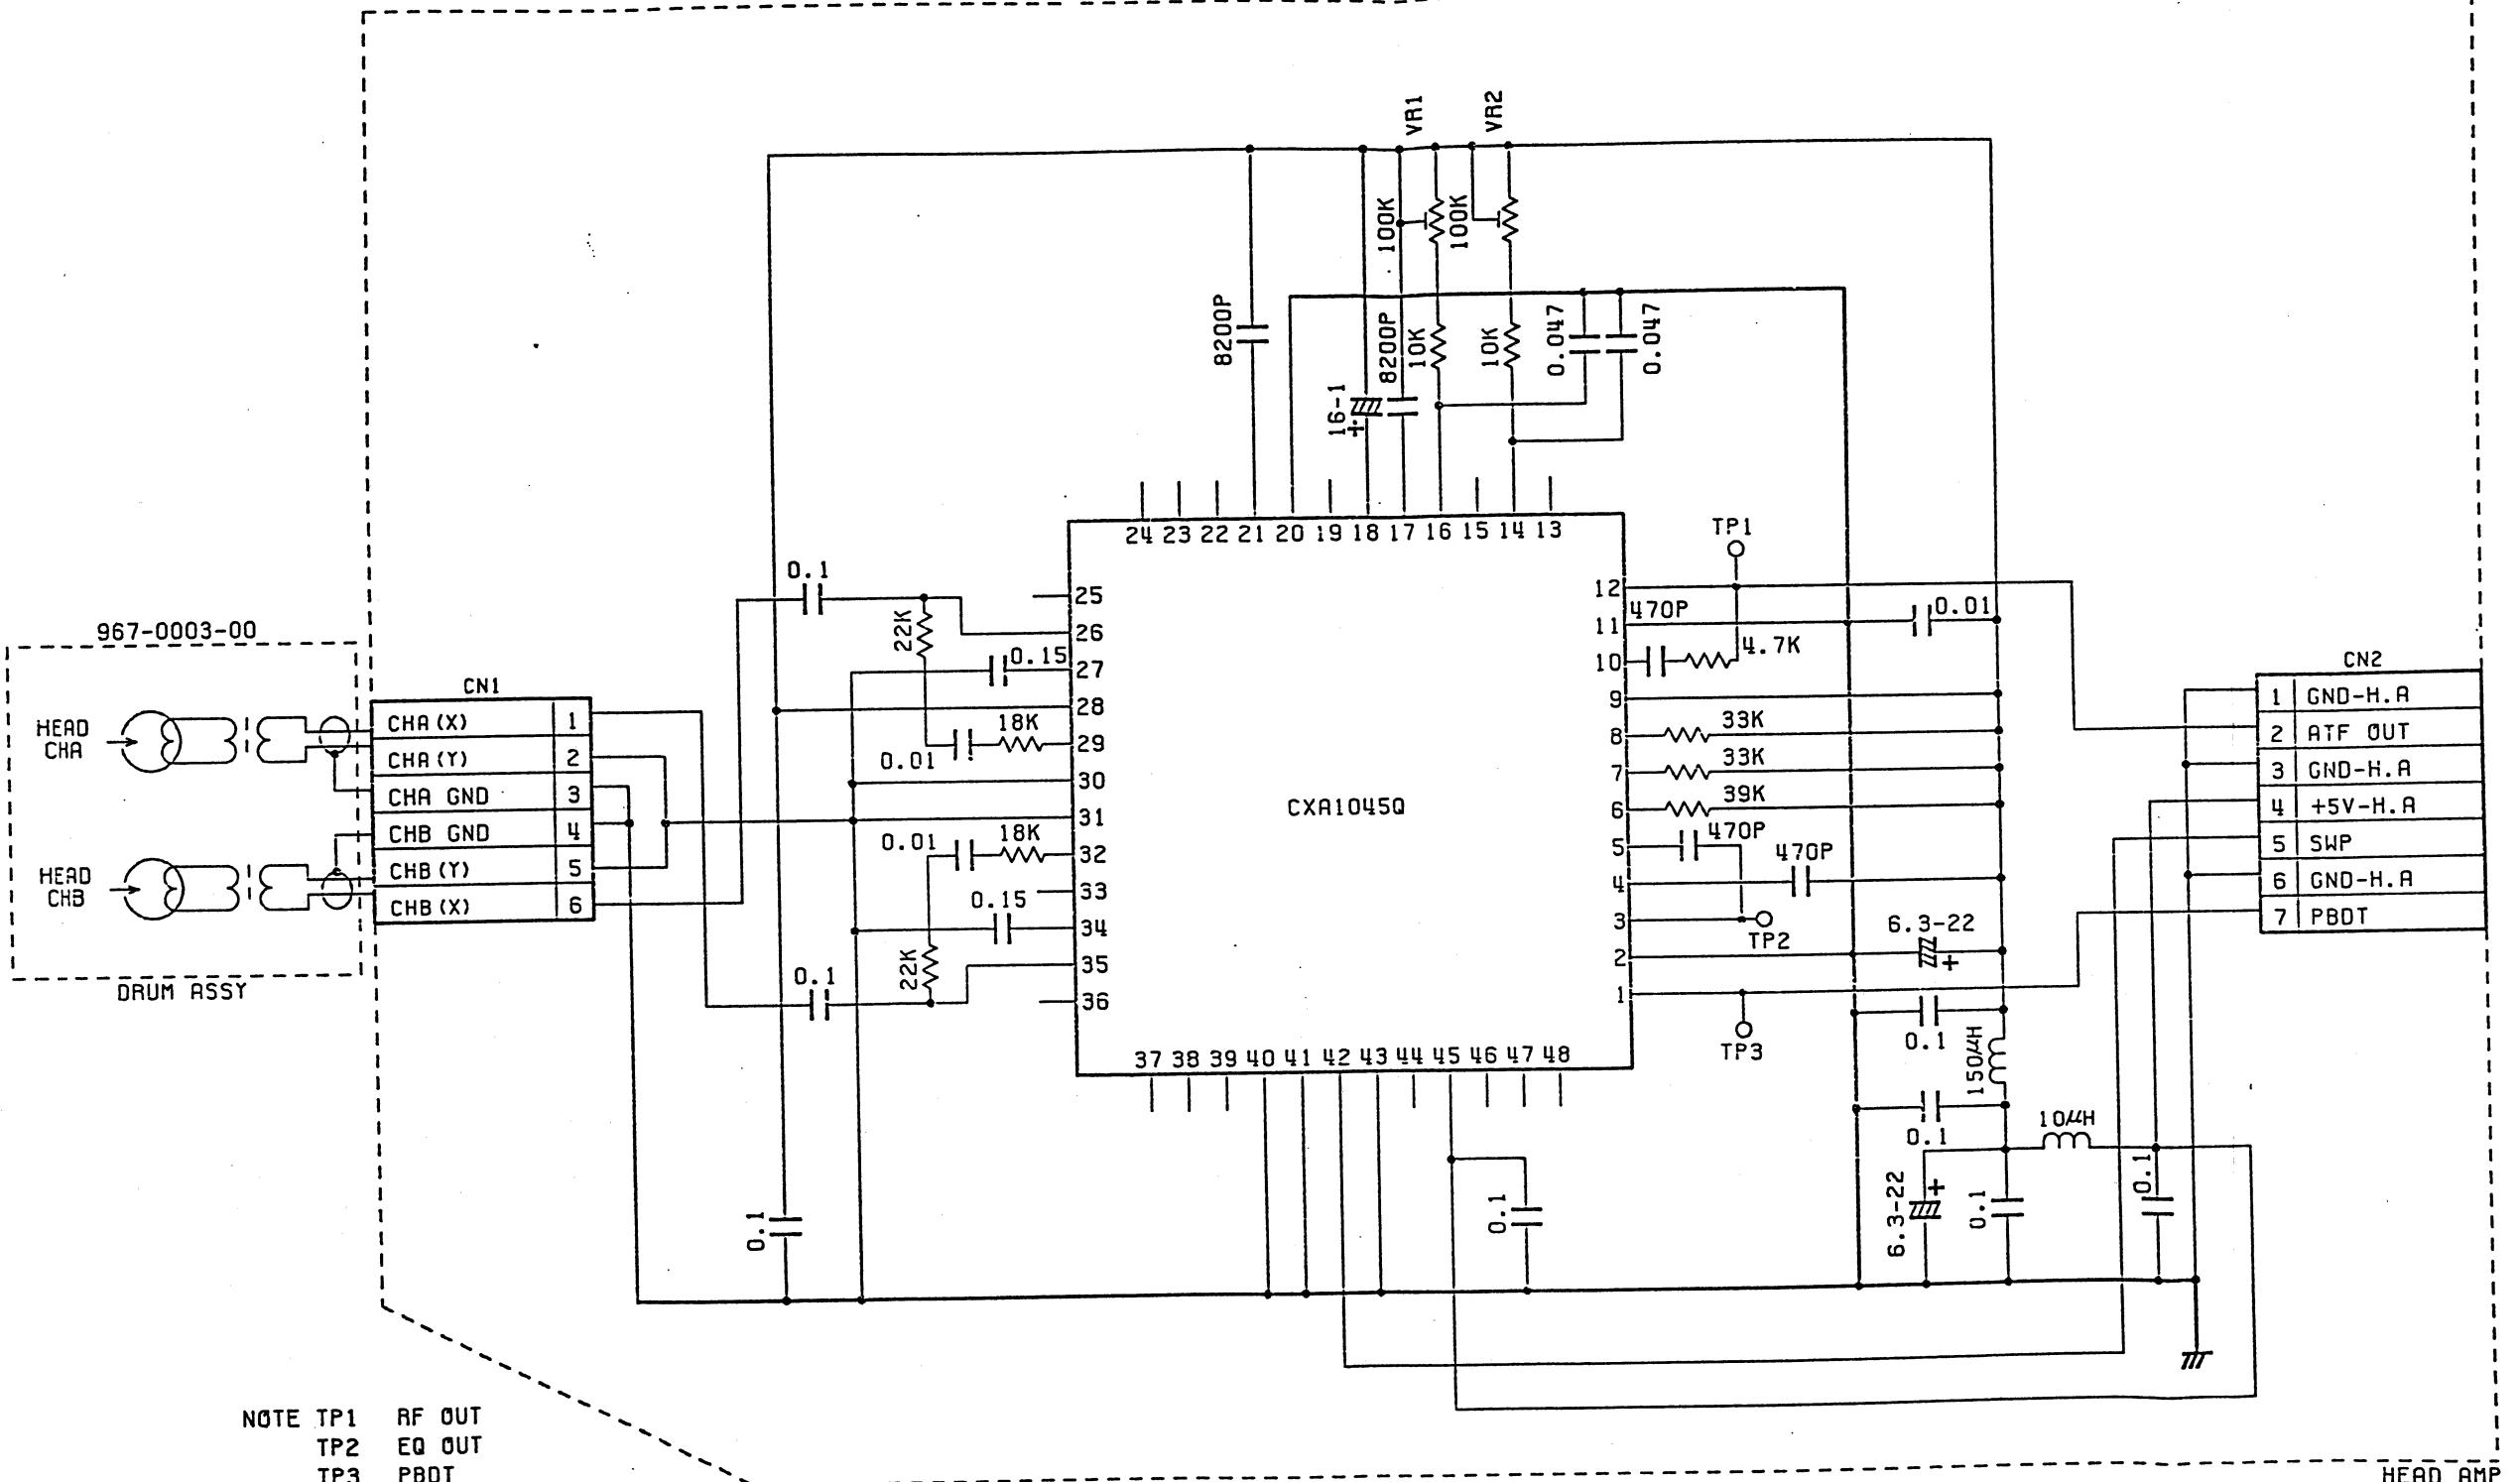


SYM	DATE	DSGN	REVISION	APPR	DWG	CAD	CAL WT (g)	MATERIAL	NAME
					DSGN		881208		CIRCUIT DIAGRAM
					CHK		881209	ACT WT (g)	FINISH
MODEL	DATE	DSGN	REVISION	APPR			88 12 09		DWG NO. 929-2010-00-CA-1/2
929-2010-00	88/12/12						88 12 12	SCALE FREE	Clarion Co.,Ltd.
								UNIT MM TOL	


S257B1

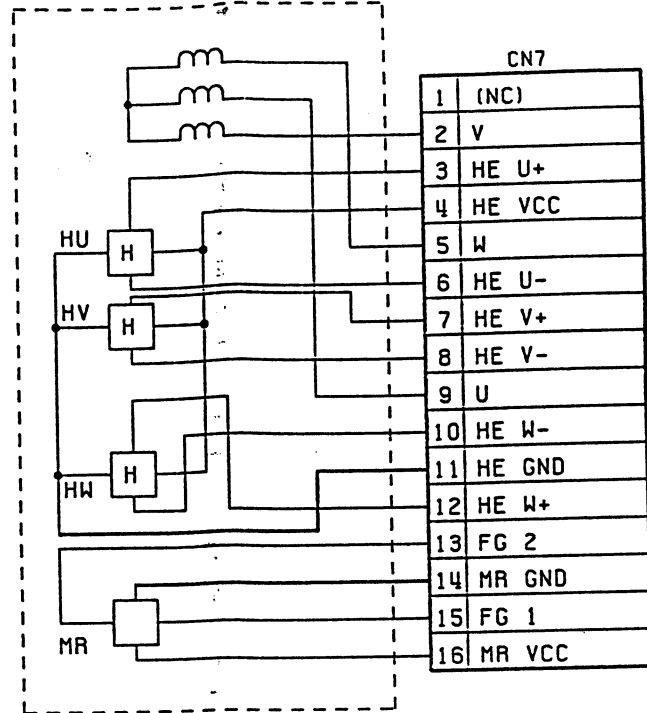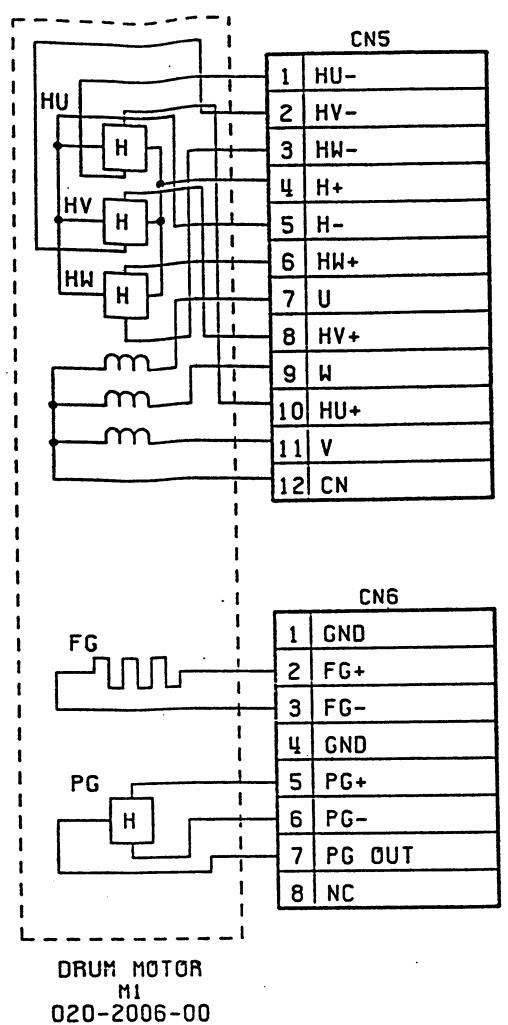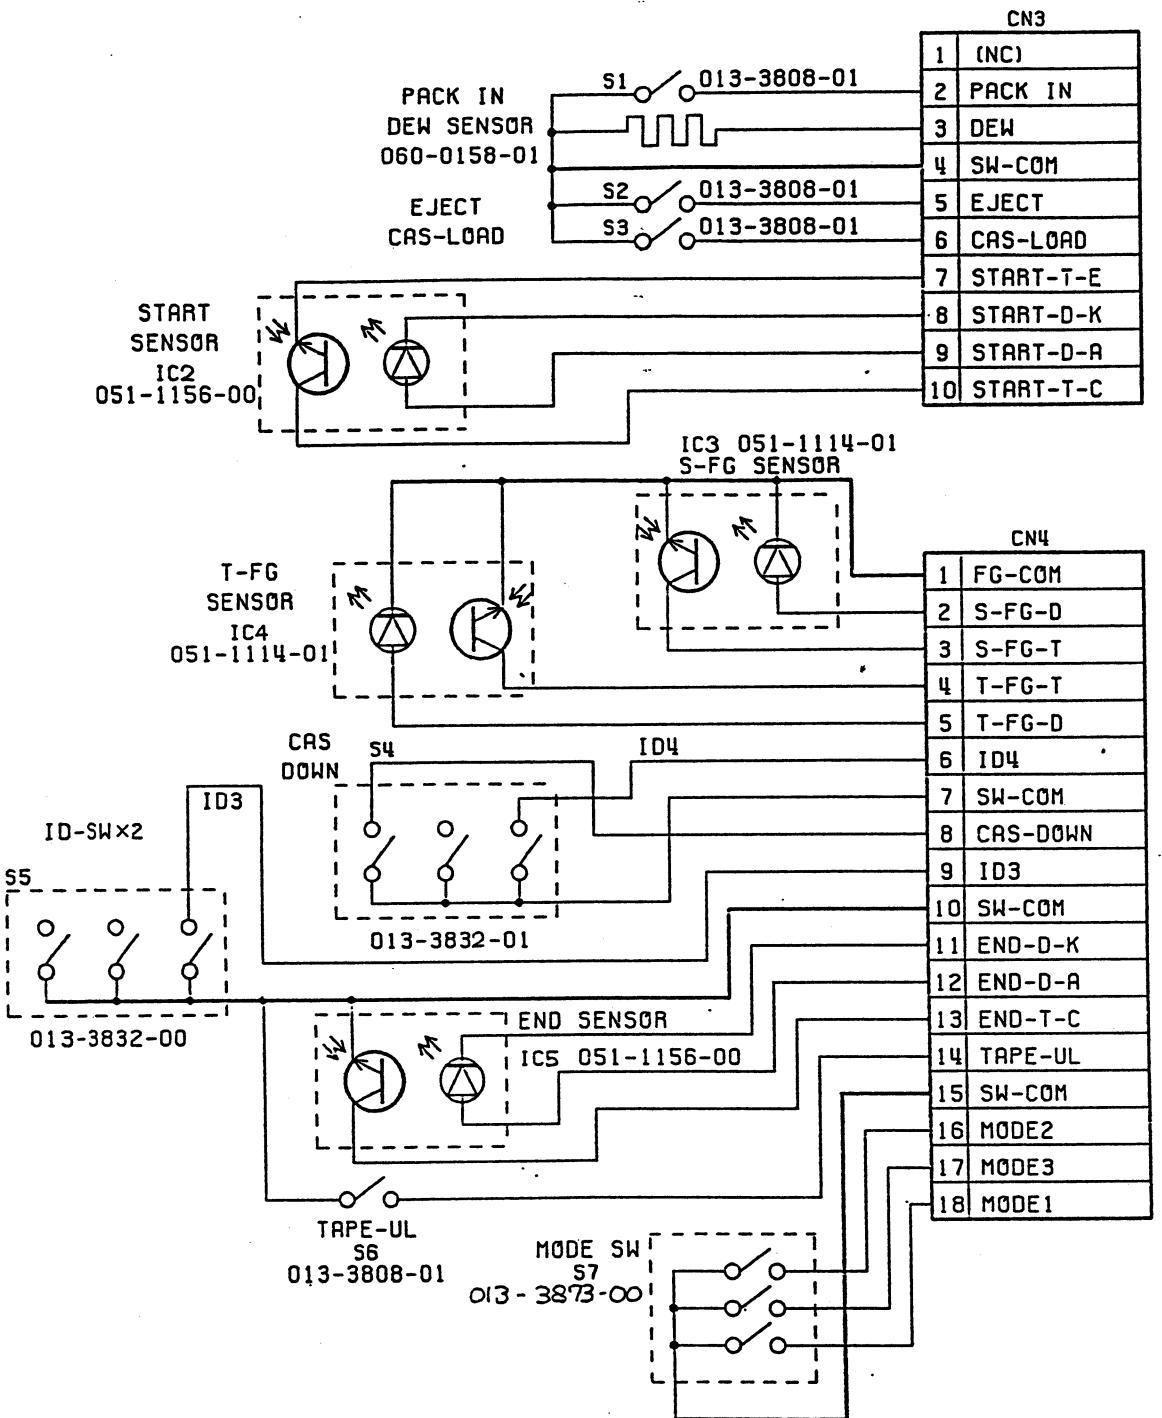

CAPSTAN MOTOR  
M2  
020-2007-00

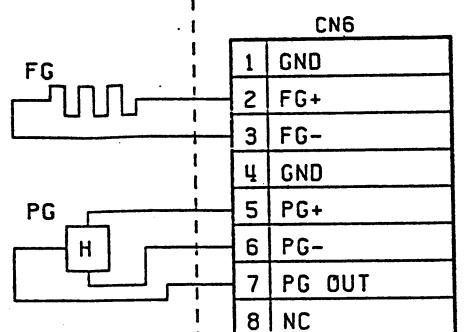

DRUM MOTOR  
M1  
020-2006-00

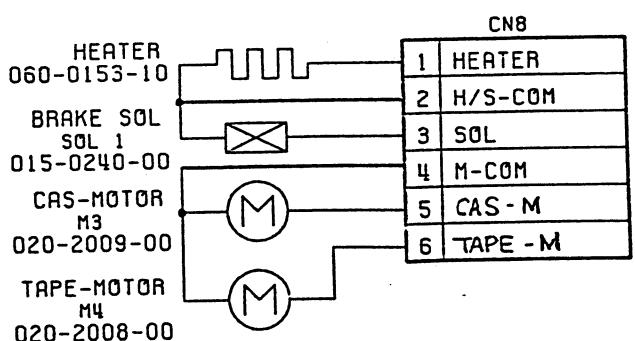

SYN	DATE	DSGN	REVISION	APPR	DWG	CAD	CAL WT (g)	MATERIAL	NAME	
					DSGN	881205	881209	ACT WT (g)	FINISH	DWG NO.
MODEL	DATE	APPR	APPB	APPB	CHK	881209	881209	SCALE	FREE	929-2010-00-CA-2/2
929-2010-00	88.12.12					881209	881209	UNIT MM	TOL	Clarion Co., Ltd.

S395A2